


---

# INSTALLATION INSTRUCTIONS

---

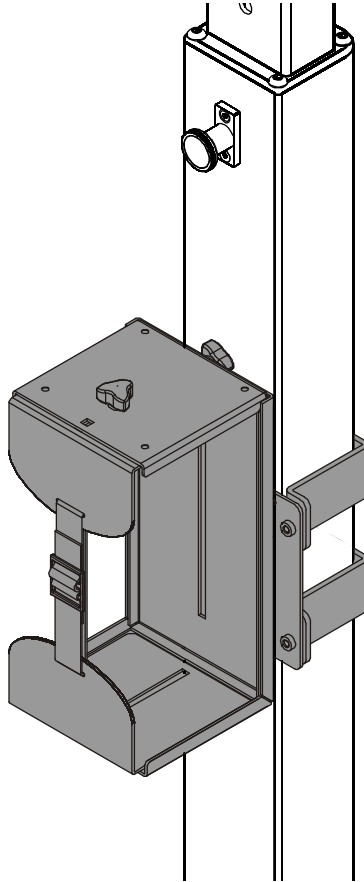

---

## Universal CPU Holder Carts and Stands

---

## DISCLAIMER

Milestone AV Technologies and its affiliated corporations and subsidiaries (collectively "Milestone"), intend to make this manual accurate and complete. However, Milestone makes no claim that the information contained herein covers all details, conditions or variations, nor does it provide for every possible contingency in connection with the installation or use of this product. The information contained in this document is subject to change without notice or obligation of any kind. Milestone makes no representation of warranty, expressed or implied, regarding the information contained herein. Milestone assumes no responsibility for accuracy, completeness or sufficiency of the information contained in this document.

Chief® and Centris® are registered trademarks of Milestone AV Technologies. All rights reserved.

## ! IMPORTANT WARNINGS AND CAUTIONS!

**! WARNING:** A WARNING alerts you to the possibility of serious injury or death if you do not follow the instructions.


**! CAUTION:** A CAUTION alerts you to the possibility of damage or destruction of equipment if you do not follow the corresponding instructions.

**! WARNING:** Failure to read, thoroughly understand, and follow all instructions can result in serious personal injury, damage to equipment, or voiding of factory warranty! It is the installer's responsibility to make sure all components are properly assembled and installed using the instructions provided.







**! WARNING:** Failure to provide adequate structural strength for this component can result in serious personal injury or damage to equipment! It is the installer's responsibility to make sure the structure to which this component is attached can support five times the combined weight of all equipment. The wall to which the mount is being attached may have a maximum drywall thickness of 5/8" (1.6cm). Do not install drywall anchors into the seam between drywall pieces.

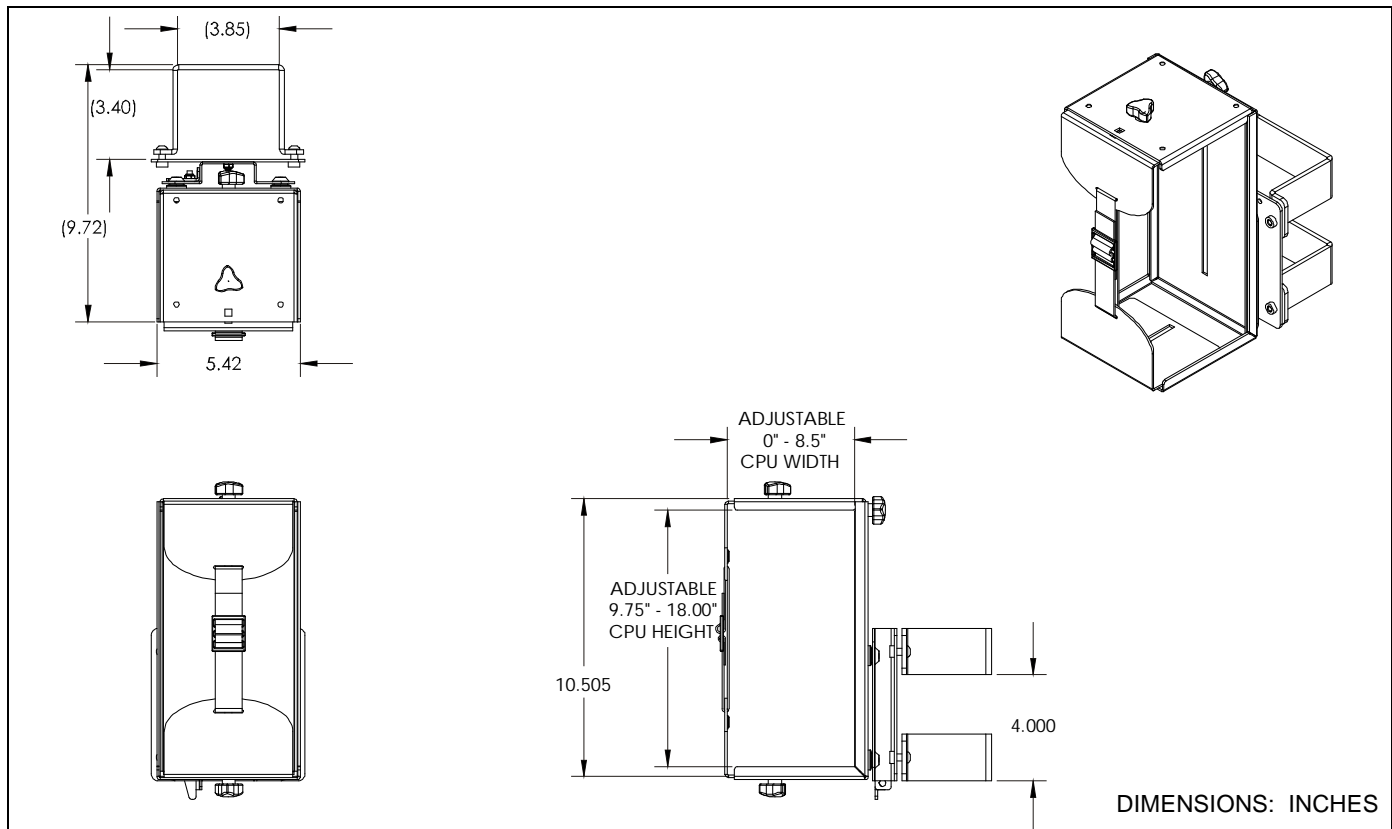**! WARNING:** Exceeding the weight capacity can result in serious personal injury or damage to equipment! It is the installer's responsibility to make sure the combined weight of all components attached to the QMP1C does not exceed 40 lbs (18.1 kg). Use with products heavier than the maximum weight indicated may result in collapse of the mount and its accessories causing possible injury.


## DIMENSIONS

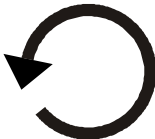


**LEGEND**

	<b>Tighten Fastener</b> Apretar elemento de fijación Befestigungsteil festziehen Apertar fixador Serrare il fissaggio Bevestiging vastdraaien Serrez les fixations		<b>Phillips Screwdriver</b> Destornillador Phillips Kreuzschlitzschraubendreher Chave de fendas Phillips Cacciavite a stella Kruiskopschroevendraaier Tournevis à pointe cruciforme
	<b>Loosen Fastener</b> Aflojar elemento de fijación Befestigungsteil lösen Desapertar fixador Allentare il fissaggio Bevestiging losdraaien Desserrez les fixations		<b>Hex-Head Wrench</b> Llave de cabeza hexagonal Sechskantschlüssel Chave de cabeça sextavada Chiave esagonale Zeskantsleutel Clé à tête hexagonale
	<b>Open-Ended Wrench</b> Llave de boca Gabelschlüssel Chave de bocas Chiave a punte aperte Steeksleutel Clé à fourche		<b>By Hand</b> A mano Von Hand Com a mão A mano Met de hand À la main

TOOLS REQUIRED FOR INSTALLATION

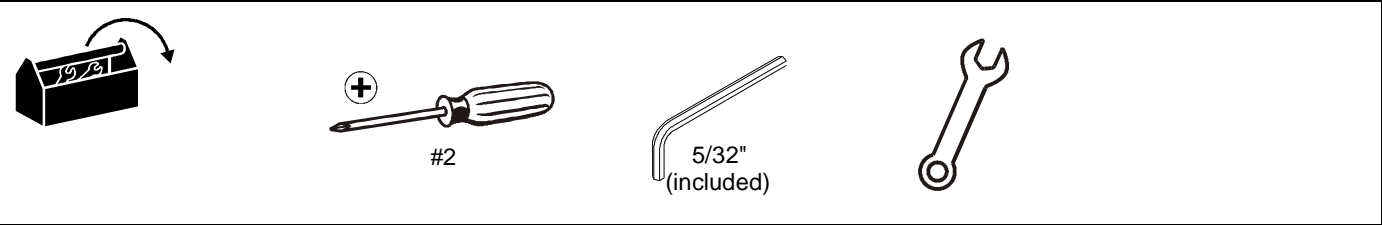


PARTS

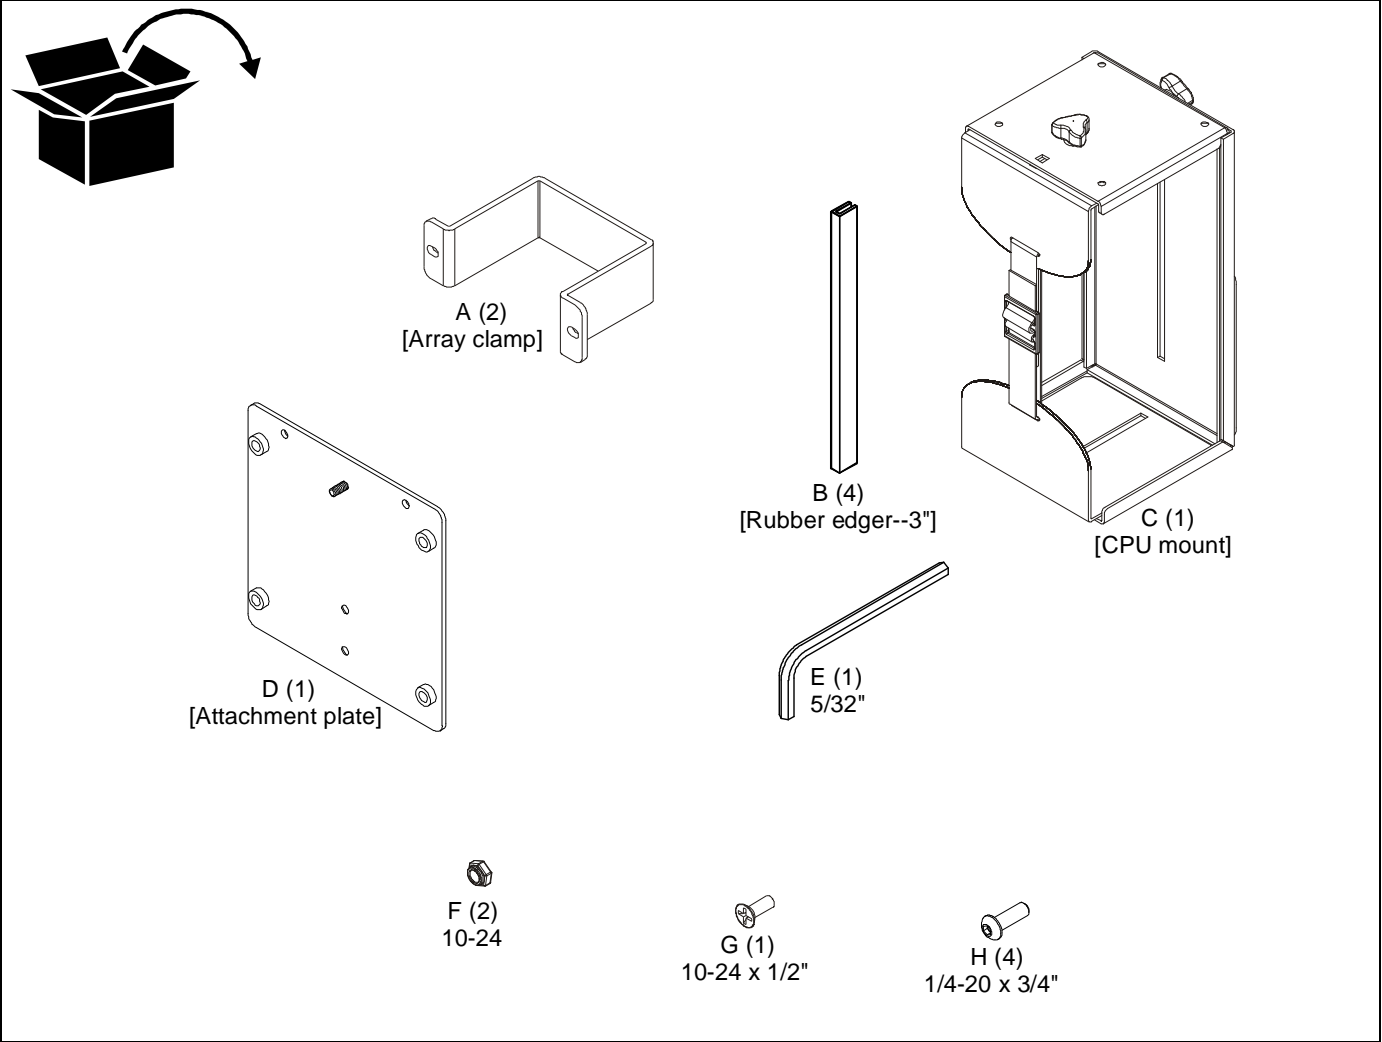

## ASSEMBLY


The QMP1C is designed to be attached to the Chief QMP1FB fixed music stand or the QMB1MB mobile music cart.

1. Attach column to cart/stand base (not included) following instructions included with cart/stand.
2. Place four strips of protective rubber edging (B) over the sharp edges located on the top and bottom of the CPU mount (C). (See Figure 1)

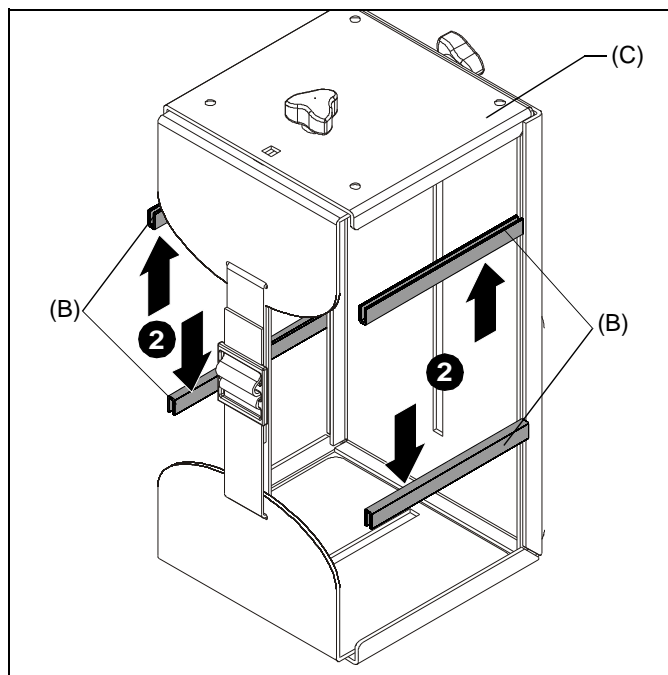


**Figure 1**

3. Release bracket from CPU mount (C) by moving the flag to the open position. (See Figure 2)
4. Remove bracket from mounting buttons on back of CPU mount (C). (See Figure 2)

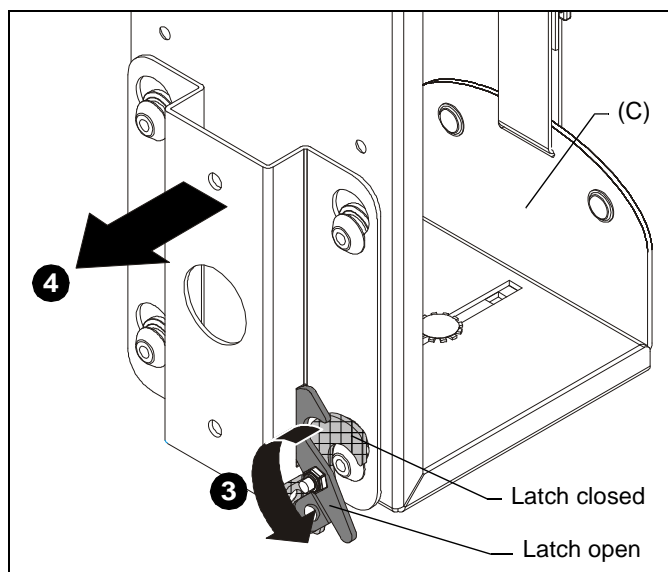


**Figure 2**

5. Fasten attachment plate (D) to bracket using one 10-24 x 1/2" Phillips undercut machine screw (G) and two 10-24 nylon locknuts (F). (See Figure 3)

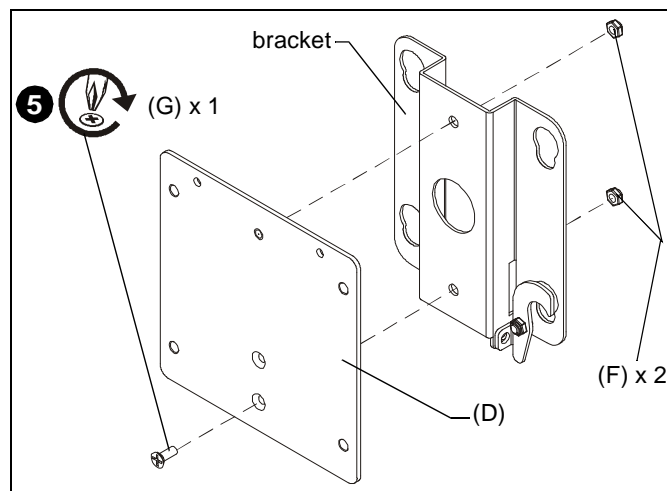

**Figure 3**

6. Fasten attachment plate with bracket around cart or stand column using two array clamps (A) and four 1/4-20 x 3/4" button head cap screws (H). (See Figure 4)

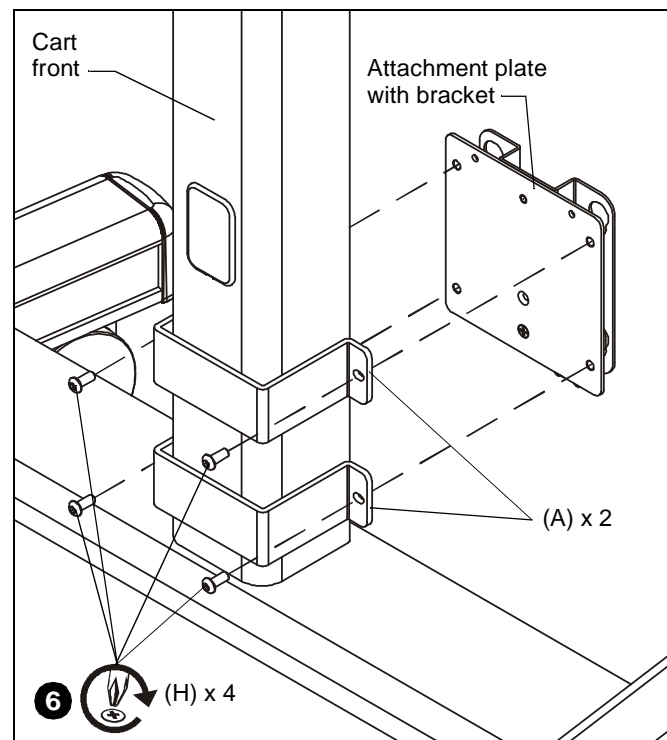

**Figure 4**

## Adding CPU

1. Loosen adjustment knob at the back of the CPU mount (C).
2. Adjust height of mount to a height greater than the height of the CPU to be installed. Loosen strap at the front of the CPU mount if necessary. (See Figure 5)

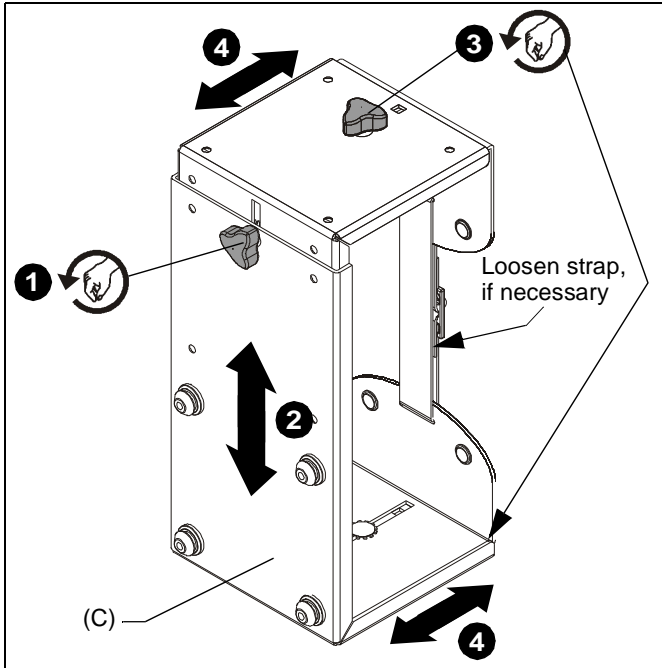


Figure 5

3. Loosen adjustment knobs on top and bottom of the CPU mount. (See Figure 6)
4. Slide flanges to allow insertion of the CPU. (See Figure 5)

**NOTE:** Top and bottom knobs may be removed and inserted into the front square holes to allow for large CPU installation. (See Figure 5)

**NOTE:** Flanges may be reversed to allow for installation of narrow CPU's. If reversing flanges, also remove and reinstall strap so that buckle is facing out for easy adjustment.

5. Set CPU within CPU mount (C). (See Figure 6)
6. Slide flanges to compress CPU mount (C) around CPU until CPU is tightly secured within mount. (See Figure 6)
7. Use adjustment knobs to tighten CPU mount flanges into place.
8. Tighten strap as required.

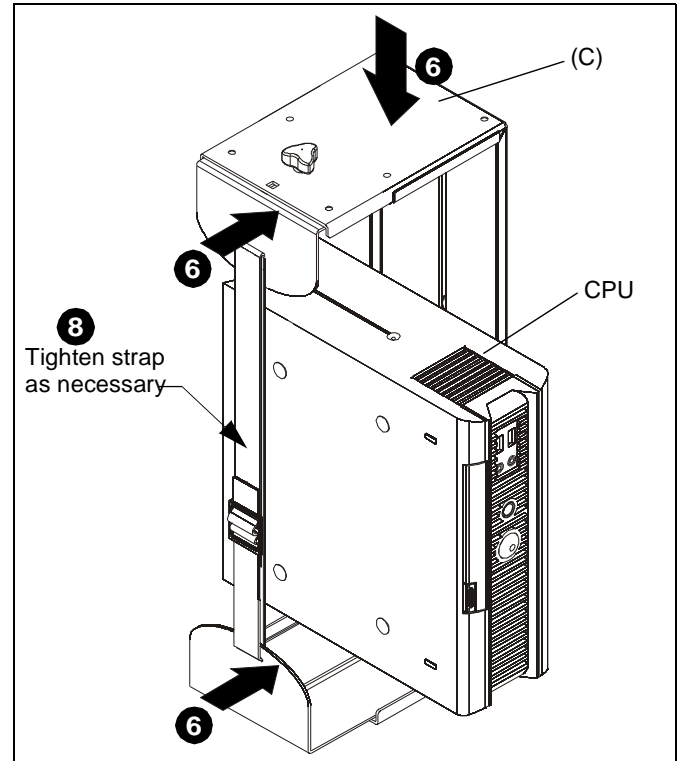


Figure 6

## Completing Installation

1. Ensure flag on attachment plate with bracket is in the open position. (See Figure 7)
2. Attach CPU mount (C) to cart/stand by inserting four mounting buttons on the CPU mount into the four large mounting holes on the bracket. (See Figure 7)
3. Lower CPU mount (C) mounting buttons into the bottom of the teardrop mounting holes.
4. Move flag to closed position to secure mount to bracket and cart/stand. (See Figure 7)

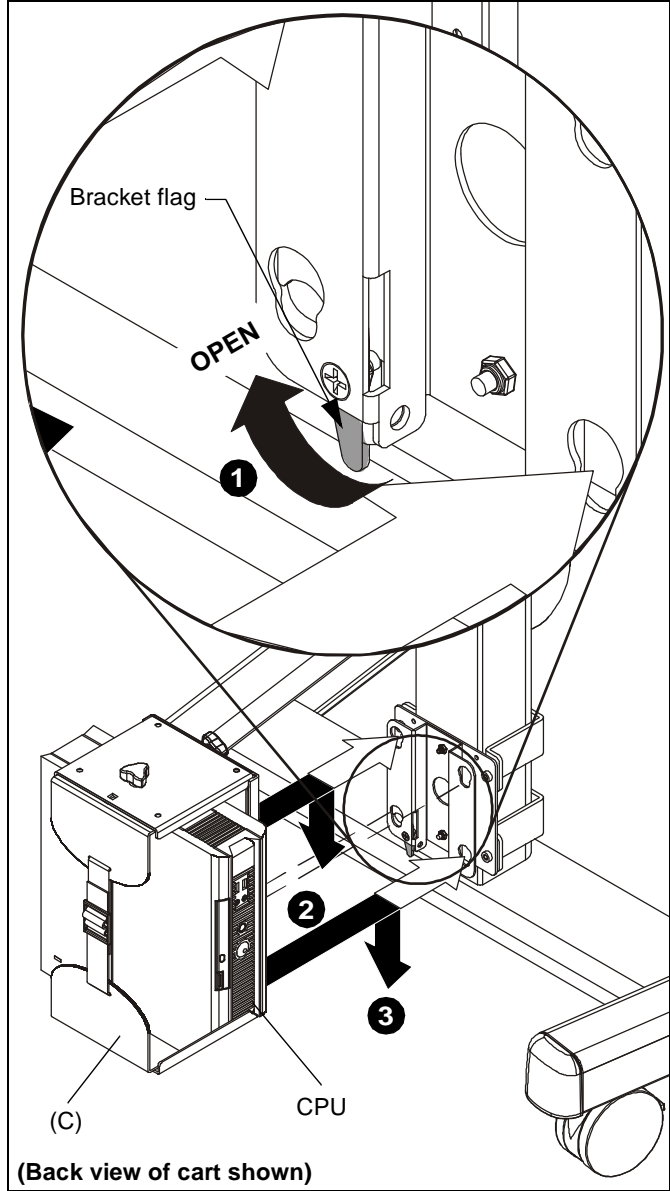


Figure 7



Chief Manufacturing, a products division  
of Milestone AV Technologies

8832-002061 Rev00  
©2011 Milestone AV Technologies, a  
Duchossois Group Company  
[www.chiefmfg.com](http://www.chiefmfg.com)  
05/11

<b>USA/International</b>	<b>A</b> 8401 Eagle Creek Parkway, Savage, MN 55378 <b>P</b> 800.582.6480 / 952.894.6280 <b>F</b> 877.894.6918 / 952.894.6918
<b>Europe</b>	<b>A</b> Fellenoord 130 5611 ZB EINDHOVEN, The Netherlands <b>P</b> +31 (0)40 2668620 <b>F</b> +31 (0)40 2668615
<b>Asia Pacific</b>	<b>A</b> Office No. 1 on 12/F, Shatin Galleria 18-24 Shan Mei Street Fotan, Shatin, Hong Kong <b>P</b> 852 2145 4099 <b>F</b> 852 2145 4477

