

# SCREEN CONFIGURATION CHART

See chart below to determine the fasteners to use with your screen. If your screen has a note in the far right column, then reference it on the last page.

Manufacturer	ScreenSize	Model	ScrewSize	ScrewLength	Washer	Spacer	Notes
Acer	32"	AT3220A	M6	12		none	
Akai	26"	LCT2662	M4	12	washer	none	
Akai	27"	LCT2715	M4	12	washer	none	
Akai	27"	LCT2716	M4	12	washer	none	
Akai	27"	LCT2721AD	M6	40			
Akai	27"	LCT2765TD	M6	40			
Akai	27"	LCT2785	M6	40			
Akai	32"	LCT3201AD	M5	55			1
Akai	32"	LCT3201TD	M5	55			1
Akai	32"	LCT3226	M5	55			1
Akai	32"	LCT3285	M5	55			1
Akai	37"	LCT3701AD	M5	55			1
Akai	37"	LCT3782TD	M5	55			1
Akai	37"	LCT37Z6TA	M5	55			1
Akai	42"	LCT42Z6TM	M6	12		none	
Akai	42"	PDP4216M	M6	12		none	
Akai	42"	PDP4225	M6	12		none	
Akira	42"	SV 4201	misc	misc	misc	misc	90
Akira	42"	SV 4201H	misc	misc	misc	misc	90
Aomni	32"	AL321A7	M6	12	multi	none	
Aomni	32"	HL-3210V	M5	12	washer	none	
Aomni	32"	HL-3210VS	M5	12	none	none	
Apex	27"	AVL-2776	M4	12	washer	none	6
Apex	30"	AVL-3076	M6	12		none	
Audiovox	26"	FPE2607	M4	12	washer	none	6
Audiovox	30"	FPE3000	M4	12	washer	none	
Batesias	27"	LM2710	M4	12	washer	none	6
Batesias	30"	LM3010	M4	12	washer	none	6
Ben Q	42"	PDP7859	misc	misc	misc	misc	90
BenQ	30"	DV3070	M4	12	washer	none	
BenQ	30"	DV3080	M4	12	washer	none	
Broksonic	32"	CCVG-3276	M4	12	washer	none	6
Chi Lin	32"	ST-HB32A4X	M6	12		none	
CHIMEI	26"	DTC-26BV	M4	12	washer	none	6
CHIMEI	32"	DTC-32MK	M6	12		none	
CHIMEI	37"	DTC-37MK	M6	12		none	
Clarity Visual	40"	SN-4025WX (Bobcat I)	1/4-20	1/2"	none	none	20
Clarity Visual	40"	SN-4035WX (Bobcat II)	1/4-20	1/2"	none	none	20
Clarity Visual	40"	SN-4045WX (Bobcat X)	1/4-20	1/2"	none	none	20
CTL	27"	Nexus NX2700	M4	12	washer	none	15
CTX	23"	H2300	M4	12	washer	none	6
Curtis Mathes	26"	CMMX26	M4	12	washer	none	6
Curtis Mathes	32"	CMMX32	M4	12	washer	none	6
Daewoo	42"	DSP-4210	misc	misc	misc	misc	90
Dell	23"	W2300	M4	12	washer	none	6
Dell	26"	W2600	M4	12	washer	none	6
Dell	30"	3007WFP	M4	12	washer	none	6
Dell	30"	W3000	M4	12	washer	none	6
Dell	32"	W3201C	M6	12		none	
Dell	37"	W3707C	M6	12		none	
Dynex	37"	DX-LCD37	M6	12		none	
Electrograph	32"	DTS32LTD	M5	12	washer	none	
Element	32"	FLX-3202	M6	12		none	
Element	32"	FLX-3210	M6	12		none	
Element	37"	FLX-3710	M6	12		none	
Elo	32"	3220L	M6	12		none	
Emerson	32"	LC320EM8	M4	12	washer	none	6
Emprex	32"	HD-3201	M4	12	washer	none	6
Envision	32"	L32W698	M6	12		none	
Envision	42"	L42W761	M6	12		none	
Gateway	23"	GTW-L23M102	M4	12	washer	none	6
Gateway	26"	GTW-L26M103	M4	12	washer	none	6
Gateway	30"	GTW-L30M103	M4	12	washer	none	6
H&B	32"	HL-3200V-N	M5	12	washer	none	
H&B	37"	HL-3700V-N	M5	12	washer	none	
Haier	32"	HLH326BB	M6	12		none	

If your screen model is not listed below please check [www.peerlessmounts.com](http://www.peerlessmounts.com) for the latest version of this chart.

See chart below to determine the fasteners to use with your screen. If your screen has a note in the far right column, then reference it on the last page.

Manufacturer	ScreenSize	Model	ScrewSize	ScrewLength	Washer	Spacer	Notes
Hannspree	32"	JT01-32U1-000G	M6	12		none	
Harsper	32"	HL-3210	M5	12	washer	none	
HCI	26"	HC-TV26LC	M4	12	washer	none	6
HCI	32"	HC-TV32LC	M4	12	washer	none	6
Hewlett Packard	23"	f2304	M4	12	washer	none	6
Hewlett Packard	30"	LC3040N	M4	12	washer	none	6
Hewlett Packard	32"	HP-LC3200N	M4	12	washer	none	6
Hewlett Packard	32"	LC3272N	M6	12		none	
Hewlett Packard	37"	HP-LC3700N	M4	12	washer	none	6
Hewlett Packard	37"	LC3772N	M6	12		none	
Hewlett Packard	42"	LC4276N	M6	12		none	
Hewlett Packard	42"	SL4278N	M4	12	washer	none	6
Hitachi	32"	32HDL51	M6	12		none	17
Hitachi	32"	32HDT20	M6	12		none	5
Hitachi	32"	32HDT50	M6	12		none	5
Hitachi	32"	32HDT55	M6	12		none	5
Hitachi	32"	32HDT60	M6	12		none	5
Hitachi	32"	32PD5000	M6	12		none	5
Hitachi	37"	CMP307SX	M6	12		none	
Hitachi	37"	CMP307U	M6	12		none	
Hitachi	37"	CMP307XU	M6	12		none	
Hitachi	42"	42HDM70	M6	12		none	
Hitachi	42"	CMP402H DU	M6	12		none	
Hitachi	42"	CMP4120H DU	M6	12		none	
Hitachi	42"	CMP4121H DU,	M6	12		none	
Hitachi	42"	CMP4211,	M6	12		none	
Hitachi	42"	CMP4211U,	M6	12		none	
Hitachi	42"	CMP4212,	M6	12		none	
Hitachi	42"	CMP4212U,	M6	12		none	
Hy-Tek	32"	Tek Panel 32	M4	12	washer	none	6
Hyundai	26"	HQL260WR	M4	12	washer	none	6
Hyundai	32"	HQL320WR	M4	12	washer	none	6
Idex	42"	PDM4276PC	misc	misc	misc	misc	90
ILO	27"	LCT27HA36	M6	40			
ILO	32"	3200	M6	12		none	
ILO	32"	32HA36	M6	12		none	
Image Systems	24"	FP2400MAX	M4	12	washer	none	6
Infocus	30"	TD30	M4	12	washer	none	4
Jensen	27"	JE2707	M4	12	washer	none	6
Jensen	32"	JE3207	M4	12	washer	none	6
Jensen	32"	JE3269	M4	12	washer	none	6
JVC	23"	LT23X475	M4	12	washer	none	6
JVC	26"	LT26WX84	M5	12	washer	none	
JVC	26"	LT26X506	M5	12	washer	none	
JVC	26"	LT26X575	M5	12	washer	none	
JVC	32"	LT32WX84	M5	12	washer	none	
JVC	32"	LT-32E478	M6	12		none	
JVC	32"	LT-32E488	M6	12		none	
JVC	32"	LT32X575	M5	12	washer	none	
JVC	32"	LT-32X667	M6	12		none	
JVC	37"	LT-37E478	M6	12		none	
JVC	37"	LT37X776	M5	12	washer	none	
JVC	40"	LT40FN97	M5	12	washer	none	
JVC	40"	LT40X776	M5	12	washer	none	
JVC	40"	GM-H40L2GU	M6	12		none	
JVC	42"	LT-42E488	M6	12		none	
JVC	42"	LT-42X688	M6	12		none	
JVC	46"	LT-46FH97	M6	12		none	
JVC	46"	LT-46FN97	M6	12		none	
Kreisen	27"	KR-270T	M4	12	washer	none	19
Kreisen	30"	LT30FMP	M4	12	washer	none	
LG	23"	23LS7DC	M4	12	washer	none	6
LG	23"	23LX1R	M4	12	washer	none	6
LG	23"	23LX2R	M4	12	washer	none	6
LG	23"	23LXRV	M4	12	washer	none	6
LG	23"	L2320A	M4	12	washer	none	6

If your screen model is not listed below please check [www.peerlessmounts.com](http://www.peerlessmounts.com) for the latest version of this chart.

See chart below to determine the fasteners to use with your screen. If your screen has a note in the far right column, then reference it on the last page.

Manufacturer	ScreenSize	Model	ScrewSize	ScrewLength	Washer	Spacer	Notes
LG	23"	L2323T	M4	12	washer	none	6
LG	23"	RU-23LZ21	M4	12	washer	none	6
LG	23"	RU-23LZ50C	M4	12	washer	none	6
LG	23"	Z23L6R	M4	12	washer	none	6
LG	26"	26LC7DC/S	M4	12	washer	none	6
LG	26"	26LH1DC1	M6	12		none	
LG	26"	26LH1DC3/4	M6	12		none	
LG	26"	26LG30	M4	12	washer	none	6
LG	26"	26LG40	M4	12	washer	none	6
LG	26"	26LX1D	M4	12	washer	none	6
LG	26"	26LX2D	M4	12	washer	none	6
LG	26"	RM-26LZ30	M4	12	washer	none	6
LG	26"	RU-26LZ30	M4	12	washer	none	6
LG	26"	Z26LZ5R	M4	12	washer	none	6
LG	27"	RU-26LZ50	M4	12	washer	none	6
LG	27"	RU-27LZ50C	M4	12	washer	none	6
LG	30"	DU-30LZ30	M4	12	washer	none	6
LG	30"	L3000A	M5	12	washer	none	
LG	30"	L3000H	M4	12	washer	none	6
LG	30"	L3020T	M4	12	washer	none	6
LG	30"	RL-30LZ50	M4	12	washer	none	6
LG	30"	RZ-30LZ50	M4	12	washer	none	6
LG	30"	RU-30LZ50C	M4	12	washer	none	6
LG	32"	32LH1DC	M6	12		none	
LG	32"	32LG30	M4	12	washer	none	6
LG	32"	32LG40	M4	12	washer	none	6
LG	32"	32LG60	M4	12	washer	none	6
LG	32"	32LG70	M4	12	washer	none	6
LG	32"	32LX1D	M4	12	washer	none	6
LG	32"	32LX2D	M4	12	washer	none	6
LG	32"	32LX2R	M4	12	washer	none	6
LG	32"	L3200A	M6	12		none	11
LG	32"	L3200AK	M6	12		none	11
LG	32"	L3200T	M4	8	washer	none	1
LG	32"	L3200TC	M4	8	washer	none	1
LG	32"	L3200TK	M4	8	washer	none	1
LG	32"	M3201C	M4	8	washer	none	1
LG	32"	RU-32LZ30C	M4	12	washer	none	6
LG	32"	RU-32LZ50C	M4	12	washer	none	6
LG	37"	37LG30	M6	12		none	11
LG	37"	37LG50	M6	12		none	11
LG	37"	37LG60	M6	12		none	11
LG	42"	42LG30	M6	12		none	11
LG	42"	42LG50	M6	12		none	11
LG	42"	42LG60	M6	12		none	11
LG	42"	42LG70	M6	12		none	11
Luxeon	30"	Vivitek LT30PL1	M4	25	washer	6.5mm ID	9
MAG INNOVISION	32"	MA32EF1AC	M6	12		none	
Magnavox	26"	26MF605W/17	M4	12	washer	none	6
Magnavox	32"	32MF605W/17	M4	12	washer	none	6
Magnavox	37"	37MF321D/37	M6	12		none	
Magnavox	42"	42MF337B	M6	12		none	
Magnavox	42"	42MF437B/37	M6	12		none	
Magnavox	42"	42MF531D	M6	12		none	
Marantz	42"	PD-4298HD	M6	12		none	
MAXENT	26"	MX-26X3	M4	25	washer	6.5mm ID	
MAXENT	27"	MX-27X1	M4	12	washer	none	6
MAXENT	30"	MX-30X1	M4	12	washer	none	6
MAXENT	32"	MX-32X3	M4	12	washer	none	6
Maxx Products	30"	MAXX 3000	M6	25		6.5mm ID	
Maxx Products	32"	3200	M6	25		6.5mm ID	
Maxx Products	32"	TL3200	M4	12	washer	none	
Maxx Products	42"	4250	misc	misc	misc	misc	90
Maxx Products	42"	4250T	misc	misc	misc	misc	90
Maxx Products	46"	4600	misc	misc	misc	misc	90
Memorex	32"	MLT3221	M6	12		none	

If your screen model is not listed below please check [www.peerlessmounts.com](http://www.peerlessmounts.com) for the latest version of this chart.

See chart below to determine the fasteners to use with your screen. If your screen has a note in the far right column, then reference it on the last page.

Manufacturer	ScreenSize	Model	ScrewSize	ScrewLength	Washer	Spacer	Notes
Mintek	26"	DTV-260	M4	12	washer	none	6
Mintek	26"	DTV-263	M4	12	washer	none	6
Mintek	26"	DTV-265-D	M4	12	washer	none	6
Mitsubishi	30"	LT-3020	M4	12	washer	none	6
Mitsubishi	30"	LT-3040	M4	12	washer	none	6
Mitsubishi	30"	LT-3050	M4	12	washer	none	6
Mitsubishi	30"	MLM300	M4	12	washer	none	6
Mitsubishi	32"	LDT321V	M6	12		none	11
Mitsubishi	32"	MDT321S	M4	12	washer	none	6
Mitsubishi	37"	LDT371V	M6	12		none	11
Mitsubishi	37"	LT37132	M6	12		none	
Mitsubishi	40"	LT-40133	M6	12		none	11
Mitsubishi	40"	LT-40134	M6	12		none	11
Mitsubishi	40"	MLM400	M6	12		none	11
Mitsubishi	42"	LDT421V	M6	12		none	
Mitsubishi	42"	PD4225S	M5	25	washer	5.6mm ID	
Mitsubishi	46"	LT-46133	M6	12		none	11
Mitsubishi	46"	LT-46134	M6	12		none	11
Mitsubishi	46"	LT-46144	M6	12		none	11
Mitsubishi	46"	LT-46233	M6	12		none	11
Mitsubishi	46"	LT-46244	M6	12		none	11
Monovision	32"	PD3231	M6	25		6.5mm ID	
NEC	23"	MultiSync™ LCD2335WXM	M4	12	washer	none	6
NEC	30"	LCD3000	M4	12	washer	none	6
NEC	32"	LCD3210-EU	M6	12		none	11
NEC	32"	PV32-AVT	M6	12		none	11
NEC	37"	LCD3735WXM	M6	12		none	11
NEC	40"	LCD4000	M6	12		none	
NEC	40"	LCD4010	M6	12		none	11
NEC	40"	LCD4020-BK-AV	M6	12		none	11
NEC	40"	LCD4020-BK-IT	M6	12		none	11
NEC	40"	LCD4020-2-AV	M6	12		none	11
NEC	40"	LCD4020-2-IT	M6	12		none	11
NEC	40"	M40	M6	12		none	11
NEC	40"	PV40-AVT	M6	12		none	11
NEC	46"	LCD4610	M6	12		none	11
NEC	46"	LCD4620-BK-AV	M6	12		none	11
NEC	46"	LCD4620-BK-IT	M6	12		none	11
NEC	46"	LCD4620-2-AV	M6	12		none	11
NEC	46"	LCD4620-2-IT	M6	12		none	11
NEC	46"	M46	M6	12		none	11
Net TV	30"	LCTV-30W	M6	25		6.5mm ID	
Nexus	32"	NX3201	M4	12	washer	none	6
Norcent	27"	LT2720	M4	12	washer	none	6
Norcent	27"	LT2722	M4	12	washer	none	6
Norcent	42"	PT-4246HD	M6	12		none	11
NuVision	26"	NVX26HDU	M4	12	washer	none	6
NuVision	32"	NVX32HDU	M4	12	washer	none	6
NuVision	37"	NVX37HDU	M6	12		none	11
Olevia/Syntax	26"	226V	M4	12	washer	none	6
Olevia/Syntax	27"	227V	M4	12	washer	none	6
Olevia/Syntax	27"	427V	M4	12	washer	none	6
Olevia/Syntax	32"	232V	M4	12	washer	none	6
Olevia/Syntax	32"	432V	M4	12	washer	none	6
Olevia/Syntax	37"	237V	M4	12	washer	none	6
Olevia/Syntax	37"	437V	M4	12	washer	none	6
Olevia/Syntax	42"	242V	M6	12		none	
Orion	32"	32RTC	M4	12	washer	none	6
Ovideon	27"	LC2700w	M4	12	washer	none	6
Ovideon	27"	LCS2730	M4	12	washer	none	6
Ovideon	27"	LCS2740	M4	12	washer	none	6
Ovideon	30"	LC3000W	M4	12	washer	none	6
Ovideon	32"	LC3210W	M4	12	washer	none	6
Ovideon	32"	LCS3230	M4	12	washer	none	6
Ovideon	32"	LCS3240	M4	12	washer	none	6
Ovideon	37"	LCS3730	M4	12	washer	none	6

If your screen model is not listed below please check [www.peerlessmounts.com](http://www.peerlessmounts.com) for the latest version of this chart.

See chart below to determine the fasteners to use with your screen. If your screen has a note in the far right column, then reference it on the last page.

Manufacturer	ScreenSize	Model	ScrewSize	ScrewLength	Washer	Spacer	Notes
Panasonic	23"	TC-23LX50	M4	12	washer	none	6
Panasonic	26"	TC-26LX70	M4	12	washer	none	6
Panasonic	32"	TC-32LE60	M4	12	washer	none	6
Panasonic	32"	TC32LH1	M4	12	washer	none	5
Panasonic	32"	TC-32LX50	M4	35	washer	19.1mm tall	24
Panasonic	32"	TC-32LX70	M4	12	washer	none	6
Panasonic	32"	TH-32LHD7U	M4	12	washer	none	
Panasonic	32"	TH-32LHD7UK	M4	12	washer	none	
PDi	32"	P32LCDC	M6	12		none	
PDi	32"	P32LCLD	M6	12		none	
Philips	23"	23FW5220	M4	12	washer	none	6
Philips	23"	23FW995/997	M4	12	washer	none	6
Philips	23"	23PF8946	M4	12	washer	none	6
Philips	23"	23PF8946A	M4	12	washer	none	6
Philips	23"	23PF9945	M4	12	washer	none	6
Philips	23"	23PF9966	M4	12	washer	none	6
Philips	26"	26FW5220/37	M4	12	washer	none	6
Philips	26"	26HF5334D/27	M4	12	washer	none	6
Philips	26"	26HF5545D/27	M4	12	washer	none	6
Philips	26"	26HF7945D/27	M4	12	washer	none	6
Philips	26"	26HF7955H/27	M4	12	washer	none	6
Philips	26"	26MF605W/17	M4	12	washer	none	6
Philips	26"	26PF9966	M4	12	washer	none	6
Philips	26"	26PFL5302D	M4	12	washer	none	6
Philips	26"	26PFL5322D	M4	12	washer	none	6
Philips	30"	300WN5VB	M4	12	washer	none	6
Philips	30"	30FW5220/37	M5	25	washer	6.5mm ID	
Philips	30"	30FW9915/37	M5	25	washer	6.5mm ID	
Philips	30"	30FW9946/37	M5	25	washer	6.5mm ID	
Philips	30"	30FW995	M5	25	washer	6.5mm ID	
Philips	30"	30FW9955	M5	25	washer	6.5mm ID	
Philips	30"	30FW997	M5	25	washer	6.5mm ID	
Philips	30"	30FW9975	M5	25	washer	6.5mm ID	
Philips	30"	30MW9002/37	M5	25	washer	6.5mm ID	
Philips	30"	30PF9946/37	M5	25	washer	6.5mm ID	
Philips	30"	30PF9946D/37	M5	25	washer	6.5mm ID	
Philips	30"	30PF9975	M5	25	washer	6.5mm ID	
Philips	32"	BDL3221V	M6	12		none	11
Philips	32"	32FD9954	M5	25	washer	6.5mm ID	
Philips	32"	32FW997	M5	25	washer	6.5mm ID	
Philips	32"	32HF5335D/27	M4	12	washer	none	6
Philips	32"	32HF5545D/27	M4	12	washer	none	6
Philips	32"	32HF7543	M4	12	washer	none	6
Philips	32"	32HF7945D/27	M4	12	washer	none	6
Philips	32"	32HF7955H/27	M4	12	washer	none	6
Philips	32"	32HF7965D/27	M4	12	washer	none	6
Philips	32"	32MF605W/17	M4	12	washer	none	6
Philips	32"	32PF4320	M4	12	washer	none	6
Philips	32"	32PF5320	M4	12	washer	none	6
Philips	32"	32PF5321D	M4	12	washer	none	6
Philips	32"	32PF7320A	M4	12	washer	none	6
Philips	32"	32PF7421D	M4	12	washer	none	6
Philips	32"	32PF9630A	M4	12	washer	none	6
Philips	37"	37FD9944	M5	25	washer	6.5mm ID	
Philips	37"	37FD9954/17	M5	25	washer	6.5mm ID	
Philips	37"	37PF9965	M5	25	washer	6.5mm ID	
Philips	37"	37PFL5322D	M6	12		none	
Philips	42"	42FD9934	M5	12	washer	none	
Philips	42"	42FD9935	M5	12	washer	none	
Philips	42"	42FD9944	M5	12	washer	none	
Philips	42"	42FD9954	M5	12	washer	none	
Philips	42"	42FW9030	M5	12	washer	none	
Philips	42"	42FW905	M5	12	washer	none	
Philips	42"	42FW997	M5	12	washer	none	
Philips	42"	42FW9975/37	M5	12	washer	none	
Philips	42"	42PF9936	M5	55	washer	mult	23

If your screen model is not listed below please check [www.peerlessmounts.com](http://www.peerlessmounts.com) for the latest version of this chart.

See chart below to determine the fasteners to use with your screen. If your screen has a note in the far right column, then reference it on the last page.

Manufacturer	ScreenSize	Model	ScrewSize	ScrewLength	Washer	Spacer	Notes
Photonics	24"	Thinscreen 24" 60260-0	M4	12	washer	none	6
PixelPro	27"	PX-27XP10	M4	12	washer	none	6
PixelPro	30"	PX-30XP10	M4	12	washer	none	6
Planar	37"	PD370	M6	12		none	
Planar Systems	40"	M40L	M6	12		none	
Planar	42"	PD420	M6	12		none	
Polaroid	26"	2611-TLXB	M6	12		none	
Polaroid	26"	FLM-2601	M4	12	washer	none	6
Polaroid	26"	FLM-2632	M6	12		none	
Polaroid	26"	FXM-2611H	M6	12		none	
Polaroid	32"	3211-TLXB	M6	12		none	
Polaroid	32"	FLM-323B	M6	12		none	
Polaroid	32"	FLM-3232	M6	12		none	
Polaroid	32"	FLM-3237	M6	12		none	
Polaroid	32"	FXM-3211H	M6	12		none	
Polaroid	32"	TDA-03211C	M6	12		none	
Polaroid	37"	FLM-3701	M4	12	washer	none	6
Polaroid	37"	FLM-3734B	M6	12		none	
Polaroid	37"	FXM-3711H	M6	12		none	
Polaroid	40"	4011-TLXB	M6	12		none	
Polaroid	40"	FXM-4011H	M6	12		none	
Polaroid	40"	TLA-04011C	M6	12		none	
Polaroid	46"	4641-TLXB	M6	12		none	
Polaroid	46"	TLA-04641C	M6	12		none	
PowerSpec	30"	LC30D	M4	12	washer	none	6
Pro View	32"	RX-326	M4	12	washer	none	6
Pro View	40"	PA-40JK1A	M6	12		none	
Protron	32"	PLTV32C	M4	12	washer	none	6
Protron	32"	PLTV3250	M4	12	washer	none	6
RCA	26"	J26L637	M4	25	washer	6.5mm ID	9
RCA	26"	L26W11	M4	12	washer	none	6
RCA	26"	L26WD12	M4	12	washer	none	6
RCA	26"	L26WD14	M4	12	washer	none	6
RCA	26"	L26WD26D	M4	12	washer	none	6
RCA	32"	J32L637	M6	12		none	
RCA	32"	L32WD12	M6	12		none	
RCA	32"	L32WD26D	M6	12		none	11
RCA	37"	L37WD12	M6	12		none	
Revolution HD	32"	S32LTD	M5	12	washer	none	
Sabre	32"	LCT320BKA	M4	12	washer	none	6
Sampo	32"	LME-32X8	M4	25	washer	6.5mm ID	
Sampo	37"	LME-37X8	M4	25	washer	6.5mm ID	
Samsung	23"	242MP	M4	12	washer	none	4
Samsung	23"	LN-R237W	M4	12	washer	none	4
Samsung	23"	LN-R238W	M4	12	washer	none	4
Samsung	23"	LN-T2353H	M4	12	washer	none	4
Samsung	24"	Syncmaster 204T	M4	12	washer	none	6
Samsung	24"	Syncmaster 240T	M4	12	washer	none	6
Samsung	24"	Syncmaster 243T	M4	12	washer	none	6
Samsung	26"	LT-P266W	M4	12	washer	none	6
Samsung	26"	LN26A330	M4	12	washer	none	6
Samsung	26"	LN26A450	M4	12	washer	none	6
Samsung	26"	LN-R2668W	M4	12	washer	none	6
Samsung	26"	LN-R267W	M4	12	washer	none	6
Samsung	26"	LN-R268W	M4	12	washer	none	6
Samsung	26"	LN-S2651HD	M4	12	washer	none	6
Samsung	26"	LN-T2632H	M4	12	washer	none	6
Samsung	26"	LN-T2642H	M4	12	washer	none	6
Samsung	26"	LN-T2653H	M4	12	washer	none	6
Samsung	26"	LN-T2653HT	M4	12	washer	none	6
Samsung	26"	LN-T2653HX	M4	12	washer	none	6
Samsung	27"	275T	M4	12	washer	none	6
Samsung	30"	305T	M4	12	washer	none	6
Samsung	32"	LN32A330	M6	12		none	11
Samsung	32"	LN32A450	M6	12		none	11
Samsung	32"	LN32A550	M6	12		none	11

If your screen model is not listed below please check [www.peerlessmounts.com](http://www.peerlessmounts.com) for the latest version of this chart.

See chart below to determine the fasteners to use with your screen. If your screen has a note in the far right column, then reference it on the last page.

Manufacturer	ScreenSize	Model	ScrewSize	ScrewLength	Washer	Spacer	Notes
Samsung	32"	LN32A550P3F	M6	12		none	11
Samsung	32"	LN-R3228W	M6	12		none	11
Samsung	32"	LN-R327W	M6	12		none	11
Samsung	32"	LN-R328W	M6	12		none	11
Samsung	32"	LN-S3251D	M6	12		none	11
Samsung	32"	LN-S3251HD	M6	12		none	11
Samsung	32"	LN-S3296D	M6	12		none	11
Samsung	32"	LN-T325H	M6	12		none	11
Samsung	32"	LN-T3242H	M6	12		none	11
Samsung	32"	LN-T3242H	M6	12		none	11
Samsung	32"	LN-T3242HX	M6	12		none	11
Samsung	32"	LN-T3253H	M6	12		none	11
Samsung	32"	LN-T3253HT	M6	12		none	11
Samsung	32"	LN-T3253HX	M6	12		none	11
Samsung	32"	SyncMaster 320P	M6	12		none	11
Samsung	37"	LN37A330	M6	12		none	11
Samsung	37"	LN37A450	M6	12		none	11
Samsung	37"	LN37A530	M6	12		none	11
Samsung	37"	LN37A550	M6	12		none	11
Samsung	37"	LN37A550P3F	M6	12		none	11
Samsung	37"	LN-T375H	M6	12		none	11
Samsung	37"	LN-T3732H	M6	12		none	11
Samsung	40"	LN40A330	M6	12	none	none	11
Samsung	40"	LN40A450	M6	12	none	none	11
Samsung	40"	LN40A550	M6	12	none	none	11
Samsung	40"	LN40A550P3F	M6	12	none	none	11
Samsung	40"	LN40A650	M6	12	none	none	11
Samsung	40"	LN-R408D	M6	12		none	11
Samsung	40"	LN-S4051D	M6	12		none	11
Samsung	40"	LN-S4051HD	M6	12		none	11
Samsung	40"	LN-S4095D	M6	12		none	11
Samsung	40"	LN-S4096D	M6	12		none	11
Samsung	40"	LN-T405H	M6	12		none	11
Samsung	40"	LN-T4032H	M6	12		none	11
Samsung	40"	LN-T4042H	M6	12		none	11
Samsung	40"	LN-T4042HX	M6	12		none	11
Samsung	40"	LN-T4046F	M6	12		none	11
Samsung	40"	LN-T4053H	M6	12		none	11
Samsung	40"	LN-T4053HT	M6	12		none	11
Samsung	40"	LN-T4053HX	M6	12		none	11
Samsung	40"	LN-T4061F	M6	12		none	11
Samsung	40"	LN-T4065F	M6	12		none	11
Samsung	40"	LN-T4066F	M6	12	none	none	11
Samsung	40"	LN-T4069F	M6	12	none	none	11
Samsung	40"	LN-T4071	M6	12		none	11
Samsung	40"	LN-T4081	M6	12		none	11
Samsung	40"	LN-T4081F	M6	12		none	11
Samsung	40"	SyncMaster 400Pn	M6	12		none	11
Samsung	40"	SyncMaster 400PX	M6	12		none	11
Samsung	42"	PN42A450	M8	25	none	8.7mm ID	
Samsung	42"	PPM42M5H	M6	12		none	11
Samsung	42"	PPM42S2	misc	misc	misc	misc	90
Samsung	42"	SPL4225K	misc	misc	misc	misc	90
Samsung	46"	LN46A550	M6	12		none	11
Samsung	46"	LN46A550P3F	M6	12		none	11
Samsung	46"	LN46A650	M6	12		none	11
Samsung	46"	SyncMaster 460P	M6	12		none	11
Samsung	46"	SyncMaster 460Pn	M6	12		none	11
Samsung	46"	SyncMaster 460PX	M6	12		none	11
Sansui	32"	HDLCDVD320	M4	12	washer	none	6
Sanyo	37"	DP37647	M6	12		none	
Sanyo	42"	42LM4WPN	M6	12		none	11
Sanyo	42"	PDP-42H1A	misc	misc	misc	misc	90
Sanyo	42"	PDP-42WE1	misc	misc	misc	misc	90
Sceptre	23"	Naga X23S	M4	12	washer	none	6
Sceptre	30"	X30SV- Naga III	M4	12	washer	none	6

If your screen model is not listed below please check [www.peerlessmounts.com](http://www.peerlessmounts.com) for the latest version of this chart.

See chart below to determine the fasteners to use with your screen. If your screen has a note in the far right column, then reference it on the last page.

Manufacturer	ScreenSize	Model	ScrewSize	ScrewLength	Washer	Spacer	Notes
Sceptre	42"	X42GV-KOMODO	M6	12		none	
Sharp	23"	IT-23M1U	M4	12	washer	none	4
Sharp	23"	LD-23SH1U	M4	12	washer	none	4
Sharp	26"	IT-26M1U	M4	12	washer	none	6
Sharp	26"	LC-26D5U	M4	12	washer	none	6
Sharp	26"	LC-26D7U	M4	12	washer	none	6
Sharp	26"	LC-26DA5U	M4	12	washer	none	6
Sharp	26"	LC-26D40U	M4	12	washer	none	6
Sharp	26"	LC-26D43U	M4	12	washer	none	6
Sharp	26"	LC-26DV10U	M4	12	washer	none	6
Sharp	26"	LC-26DV20U	M4	12	washer	none	6
Sharp	26"	LC-26GA4U	M4	12	washer	none	6
Sharp	26"	LC-26GD4U	M4	12	washer	none	6
Sharp	26"	LC-26GD6U	M4	12	washer	none	6
Sharp	26"	LD-26SH1U	M4	12	washer	none	6
Sharp	26"	LC-26SH10U	M4	12	washer	none	6
Sharp	26"	LC-26SH12U	M4	12	washer	none	6
Sharp	26"	LC-26SH20U	M4	12	washer	none	6
Sharp	30"	LC-30HV2U	M4	12	washer	none	6
Sharp	30"	LC-30HV4U	M4	12	washer	none	6
Sharp	30"	LC-30HV6U	M4	12	washer	none	6
Sharp	32"	LC-32D5U	M6	12		none	
Sharp	32"	LC-32D7U	M6	12		none	
Sharp	32"	LC-32DA5U	M6	12		none	11
Sharp	32"	LC-32D40U	M6	12		none	
Sharp	32"	LC-32D41U	M6	12		none	
Sharp	32"	LC-32D43U	M6	12		none	
Sharp	32"	LC-32D50U	M6	12		none	
Sharp	37"	LC-32D62U	M6	12		none	
Sharp	32"	LC-32G4U	M6	30		none	
Sharp	32"	LC-32GA5U	M6	12		none	
Sharp	32"	LC-32GD4U	M6	12		none	
Sharp	32"	LC-32GD6U	M6	12		none	
Sharp	32"	LC-32GP1U	M6	12		none	
Sharp	32"	LC-32HT2U	M6	12		none	
Sharp	32"	LC-32HT3U	M6	12		none	
Sharp	32"	LC-32SH20U	M6	12		none	
Sharp	32"	LC-C3242U	M6	12		none	
Sharp	37"	LC-37D40U	M6	12		none	
Sharp	37"	LC-37D42U	M6	12		none	
Sharp	37"	LC-37D43U	M6	12		none	
Sharp	37"	LC-37D4UJ	M6	12		none	
Sharp	37"	LC-37D5U	M6	12		none	
Sharp	37"	LC-37D62U	M6	12		none	
Sharp	37"	LC-37D7U	M6	12		none	
Sharp	37"	LC-37D90U	M6	12		none	
Sharp	37"	LC-37G4U	M6	30		none	
Sharp	37"	LC-37GB5U	M6	12		none	
Sharp	37"	LC-37GD4U	M6	12		none	
Sharp	37"	LC-37GD6U	M6	12		none	
Sharp	37"	LC-37GP1U	M6	12		none	
Sharp	37"	LC-37HT3U	M6	12		none	
Sharp	37"	LC-37HV4U	M6	20		none	
Sharp	37"	LC-37HV6U	M6	20		none	
Sharp	37"	LC-M3700	M6	12		none	11
Sharp	42"	LC-42BT10U	M6	12		none	
Sharp	42"	LC-42D43U	M6	12		none	
Sharp	42"	LC-42D72U	M6	12		none	
Sharp	42"	LC-42D92U	M6	12		none	
Sharp	42"	LC-42HT3U	M6	12		none	
Sharp	45"	LC-45GD4U	M6	12		none	11
Sharp	45"	LC-45GD6U	M6	12		none	11
Sharp	45"	LC-45GX6U	M6	30		none	
Sharp	45"	PN-455	M6	12		none	
Sharp	46"	LC-46D43U	M6	12		none	
Sharp	46"	LC-46D82U	M6	12		none	



If your screen model is not listed below please check [www.peerlessmounts.com](http://www.peerlessmounts.com) for the latest version of this chart.

See chart below to determine the fasteners to use with your screen. If your screen has a note in the far right column, then reference it on the last page.

Manufacturer	ScreenSize	Model	ScrewSize	ScrewLength	Washer	Spacer	Notes
Sharp	46"	LC-46D92U	M6	12		none	
Sharp	46"	LC-60C46U	M6	12		none	
Sharp	46"	PN-465U	M6	12		none	
Sharp	46"	PN-465U-P	M6	12		none	
Sony	23"	KLV-23HR2	M4	12	washer	none	6
Sony	23"	KLV-M1	M4	12	washer	none	6
Sony	23"	KLV-S23A10	M4	12	washer	none	4
Sony	23"	LMD-230WS	M4	12	washer	none	6
Sony	23"	SDM-232W/B	M4	12	washer	none	6
Sony	23"	SDM-P234/B	M4	12	washer	none	6
Sony	26"	KDL-26M4000	M4	12	washer	none	6
Sony	26"	KDL-V26XBR1	M4	12	washer	none	6
Sony	26"	KLV-26HG2	M4	12	washer	none	6
Sony	26"	KLVS26A10	M4	12	washer	none	6
Sony	30"	KLV-30XBR900	M5	12	washer	none	
Sony	30"	KLV-30XBR950	M5	12	washer	none	21
Sony	30"	LDM3000	M5	12	washer	none	21
Sony	32"	KDL-32L4000	M6	30		none	
Sony	32"	KDL-32M3000	M6	30		none	
Sony	32"	KDL-32M4000	M6	30		none	
Sony	32"	KDL-32S2000	M6	12		none	11
Sony	32"	KDL-32S2010	M6	12		none	11
Sony	32"	KDL-32S3000	M6	30		none	
Sony	32"	KDL-32SL130	M6	30		none	
Sony	32"	KDL-32XBR4	M6	30		none	
Sony	32"	KDL-32XBR6	M6	30		none	
Sony	32"	KDL-32XBR950	M5	25	washer	6.5mm ID	
Sony	32"	KDL-V32XBR1	M6	30		none	
Sony	32"	KDL-V32XBR2	M6	30		none	
Sony	32"	KE-32TS2	M5	50	washer	31.8mm tall	1
Sony	32"	KLV-32M1	M4	12	washer	none	
Sony	32"	KLV-32S200A	M6	30		none	
Sony	32"	KZ-32TS1	M5	50	washer	31.8mm tall	1
Sony	32"	KZ-32TS1U	M5	50	washer	31.8mm tall	1
Sony	37"	KE-37XS910	M5	12	washer	none	22
Sony	40"	KDL-V40XBR1	M6	12		none	
Sony	40"	KDL-40D3000	M6	20		none	
Sony	40"	KDL-40S20L1	M5	12	washer	none	22
Sony	40"	KDL-40S2010	M5	12	washer	none	22
Sony	40"	KDL-40S2400	M5	12	washer	none	22
Sony	40"	KDL-40V2500	M6	12		none	
Sony	40"	KDL-40S3000	M6	20		none	
Sony	40"	KDL-40XBR4	M6	20		none	
Sony	40"	KDL-40XBR5	M6	20		none	
Sony	40"	KLV-40S200A	M6	12		none	
Sony	42"	KDE-42XBR950	M5	12	washer	none	21
Sony	42"	KDL-42XBR950	M5	12	washer	none	21
Sony	42"	KE42M1	M5	12	washer	none	
Sony	42"	KE-42XBR900	M5	12	washer	none	
Sony	42"	KE-42XS910	M5	12	washer	none	
Sony	46"	KDL-46S2000	M6	20		none	
Sony	46"	KDL-46S2010	M6	20		none	
Sony	46"	KDL-46V3000	M6	20		none	
Sony	46"	KDL-46XBR2	M6	20		none	
Sony	46"	KDL-46XBR4	M6	20		none	
Sony	46"	KDL-46XBR5	M6	20		none	
Studio Experience	30"	SELCD300	M6	25		6.5mm ID	
Studio Experience	32"	SEPD3200	M6	25		6.5mm ID	
Studio Experience	32"	SEPD3231	M6	25		6.5mm ID	
Sylvania	26"	6626-LCT	M4	12	washer	none	6
Sylvania	26"	6626-LG	M4	12	washer	none	6
Sylvania	32"	6632-LCT	M4	12	washer	none	6
Sylvania	32"	6632-LG	M4	12	washer	none	6
Sylvania	37"	LC370SS8	M6	12		none	
Syntax/Olevia	23"	323V	M4	12	washer	none	6
Syntax/Olevia	26"	LT26HV	M4	12	washer	none	6

See chart below to determine the fasteners to use with your screen. If your screen has a note in the far right column, then reference it on the last page.

Manufacturer	ScreenSize	Model	ScrewSize	ScrewLength	Washer	Spacer	Notes
Syntax/Olevia	26"	LT26HVE	M4	12	washer	none	6
Syntax/Olevia	26"	LT26HVX	M4	12	washer	none	6
Syntax/Olevia	27"	327V	M4	12	washer	none	6
Syntax/Olevia	27"	527V	M4	12	washer	none	6
Syntax/Olevia	27"	LT27HV	M4	12	washer	none	6
Syntax/Olevia	30"	LT30HV	M4	12	washer	none	6
Syntax/Olevia	32"	332H	M4	12	washer	none	6
Syntax/Olevia	32"	532H	M4	12	washer	none	6
Syntax/Olevia	32"	LT32HV	M4	12	washer	none	6
Syntax/Olevia	32"	LT32HVE	M4	12	washer	none	6
Syntax/Olevia	32"	LT32HVM	M4	12	washer	none	6
Syntax/Olevia	37"	337H	M4	12	washer	none	6
Syntax/Olevia	37"	537H	M4	12	washer	none	6
Syntax/Olevia	37"	LT37HV	M4	12	washer	none	6
Syntax/Olevia	37"	LT37HVE	M4	12	washer	none	6
Syntax/Olevia	37"	LT37HVi	M4	12	washer	none	6
Syntax/Olevia	42"	342i	M6	12		none	
Syntax/Olevia	42"	542i	M6	12		none	
Syntax/Olevia	42"	742i	M4	12	washer	none	6
Syntax/Olevia	42"	LT42HVi	M6	12		none	
Tatung	23"	V23CLTT	M4	12	washer	none	6
Tatung	27"	V27CMTT	M4	12	washer	none	6
Tatung	30"	V30CMTT	M4	12	washer	none	6
Tatung	32"	V32FLBBU02	M4	12	washer	none	6
Toshiba	23"	23HL84	M4	12	washer	none	6
Toshiba	23"	23HL85	M4	12	washer	none	6
Toshiba	23"	23HLV84	M4	12	washer	none	6
Toshiba	23"	23HLV85	M4	12	washer	none	6
Toshiba	26"	26HL47	M4	12	washer	none	6
Toshiba	26"	26HL67	M4	12	washer	none	6
Toshiba	26"	26HL83	M4	12	washer	none	6
Toshiba	26"	26HL84	M4	12	washer	none	6
Toshiba	26"	26LV47	M4	12	washer	none	6
Toshiba	26"	26LV67	M4	12	washer	none	6
Toshiba	27"	27HL85	M4	12	washer	none	6
Toshiba	27"	27HL95	M4	12	washer	none	6
Toshiba	27"	27HLV95	M4	12	washer	none	6
Toshiba	32"	32HL66	M6	12		none	
Toshiba	32"	32HL67	M6	12		none	
Toshiba	32"	32HL84	M4	12	washer	none	6
Toshiba	32"	32HLX95	M4	12	washer	none	6
Toshiba	32"	32LV67	M6	12		none	
Toshiba	40"	40RF350U	M6	12		none	
Toshiba	42"	42HL67	M6	12		none	11
Toshiba	42"	42HL167	M6	12		none	11
Toshiba	42"	42LX177	M6	12		none	11
Toshiba	42"	42LX196	M6	12		none	11
V Inc. (Vizio)	30"	L30e	M4	25	washer	6.5mm ID	9
ViewSonic	23"	VP230mb	M4	12	washer	none	6
ViewSonic	26"	N2652W	M4	12	washer	none	6
Viewsonic	27"	N2700w	M6	20		6.5mm ID	9 & 11
Viewsonic	27"	N2750w	M4	12	washer	none	6
Viewsonic	30"	N3000w	M4	25	washer	6.5mm ID	9
Viewsonic	30"	N3020w	M4	25	washer	6.5mm ID	
ViewSonic	32"	N3206W	M6	12		none	11
Viewsonic	32"	N3235W	M6	12		none	
Viewsonic	32"	N3250W	M6	12		none	
Viewsonic	32"	N3251W	M6	12		none	
Viewsonic	32"	N3252W	M6	12		none	
ViewSonic	32"	N3260W	M6	12		none	11
Viewsonic	37"	N3735W	M6	12		none	
Viewsonic	42"	CD4220	M6	12		none	
Viewsonic	42"	N4200W	M6	12		none	
Viewsonic	42"	N4210W	M6	12		none	
ViewSonic	42"	N4280p	M6	12	none	none	
Viewsonic	42"	N4285P	M6	12		none	

See chart below to determine the fasteners to use with your screen. If your screen has a note in the far right column, then reference it on the last page.

Manufacturer	ScreenSize	Model	ScrewSize	ScrewLength	Washer	Spacer	Notes
Viewsonic	42"	VPW 4255	M6	12		none	
Viewsonic	46"	CD4620	M6	12		none	
Westinghouse	27"	LTV-27w2	M4	12	washer	none	6
Westinghouse	27"	W32701	M4	12	washer	none	6
Westinghouse	30"	LTV-30w2	M4	25	washer	6.5mm ID	9
Westinghouse	30"	W33000	M4	12	washer	none	6
Westinghouse	30"	W33001	M4	12	washer	none	6
Westinghouse	32"	LTV-32w1	M4	12	washer	none	6
Westinghouse	32"	SK-32H240D	M4	12	washer	none	6
Westinghouse	32"	SK-32H590D	M4	12	washer	none	6
Westinghouse	32"	W3213 HD	M4	12	washer	none	6
Westinghouse	37"	LVM-37w1	M4	12	washer	none	6
Westinghouse	40"	SK-40H520S	M4	12	washer	none	6
Westinghouse	40"	SK-40H590S	M4	12	washer	none	6
Westinghouse	42"	SK-42H330S	M4	12	washer	none	6
Westinghouse	42"	TX-42F430S	M4	12	washer	none	6
Westinghouse	42"	W4201	M4	12	washer	none	6
Winbook	32"	LC32	M4	12	washer	none	6
Yamaha	42"	PDM-4210	M6	12		none	
Zenith	23"	L23W36	M4	12	washer	none	6
Zenith	23"	Z23LZ6R	M4	12	washer	none	6
Zenith	26"	Z26LZ5R	M4	12	washer	none	6
Zenith	27"	L27W46	M4	12	washer	none	6
Zenith	32"	Z32LZ5R	M4	12	washer	none	6
Zenith	37"	Z37LZ5D	M4	12	washer	none	6

**NOTES** (only look at the note that applies to your screen from the previous table)

\* The mount includes 12.7mm tall spacers

- 1 All hardware may not be included. If you are missing the additional fasteners needed for your screen, then please contact Customer Care at 1-800-729-0307.
- 2 If back of screen has a bumpout at bottom, then you may need to shift the brackets up so mount would miss it.
- 3 Remove the knobs on the back of the screen. Attach the mounting brackets to the mounting holes where the knobs used to be.
- 4 Use outer-most mounting holes
- 5 Remove cover, knob, handle, or original screws from TV before attaching bracket.
- 6 If back of screen has a bumpout, or if mounting holes lie in pockets, then use M4 X 25 mm screw with 12.7mm tall spacers
- 7 If screw is too small, then use M5 X 12 mm screw.
- 8 If mounting holes lie inside pockets, then use M8x25mm screws with 8.7mm ID spacers
- 9 If screen bumpout hits mount, then contact Customer Care for 15.9mm tall spacers (*not included*)
- 10 Use M8 x 25mm screws with 8.7mm ID spacers for top mounting holes. Use M8 x 40mm screws with 8.7mm ID spacers for bottom mounting holes
- 11 If screw gets less than 3 threads of engagement, then try the next longer length screw. If all longer lengths have been tried, and there is still less than 3 threads of engagement, then contact Customer Care for assistance.
- 12 If back of screen has a bumpout, then remove it, or contact Customer Care for 15.9mm tall spacers and M5x40mm screws (both are *not included*). Stack the spacers with 12.7mm tall spacers that come with the mount.
- 13 Each top mounting hole requires stacking an 8.7mm ID spacer with a 15.9mm tall spacer (*not included*) and an M8x40mm screw. Bottom threaded holes require 15.9mm tall spacers (*not included*) and M8x25mm screws.
- 14 Remove all accessories, such as the D-Box, from the back of the screen. If you want to attach these accessories directly to the screen, then call Customer Care for a dedicated mount or mount accessory.
- 15 If you get less than 4 full threads of engagement, then contact Customer Care for M4x16mm screws (*not included*)
- 16 If you get less than 4 full threads of engagement, then contact Customer Care for M5x16mm screws (*not included*)
- 17 If you get less than 3 full threads of engagement, then contact Customer Care for M6x16mm screws (*not included*)
- 18 If you get less than 3 full threads of engagement, then contact Customer Care for M8x30mm screws (*not included*)
- 19 Top mounting holes require these fasteners, which are *not included*: M4x20mm, 6.4mm tall spacer, and M4 large OD washer. Place them in this order: bracket to washer to spacer to screen.
- 20 No Security. Requires (4) 1/4-20x1/2" screws and (4) 1/4-20 hexnuts (*not included*). Refer to Bobcat instruction for removing the Mounting Plate from the back of the screen. Attach the mounting brackets to the Bobcat Mounting Plate using the 1/4-20 screws and hexnuts, then install that back onto screen. For security option, contact Customer Care for a dedicated mount.
- 21 If any mounting hole lies in a dimple, then place a 3.2mm thick washer (*not included*) in the dimple.
- 22 If any mounting hole lies in a dimple, then place an M5 flat washer (*not included*) in the dimple. 50" screens require 2 more M5x12 screws.
- 23 Requires stacking 31.8mm tall spacers (*not included*) and 12.7mm tall spacers
- 24 Requires M4x35mm screws and 19.1mm tall spacers (both are *not included*). Remove the cable cover from the back of the screen first. Shift the brackets down so that they are out of view when looking down from the front of the screen.
- 90 Hardware specifications are not currently available. Please contact Customer Care at 1-800-729-0307 and ask for technical support to assist in the determination of your specific hardware configuration.
- 91 May require deep brackets.