

# ASSEMBLY INSTRUCTIONS

## Camera Mount for Suspended Ceiling

Models:

CMR 415

CMR 419

MIS 017


### Before beginning assembly...

Please read entire instruction sheet and check the parts list to ensure that all components have been included.

### Recommended tool..

5/16" wrench

- 1** Attach Tilt Bracket (F) to Pan Bracket (D) with Hex Bolt (E) as shown.
- 2** Open the scissor clip and place on a flat surface. Place the cylinder (B), and step washer (C) over the threaded rod on the scissor clip assembly (A) as shown.
- 3** Screw the assembled pan tilt bracket (D & F) onto the threaded rod until it is slightly snug.
- 4** Mount the camera to the bracket with the plastic knob (G) provided and secure the knob with the Retaining Clip (H). Then open the scissor clip, and attach to the T-bar grid by closing the clip. Hold the scissor clip while tightening the complete assembly until the camera is directed in the proper position.
- 5** Adjust the proper tilt and tighten the hex bolt (E).

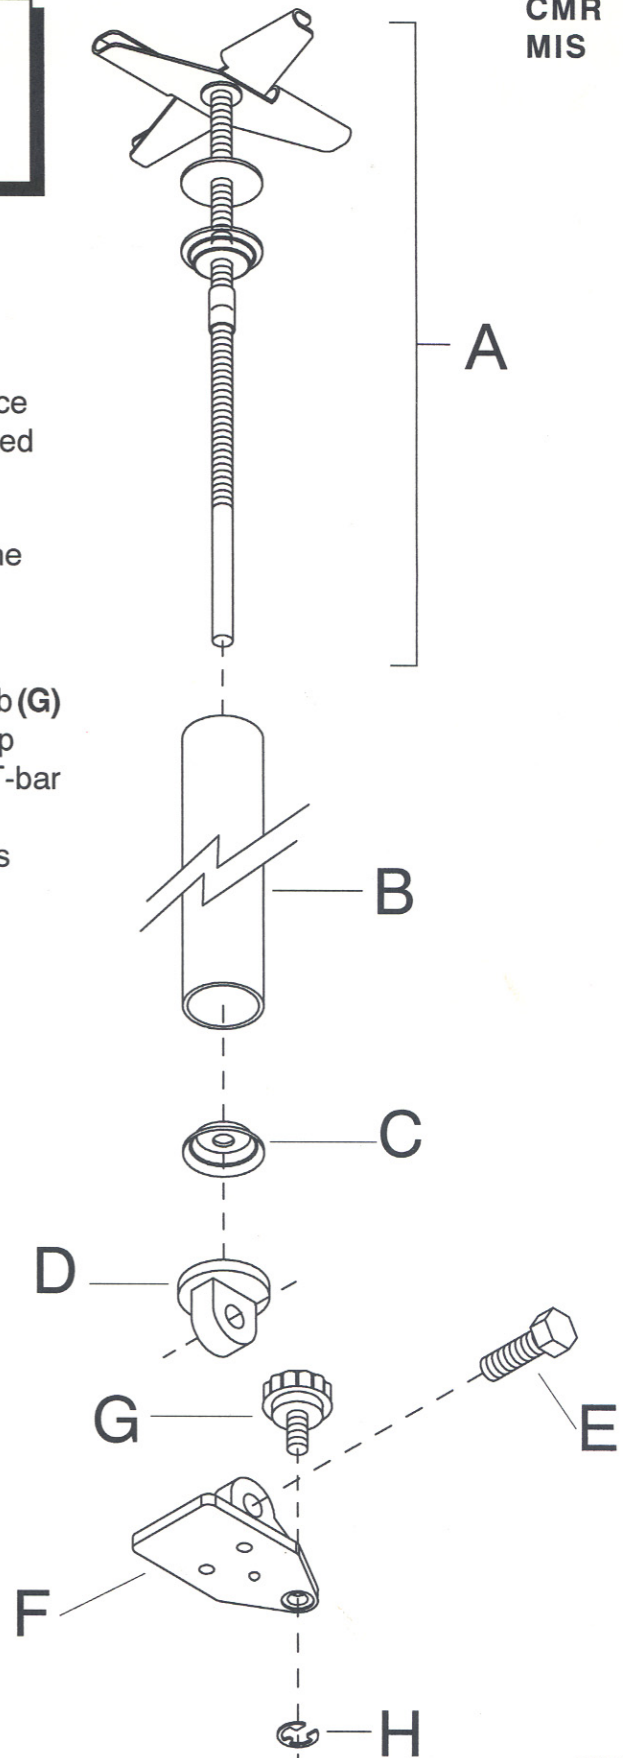

### PARTS LIST

Camera Mount for Suspended Ceiling  
Models, CMR 415, CMR419, MIS 017

Description	Quantity
A. Scissor Clip Assembly	1
B. Cylinder	1
C. Step Washer	1
D. Pan Bracket	1
E. Hex Bolt	1
F. Tilt Bracket	1
G. Plastic Knob	1
H. Retaining Clip	1