
Installation and Assembly - Universal Adapter Bracket for 32" - 60" Flat Panel Screens


IMPORTANT! Read instruction sheet before you start installation and assembly.

Before you begin, make sure all parts shown are included with your product.

Parts List		PLP-UNL	PLP-UNL-S	PLP-UNLP	PLP-UNLP-S
Description	Qty	Part #	Part #	Part #	Part #
AA adapter bracket	1	201-1110	201-4110	201-1110	201-4110
BB shallow adapter bracket	2	200-0756	200-0757	200-0754	200-0755
CC deep adapter bracket	2	200-0752	200-0753	200-0750	200-0751
DD allen wrench	1	560-9646	560-9646	560-0072	560-0072
EE M5 x 10mm screw	4	520-1063	520-1063	520-9250	520-9250

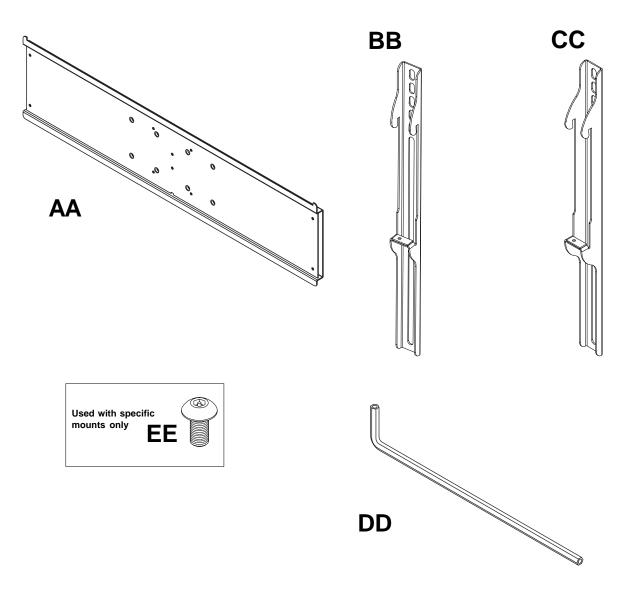

Security Adapter Bracket Fasteners

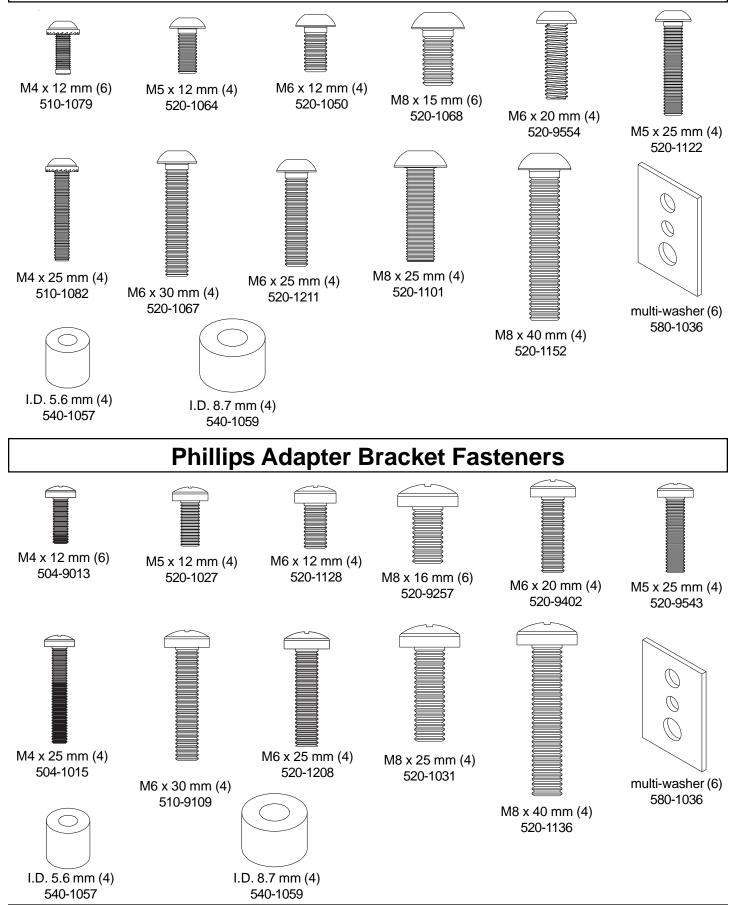

Installing Adapter Brackets

Refer to Screen Compatibility Chart to determine the proper fasteners to use.

0

To prevent scratching the screen, set a cloth on a flat, level surface that will support the weight of the screen. Place screen face side down. If screen has knobs on the back, remove them to allow the adapter brackets to be attached. Place adapter brackets (**BB or CC**) on back of screen, align to holes, and center on back of screen as shown in figure 1.1. Attach the adapter brackets to the back of the screen using the appropriate combination of screws, multi-washers, and spacers as shown in figure 1.3.

Note: Top and bottom holes must always be used.


Verify that all holes are properly aligned, and then tighten screws using a phillips screwdriver. **Note:** Tighten using security allen wrench (**DD**).

A WARNING

 Tighten screws so adapter brackets are firmly attached. Do not tighten with excessive force. Overtightening can cause stress damage to screws, greatly reducing their holding power and possibly causing screw heads to become detached. Tighten to 40 in. • Ib (4.5 N.M.) maximum torque.


Notes:


- The number of fasteners used will vary, depending upon the type of screen.
- Multi-washers and spacers may not be used, depending upon the type of screen.
- Use the corresponding hole in the multiwasher that matches your screw size as shown in figure 1.2.

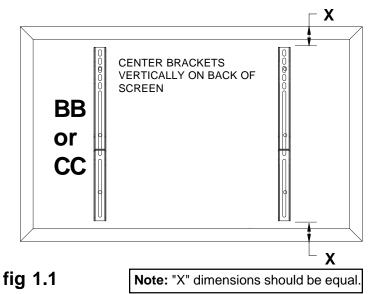



• If screws don't get three complete turns in the screen inserts or if screws bottom out and bracket is still not tightly secured, damage may occur to screen or product may fail.

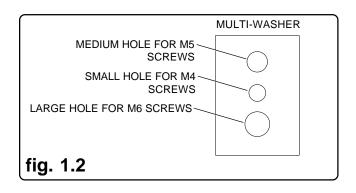

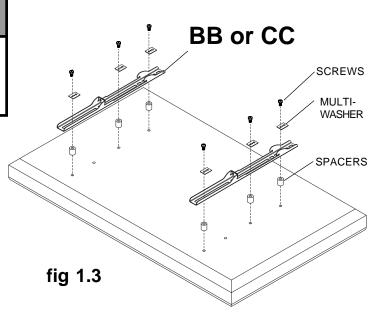

Mounting and Removing Flat Panel Screen

Refer to mount instruction sheet for attachment of adapter bracket to mount.



Hook adapter brackets (BB or CC) onto adapter bracket (AA), then slowly swing screen in as shown. Turn screws clockwise at least six times to prevent screen from being removed as shown in detail 1. Note: Tighten using security allen wrench (DD).

Screen can be adjusted horizontally if desired.

Note: To lock the screen down, tighten screws to adapter bracket as shown in detail 1.

To remove screen from mount, loosen screws, swing screen away from mount, and lift screen off of mount.

A WARNING

• Always use an assistant or mechanical lifting equipment to safely lift and position the plasma television.

