

CPU Roll-out Shelf Assembly Instructions




Hello! Thank you for choosing Anthro.

Before beginning installation of your CPU Roll-out Shelf (the CRS30xx is shown in these Instructions), please take a moment to review the parts listed to verify that your shipment is complete.

It may be helpful to review the assembly instructions of all Anthro products you purchased and are planning to include in this installation.

SAVE THESE INSTRUCTIONS!

Questions? 1-800-325-3841

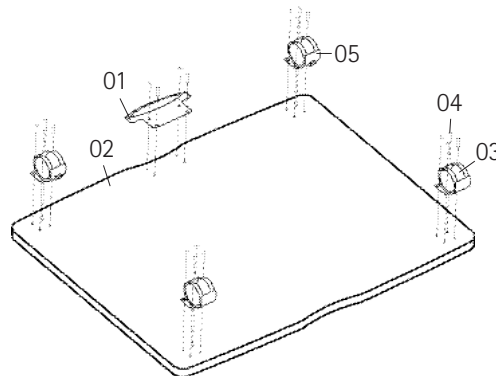

Component list for part #'s CRS20xx & CRS30xx.

- 01- CPU Roll-out Shelf HandleQty. 1 225-5666-xx
- 02- CPU Roll-out Shelf PanelQty. 1(see below)
 - 20" Wide 23.5" Deep(CRS20xx)..... 100-6487-xx
 - 30" Wide 23.5" Deep(CRS30xx)..... 100-6488-xx
- 03- 50mm Non-Locking CastersQty. 2 150-5012-03

- 04- 3/4" Wood ScrewsQty. 20.....325-5106-00
 - 05- 50mm Locking Casters.....Qty. 2 150-5013-03
- A 5/32" Anthro Hex Driver (not included) will be needed for this assembly procedure.

Step 1


Place your CPU Roll-out Shelf Panel onto the floor with the predrilled holes facing upward.

Position the Handle so it is angled down (toward the floor) as shown at right. Align the four holes of the Handle with the predrilled holes on the Shelf and secure using four Wood Screws.

Next, place both Locking Casters on the same side as the Handle and secure each using four Wood Screws.

Finally, place the two Non-Locking Casters on the remaining side and secure using a total of eight Wood Screws.

Congratulations! Your assembly is complete.

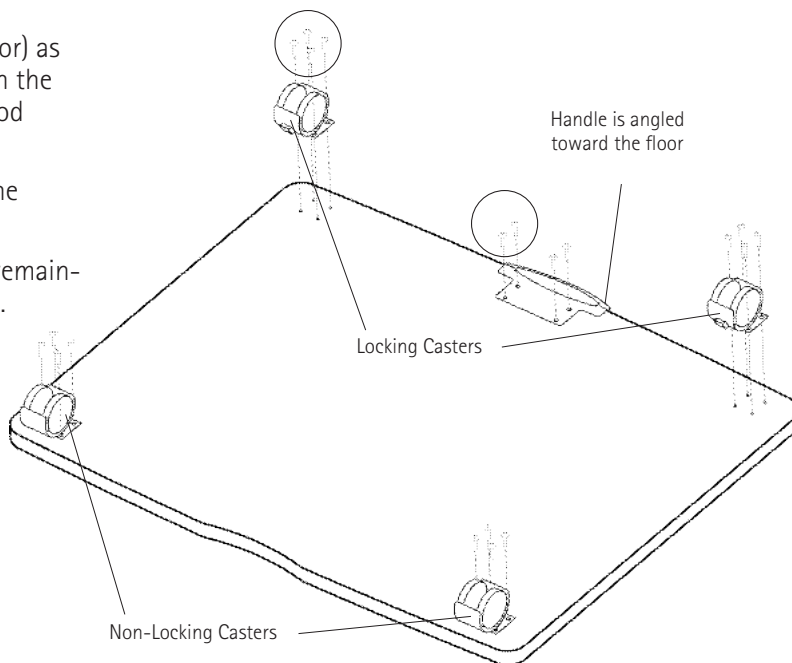

3/4" Wood Screw
325-5106-00

