

LCD Monitor Arm
Model No. 9103

INSTRUCTIONS

The IOP Monitor Arm Model 9103 comes in three parts. Each component is sold separately.

1. **Mount** assembly (instructions enclosed separately)
2. **Monitor Arm** assembly
3. **Adapter Bracket**

The Monitor Arm is easily assembled following these simple steps.

Be sure the mount is securely fastened to the surface before beginning.

Step 1 Attaching the Arm to the Mount

Once the mount is secure, insert the shaft of the **LCD Arm** into the mount as shown below in Illustration 1 (Mounts will vary).

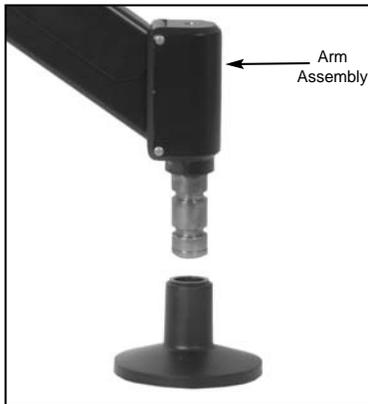


Illustration 1

Step 2 Attaching the Tilter to the Adapter Bracket

Carefully remove the base from the flat panel monitor. For removal instructions, see your *Flat Panel User's Guide*.

If the adapter bracket is already attached to the tilt mechanism, skip this step and continue with step 3.

If the adapter bracket is not attached to the tilt mechanism, attach it using the (4) 1/4-20 x 1/2 Philips Pan Head Screws as shown below in Illustration 2.

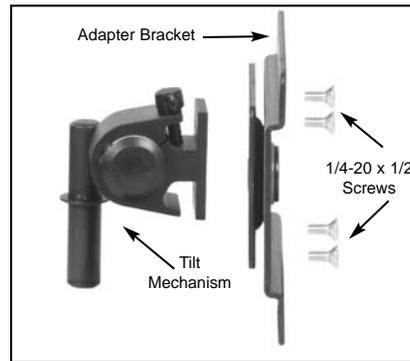


Illustration 2

Step 3 Attaching the Adapter Bracket to the Flat Panel

Align the tilter and adapter bracket with the hole pattern on the back of your LCD. Use the (4) four M4-12 Philips Pan Head Screws to attach the plate to the back of the monitor. See the Illustration 3 below.



Illustration 3

NOTE: If the bracket does not line up with the hole pattern on the back of your monitor, please contact our customer service department.

Slide the tilter shaft into the hole in the end of the forearm, as shown in Illustration 4 below.


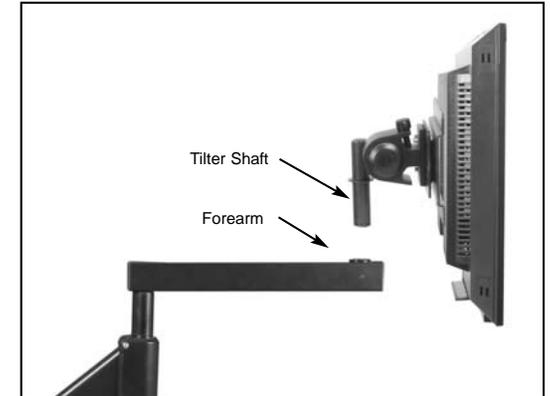


Illustration 4

Fine Tuning Your Arm

Step 1 Adjusting the Tilt Friction

Tilt the monitor to the preferred angle of viewing and tighten the *Friction Knob*.

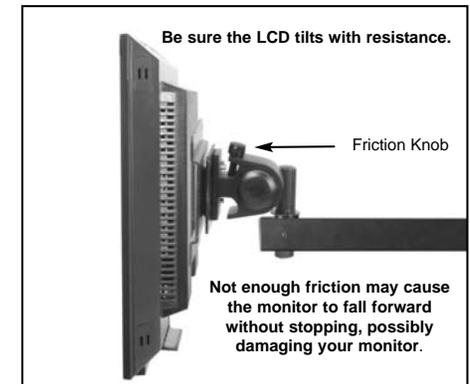

Step 2 Setting the Counter-balance

Use the 1/4" allen wrench (provided), insert into the hole on the top of the endcap with shaft; with one hand, hold the arm in a horizontal position, while turning the allen wrench with the other hand to set the weight adjustment. See Illustration 5 below.

Using the allen wrench in a horizontal position allows extra leverage while adjusting.

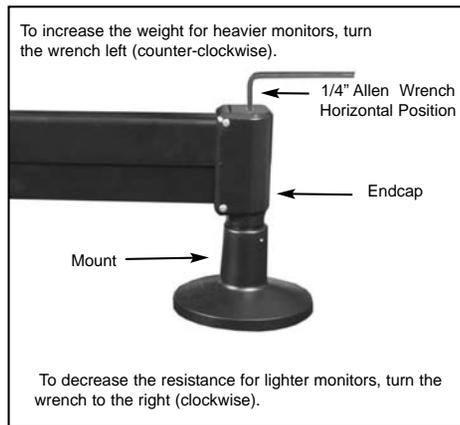


Illustration 5

Step 3 Adjusting Friction Joints

Each joint on your new monitor arm has a built in set screw that allows you to set the degree of friction and ease of movement of that joint.

The friction joints are located **(1)** in the forearm, where the tilter mechanism is inserted, **(2)** the forearm's pivot point and **(3)** mount base, where monitor arm is inserted. **See Illustration 6 on the next page.**


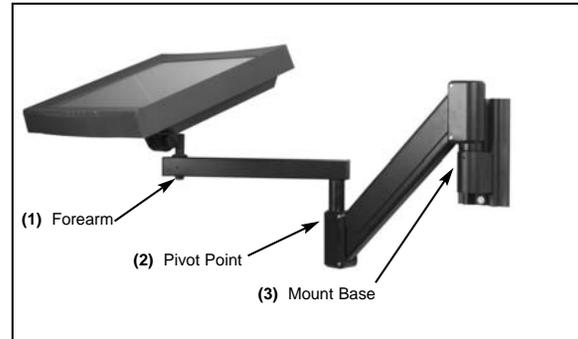


Illustration 6

All product returns require a Return Authorization (R/A) Number. If you need to return your product for any reason, please call 800-524-2744 to obtain your R/A or if you require additional assistance with this product.

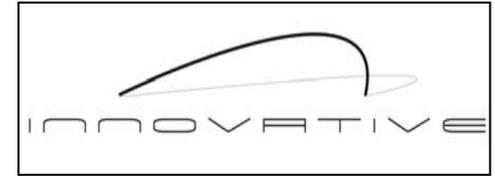

Model 9103 LCD Monitor Arm

Installation Instructions

INNOVATIVE OFFICE PRODUCTS, INC.
100 Kuebler Road
Easton, PA 18042
800-524-2744
sales@LCDARMS.com