## How To?

How to replace EZ back height adjustment mechanism (device) MODEL: 7877,7878,7898,7899,7998,7999 IU54,IU55,IU58 PT72, PT74, PT76, PT78, PT79 WH84,WH88,WH89

## Problem:

Backrest would not move up or down. Backrest is separated from upright. Backrest won't stay at desired height.

## Solution:

- (A) Tool needed: A Philips screw driver.
- (B) Steps:
- 1. Remove backshell by prying open around the corners using screw driver.
- 2. Loosen screws to remove back height adjustment mechanism from upright.
- 3. Loosen screws to detach bad mechanism from back wood.
- 4. Re-install new back height adjustment mechanism onto Back Wood. (Some models have spacers which need to be re-install as well.)
- 5. Re-install backrest to upright.
- 6. Test height adjustment function.
- 7. Re-install backshell onto backrest using new star clips.

