


# Senko Task Light

Installation Instructions

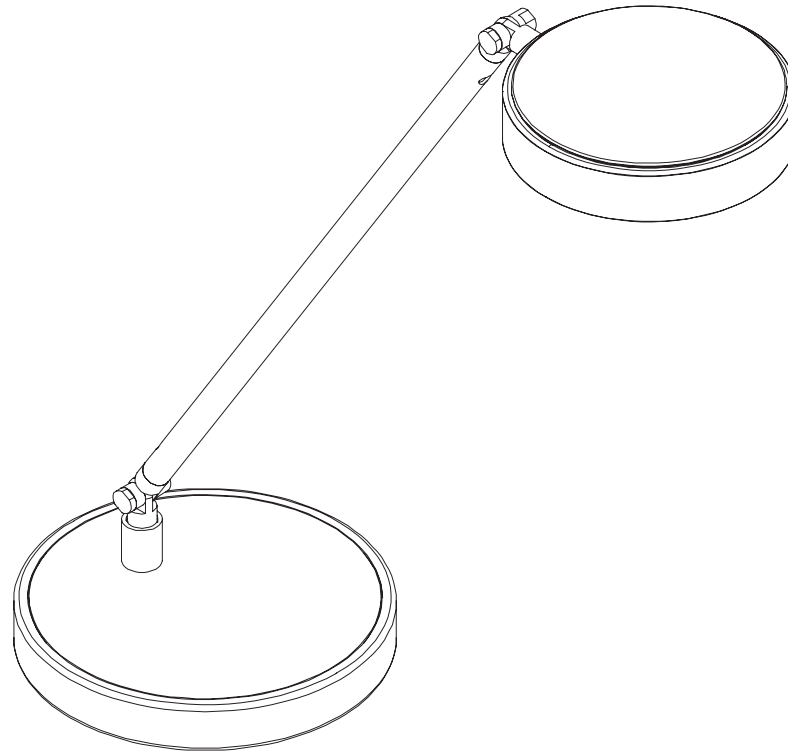


#### Contact Information

100 Kuebler Road  
Easton, PA 18040


877.523.2767

[www.ergotechgroup.com](http://www.ergotechgroup.com)  
[distyteam@ergotechgroup.com](mailto:distyteam@ergotechgroup.com)

**Power Supply**  
Connect the power adapter  
to the lamp and to a  
100-240V / 50-60Hz wall outlet.

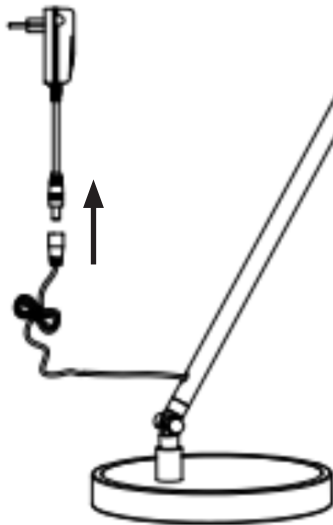

**Dimmer Switch**  
1st tap – Turn on  
2nd tap – Brighter  
3rd tap – Max. Brightness  
4th tap – Turn off

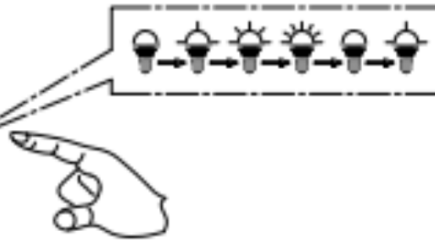

**i SAFETY ADVICE**

- Parts of the lamp grow hot during use. Do not touch the light bulb or parts surrounded by the light bulb (for example glass or reflector) while in use.
- Never try to take off the LED bulb by yourself, the LED part is not replaceable.
- The external flexible cable (power supply) for this lamp cannot be replaced. If the cable is damaged, the lamp must be scrapped.



This device complies with part 15 of the FCC Rules.  
Operation is subject to the following two conditions:  
(1) This device may not cause harmful interference, and  
(2) this device must accept any interference received,  
including interference that may cause undesired  
operation.

CAN ICES-5(B)NMB-5(B)

Innovative Office Products, LLC  
100 Kuebler Road  
Easton, PA 18040