




**E5-D1L
E5-D1**

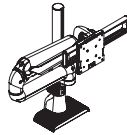


E5G-P01SD

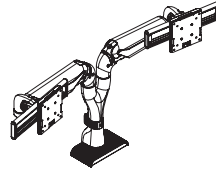


E5-D2

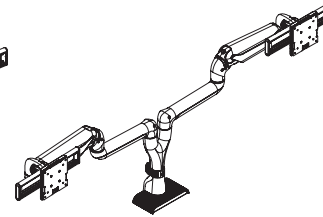


E5G-D2SD

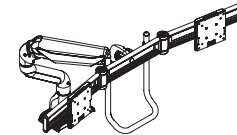


E5G-D2C

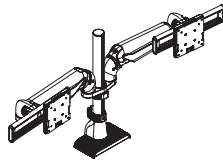


E5G-P02D

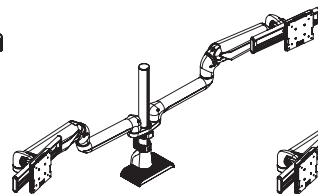


E5G-P02SD

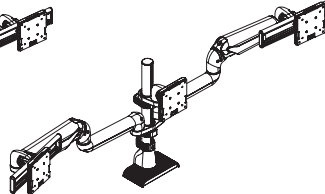


E5G-P03SD

 

E5G-P01

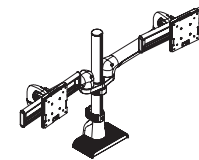


E5G-P02S

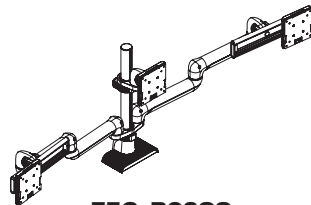


E5G-P03SS



E5G-P11

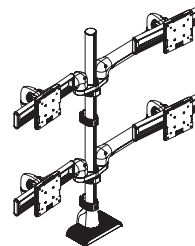

E5G-P22S

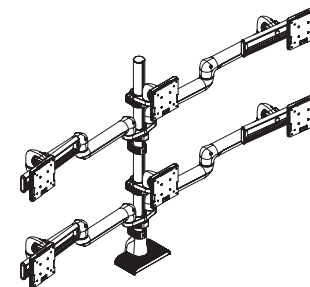

E5G-P33SS

Human Active Technology

800 524 2744


customerservice@team-hat.com

team-hat.com


IMPORTANT INSTRUCTIONS

WARNING


 
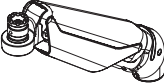
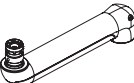

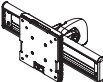


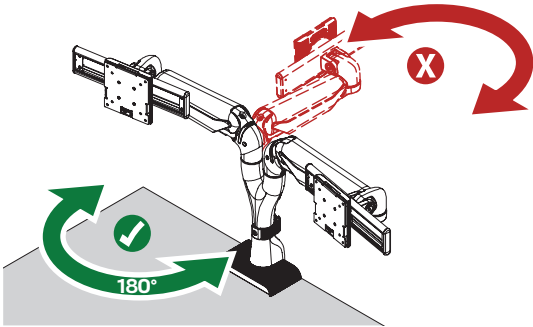- Do not use power tools during assembly.
- The monitors shall not be positioned behind the edge of the desk.
- It is highly recommended to engage the 180° rotation stop.

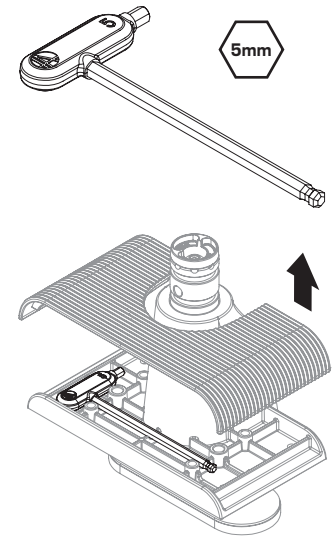


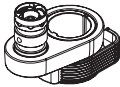
 

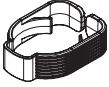
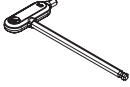
 
TOOL INCLUDED




PARTS LIST

	E5G-P01	E5G-P01SD	E5-D1X	E5-D2	E5G-D2SD	E5G-D2C	E5G-P11	E5G-P02S	E5G-P02D	E5G-P02SD	E5G-P03SS	E5G-P03SD	E5G-P22S	E5G-P33SS
A 418028 (includes 1x 118311) 	1x	1x	1x	1x	1x	1x	1x	1x	1x	1x	1x	1x	1x	1x
B 418082 	-	-	1x	-	-	1x	-	-	-	-	-	-	-	-
C 418090 	-	1x	1x	2x	2x	1x	-	-	2x	2x	-	2x	-	-
D 418171 	-	1x	-	-	2x	-	-	2x	-	2x	4x	2x	4x	8x
E 418045 (includes 1x 702096) 	1x	-	1x	-	-	-	2x	-	-	-	1x	1x	-	2x
F 418123 (includes 1x 702096) 	-	1x	-	2x	2x	-	-	2x	2x	2x	2x	2x	4x	4x
G 418131 	-	-	-	1x	1x	-	-	-	-	-	-	-	-	-
H 418160-14 	1x	1x	-	-	-	-	1x	1x	1x	1x	1x	1x	1x	1x


PARTS LIST CONTINUED

	E5G-P01	E5G-P01SD	E5-D1X	E5-D2	E5G-D2SD	E5G-D2C	E5G-P11	E5G-P02S	E5G-P02D	E5G-P02SD	E5G-P03SS	E5G-P03SD	E5G-P22S	E5G-P33SS
I 418340 	-	-	-	-	-	-	1x	-	-	-	-	-	1x	1x
J 418165 	1x	1x	-	-	-	-	2x	-	-	-	1x	1x	-	2x
K 418167 	-	-	-	-	-	-	-	1x	1x	1x	1x	1x	2x	2x
L 418178 	-	-	-	-	-	1x	-	-	-	-	-	-	-	-
M 118134 	1x	1x	-	1x	1x	-	2x	1x	1x	1x	1x	1x	2x	2x
N 118311 	1x	1x	1x	1x	1x	1x	1x	1x	1x	1x	1x	1x	1x	1x
O 702096 	4x	4x	4x	8x	8x	8x	8x	8x	8x	8x	8x	12x	16x	24x

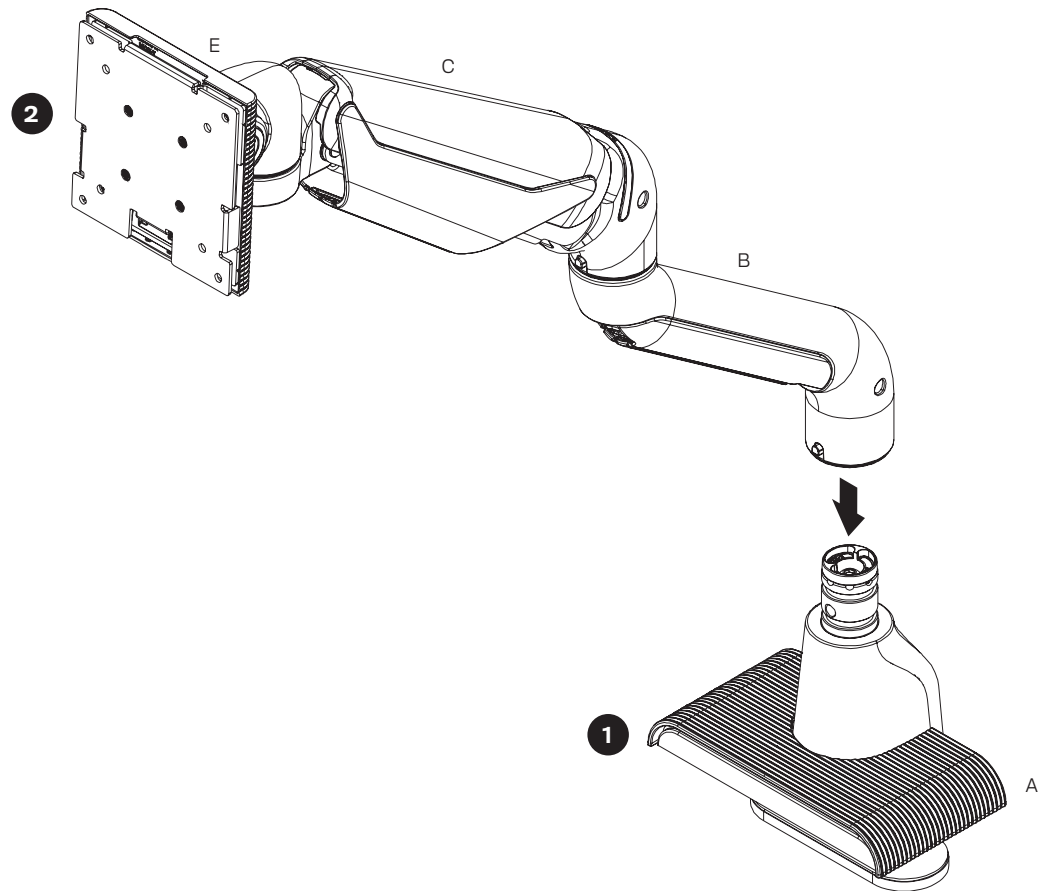


- 1 Secure Top Down Mount (A) to worksurface.
(see pages 9 - 11)
- 2 Insert pre-assembled B+C+E into Mount (A).

- 1 Secure Top Down Mount (A) to worksurface.
(see pages 9 - 11)
- 2 Insert and secure Dual Adapter (G) into Mount (A) using provided mount screw (blue-taped to Dual Adapter) and 5mm HAT Hex Key. Snap Cable Clip (M).
- 3 2x Insert Dynamic Arm (C) to Dual Adapter (G).
- 4 2x Insert Slider (F) to Dynamic Arm (C).

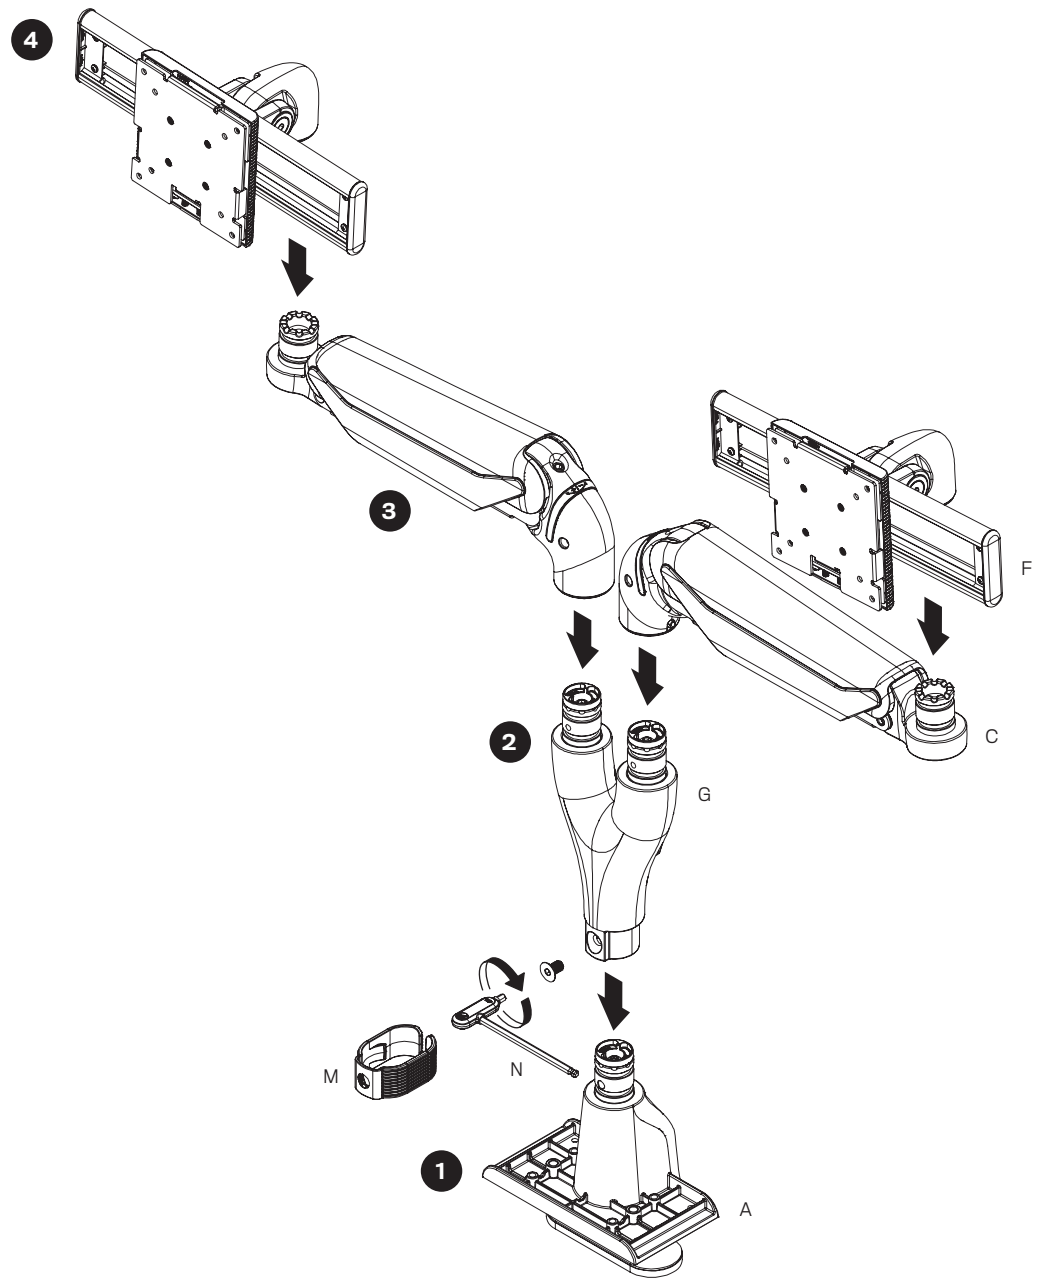


- 1 Secure Top Down Mount (A) to worksurface.
(see pages 8 - 11)
- 2 Insert and secure Pole (H) into Mount (A) using provided mount screw (blue-taped to Pole) and 5mm HAT Hex Key. Snap Cable Clip (M).
- 3 Adjust the height of Single Yoke (J) on the Pole if needed.
(see Page 13)
- 4 Insert pre-assembled D+C+F into Single Yoke (J).

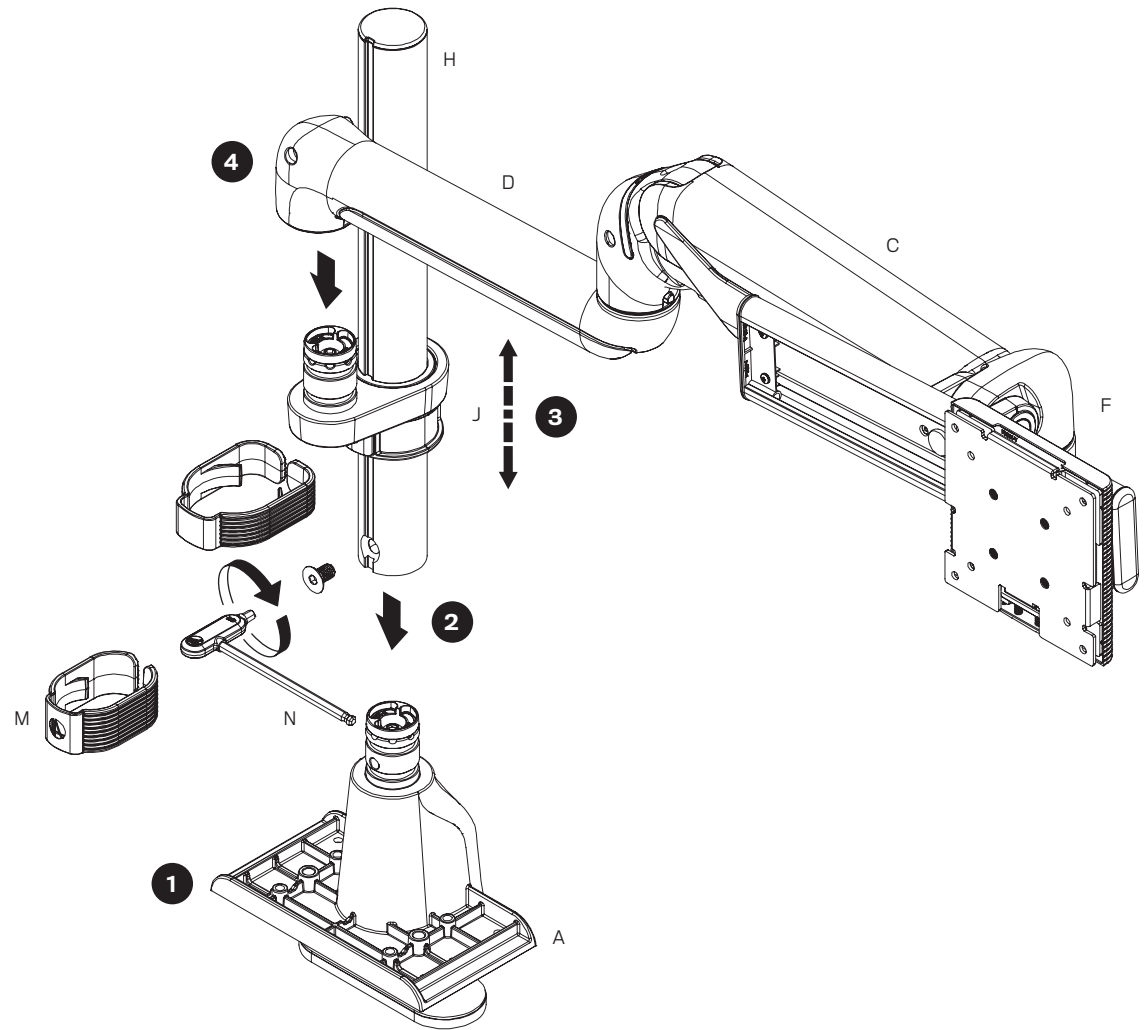


PUSH-BUTTON QUICK CONNECTIONS

1

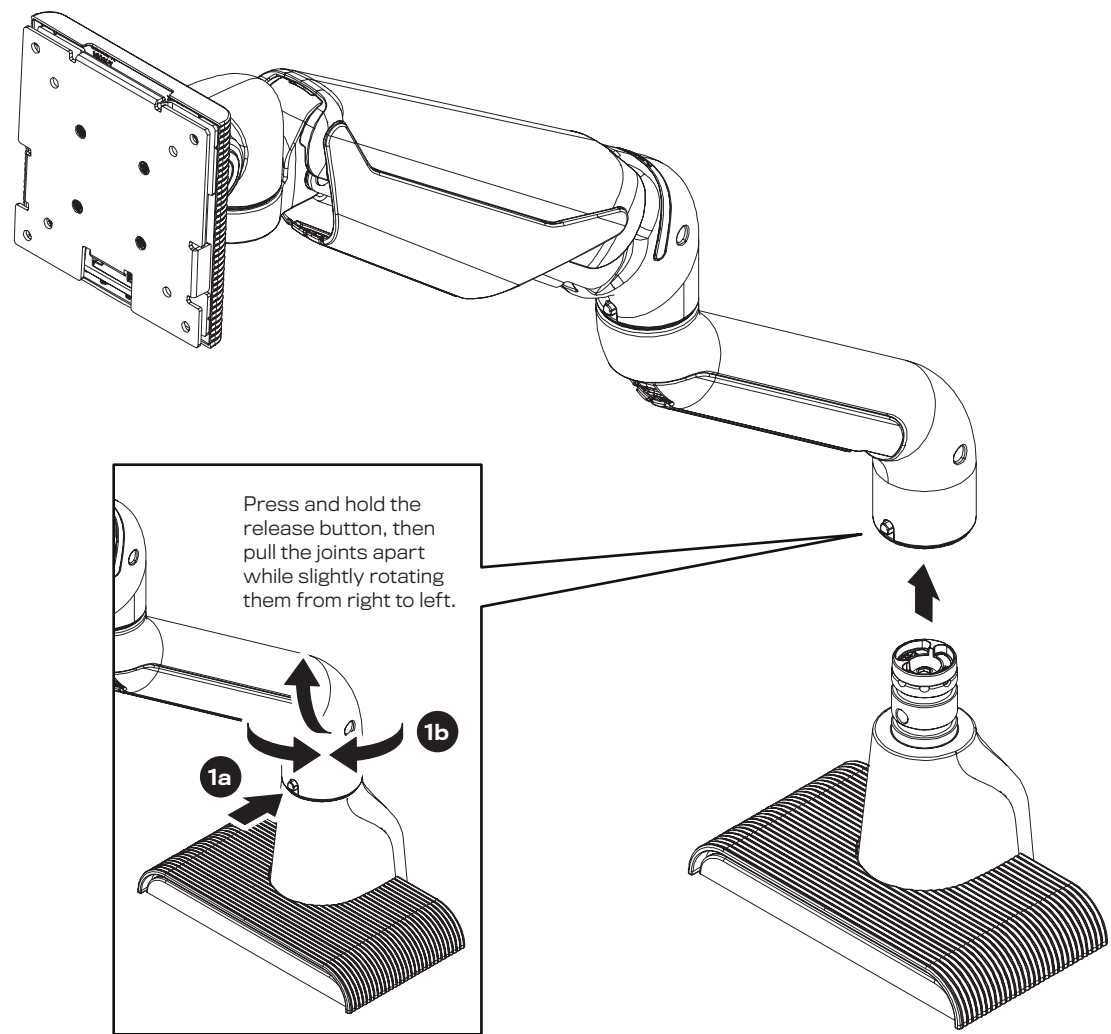



C-CLAMP CONFIGURATION (CONTINUED ON NEXT PAGE)

2

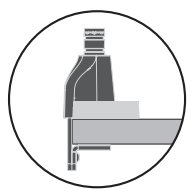


Desk thickness
up to 1.5" (38mm)

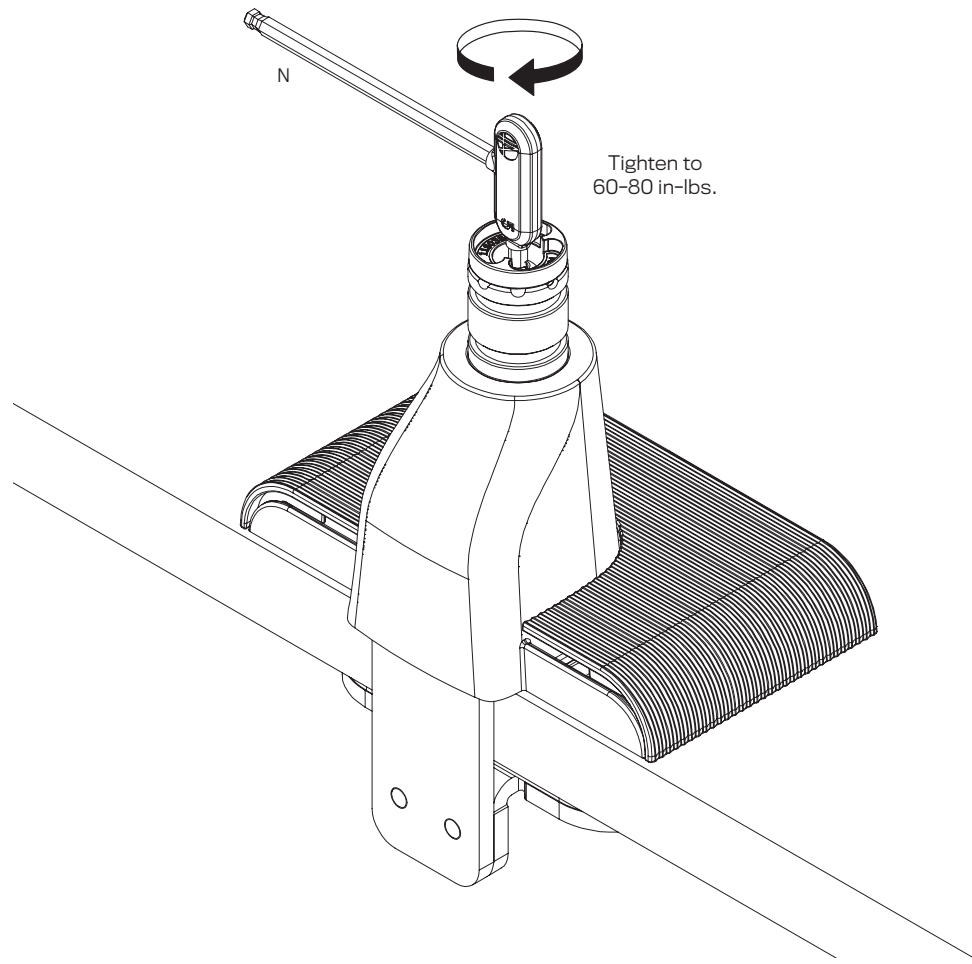










**DEFAULT ROTATION
STOP ORIENTATION**






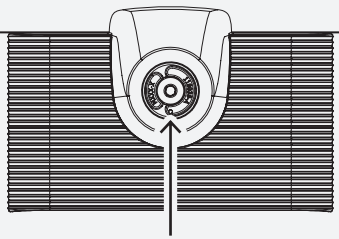


Default position of the rotation stop
range on all parts is set for the mount
to be perpendicular to the user.

C-CLAMP CONFIGURATION - LIMITED SPACE INSTALLATIONS

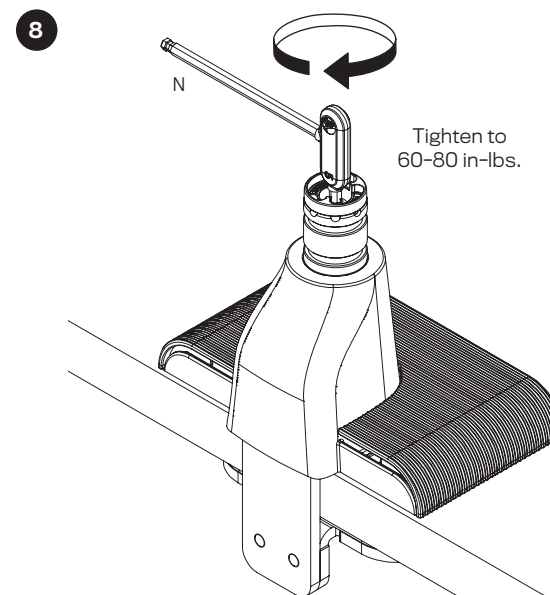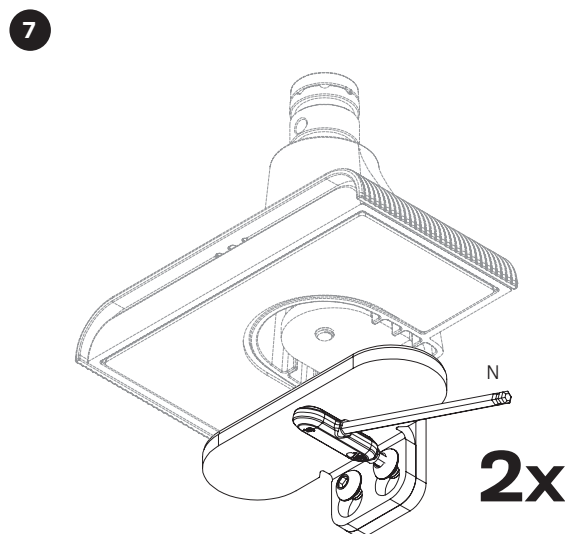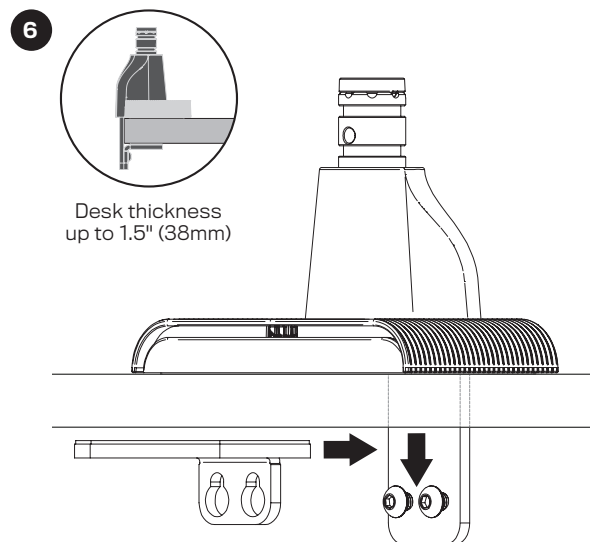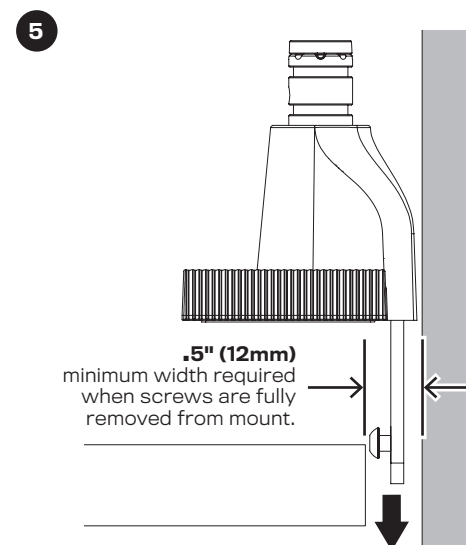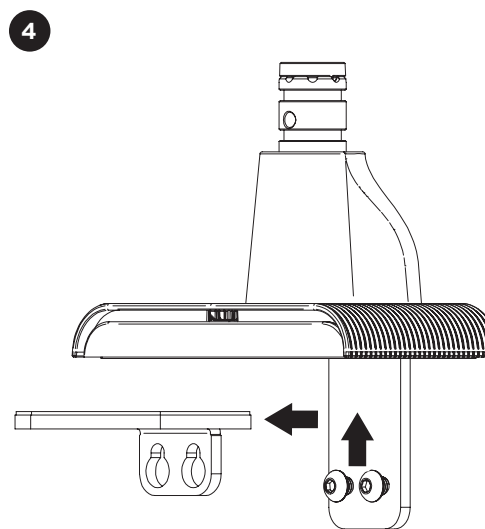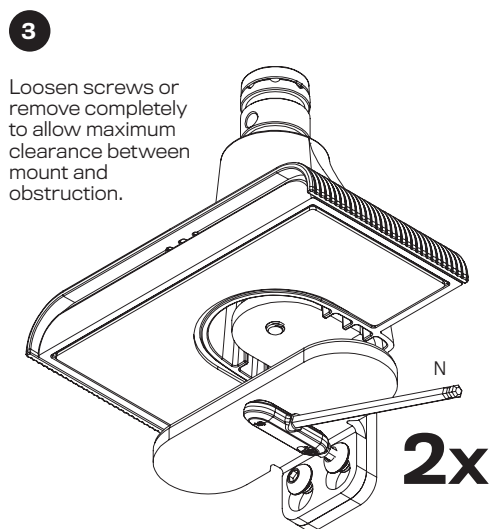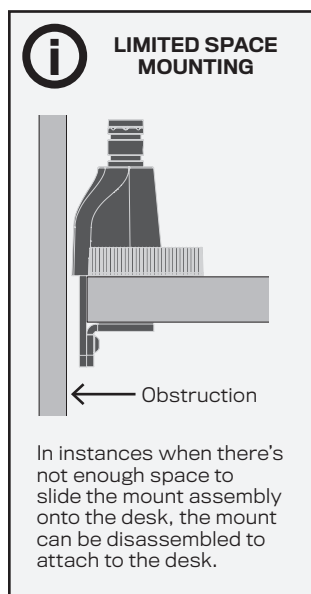


GROMMET CONFIGURATION

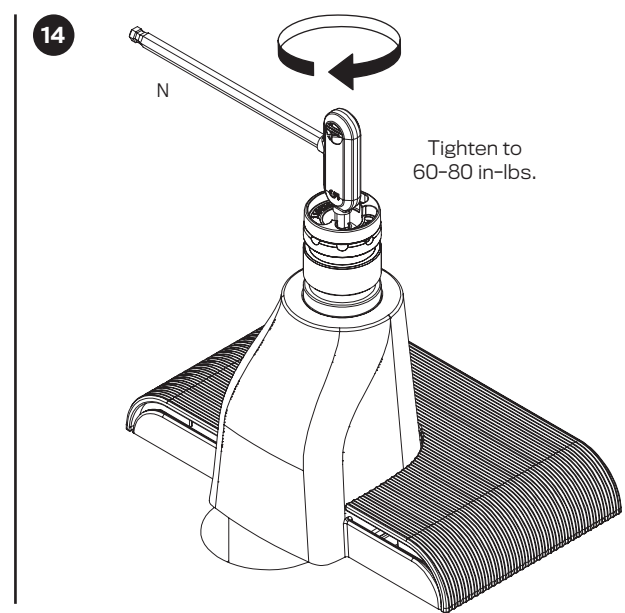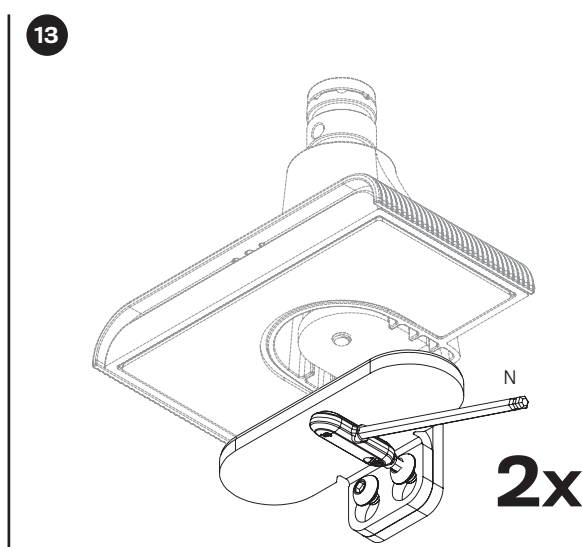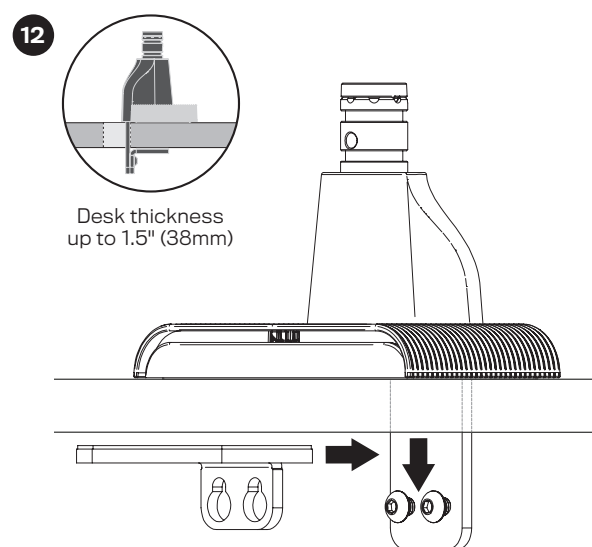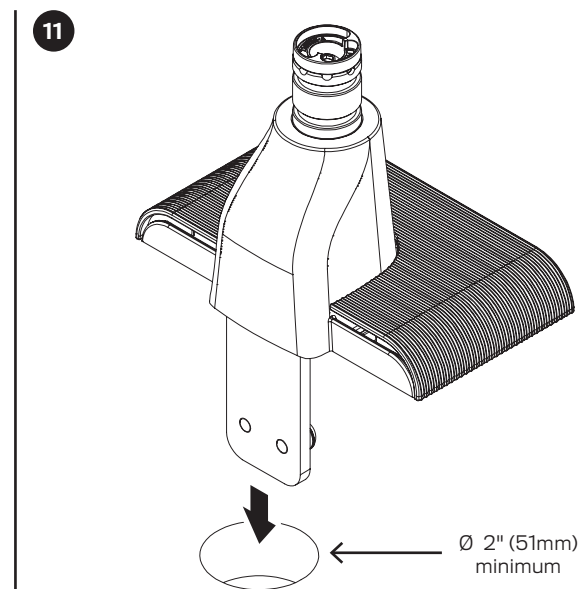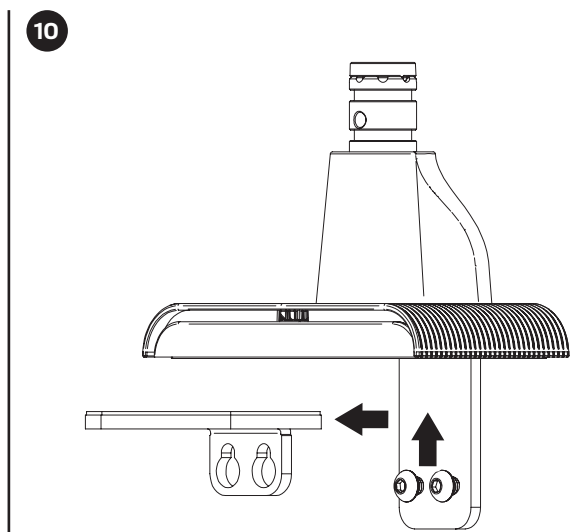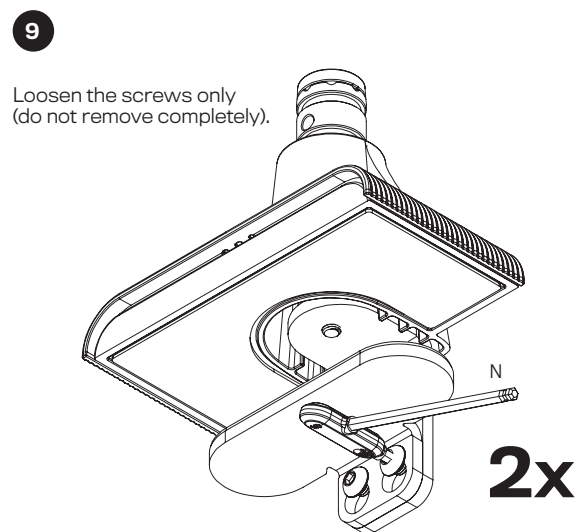


DUAL ADAPTER AND POLE INSTALLATION


15

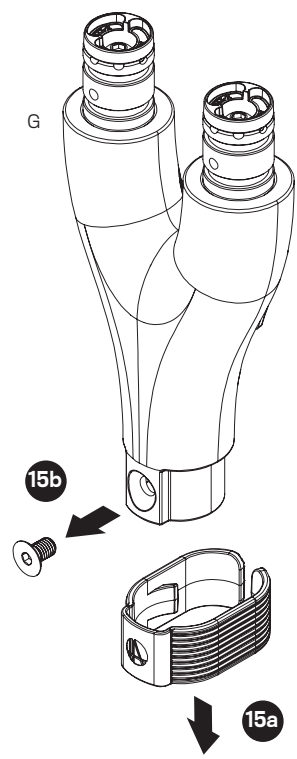

16

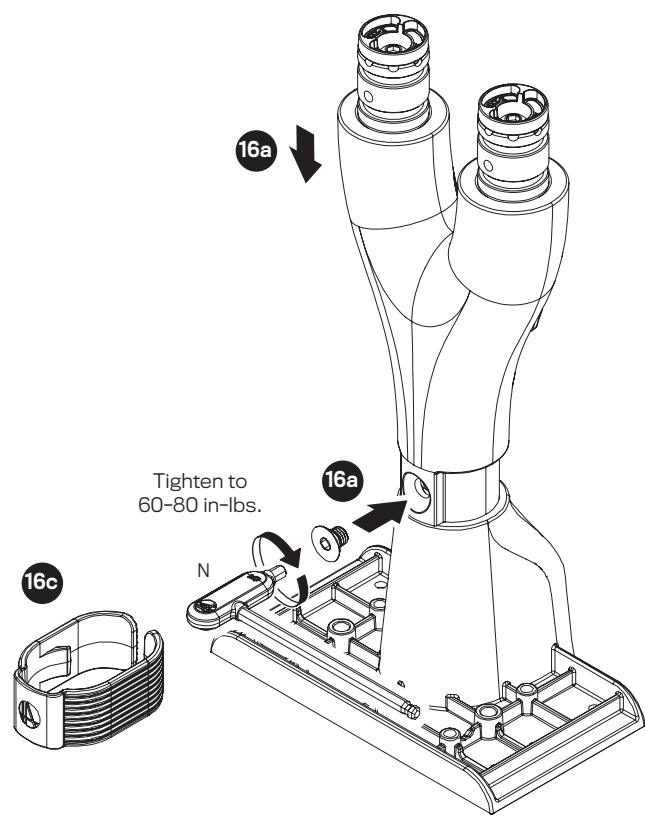


OR

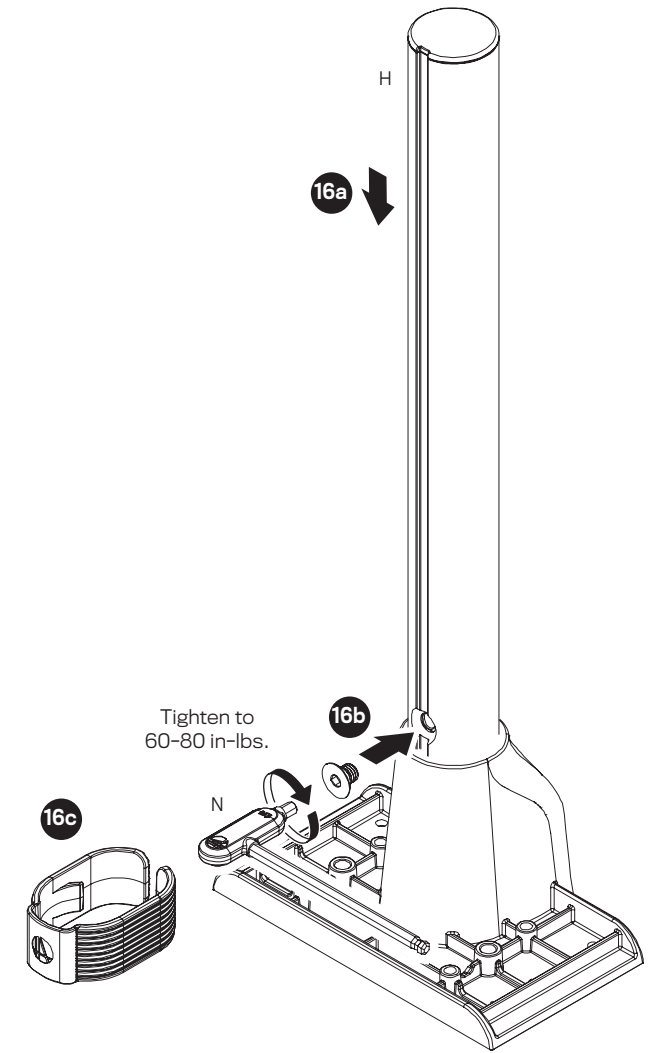


SINGLE AND DUAL YOKE HEIGHT ADJUSTMENT

17

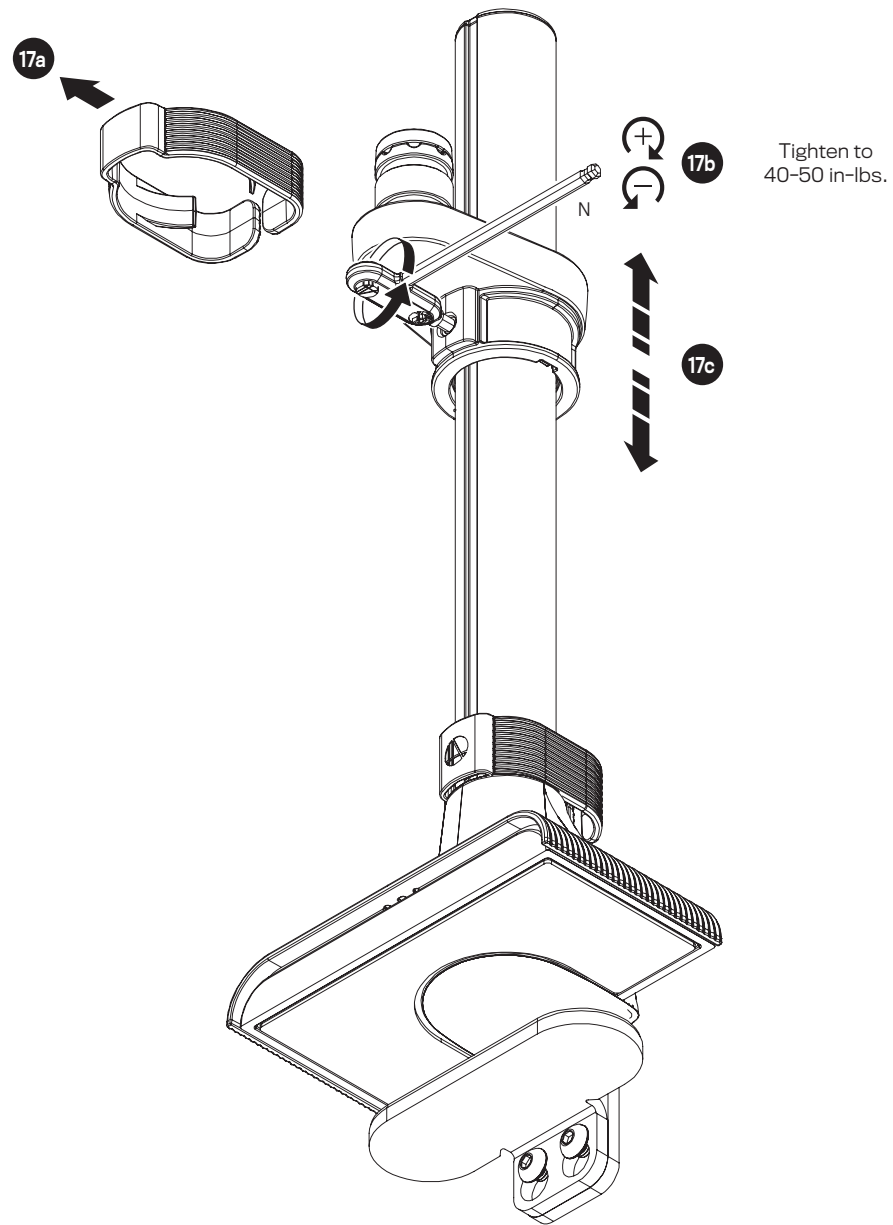


VESA PLATE REMOVAL (TILTER AND SLIDER)

18


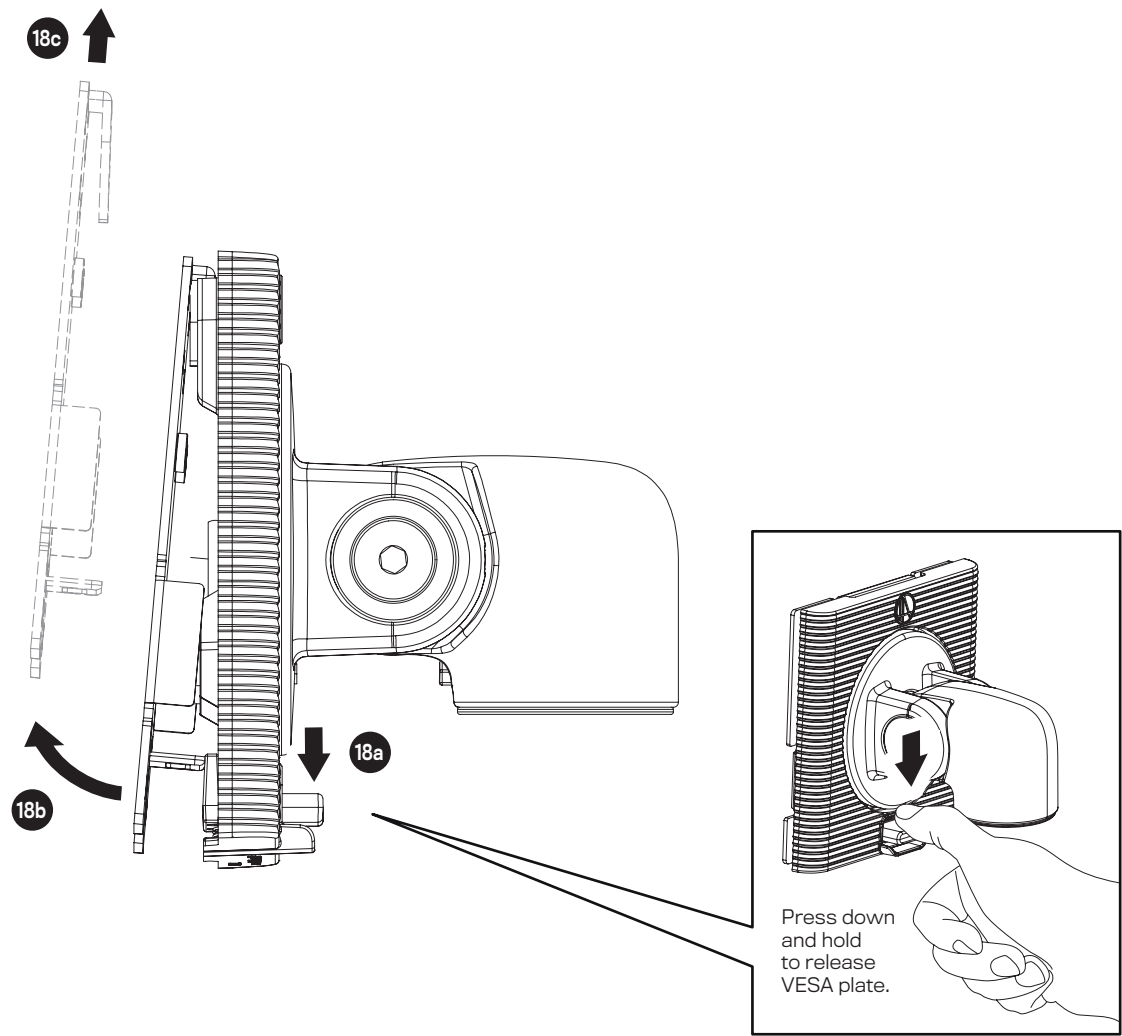


VESA PLATE ASSEMBLY (TILTER AND SLIDER)

19


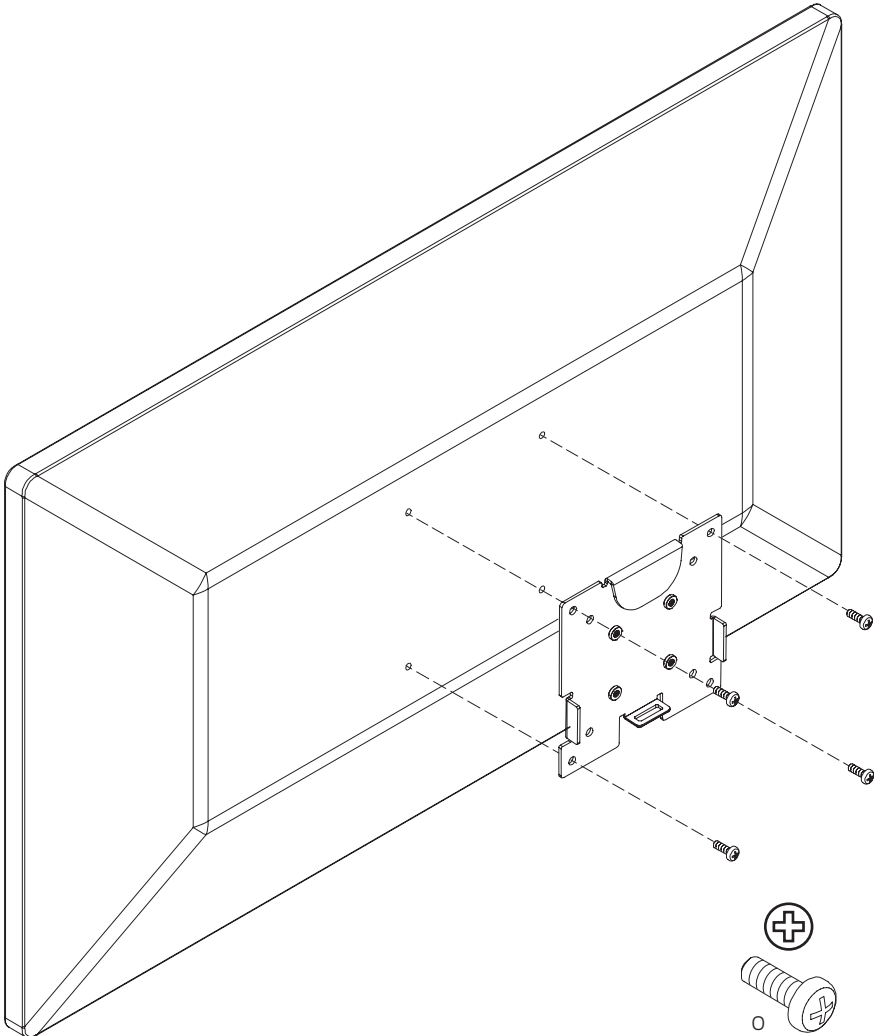


20

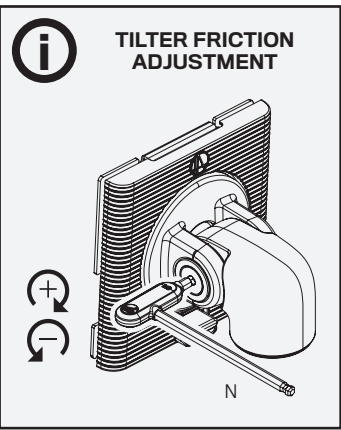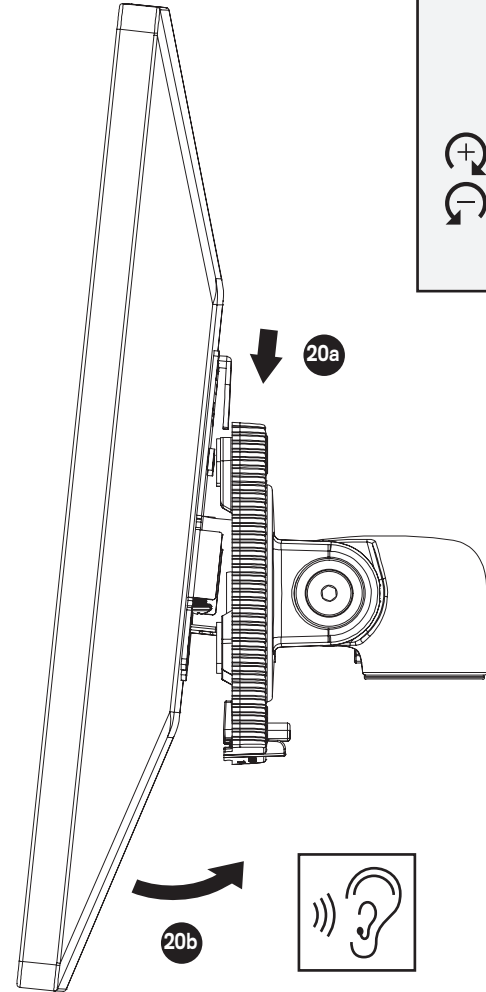

DYNAMIC ARM COUNTERBALANCE

21

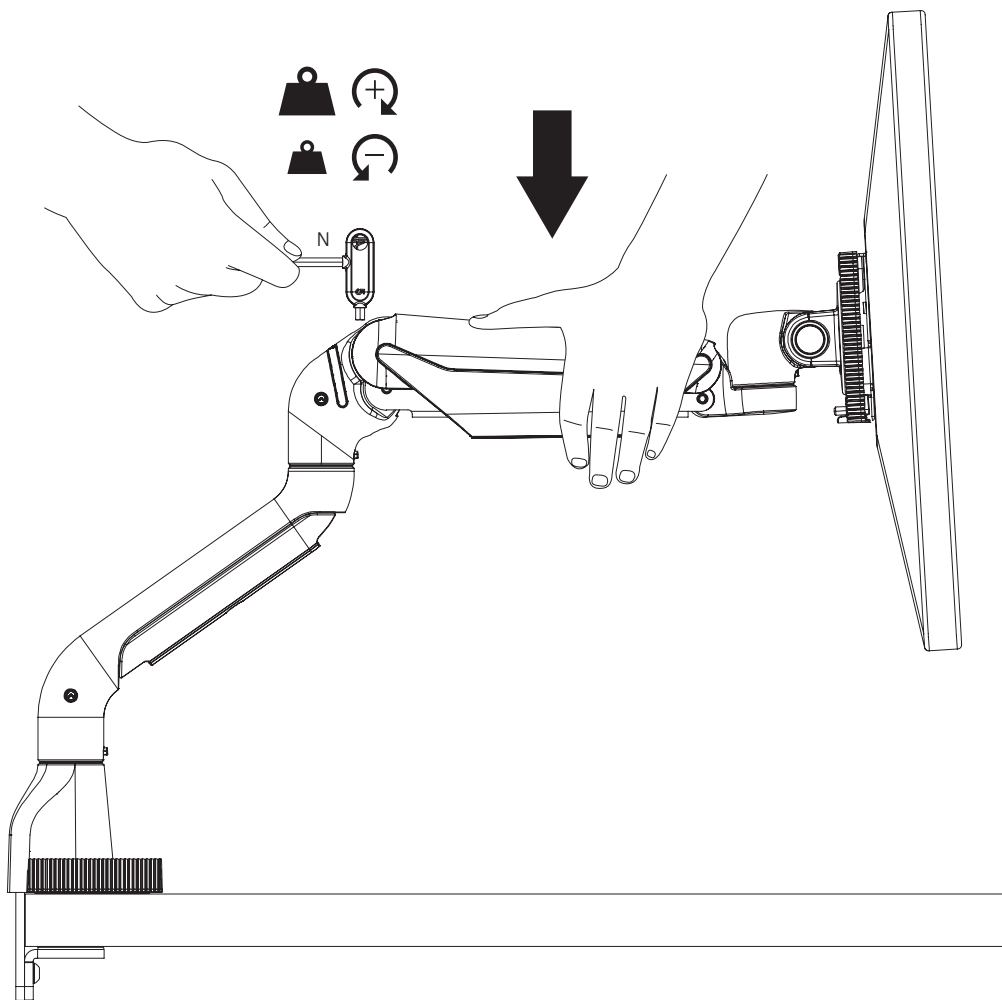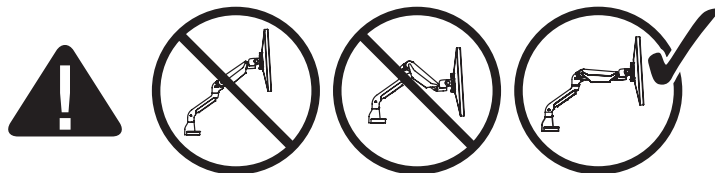

i TENSION INDICATOR


The tension indicator can be used to quickly set multiple arms that will be utilizing the same monitor weight to the correct tension.

- ① ~ 5 lbs. (2.2 kg)
- ② ~ 12 lbs. (5.4 kg)
- ③ ~ 23 lbs. (10.4 kg)
- ④ ~ 35 lbs. (15.9 kg)
- ⑤ ~ 45 lbs. (20.4 kg)


ROTATION STOP ADJUSTMENTS (CONTINUED ON NEXT PAGE)

22


180°

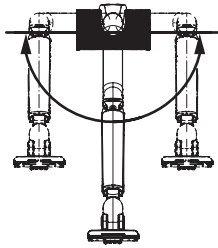

Arms must face forward to
Change the rotation stop range.

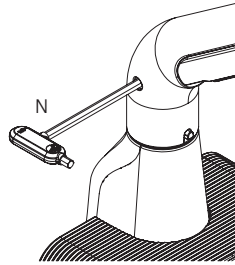


To set to a 180 degree range, use the
long end of the tool to push the rotation
stop switch to the side that shows a
straight icon.

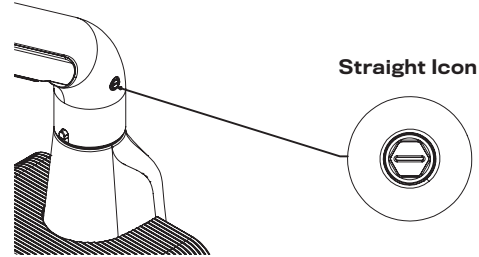


Straight Icon

When the straight icon is visible, the
rotation stop is set to 180 degrees.


90°

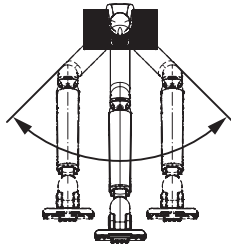

Arms must face forward to
Change the rotation stop range.

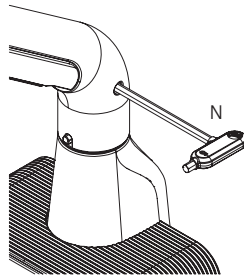


To set to a 90 degree range, use
the long end of the tool to push the
rotation stop switch to the side that
shows a corner icon.

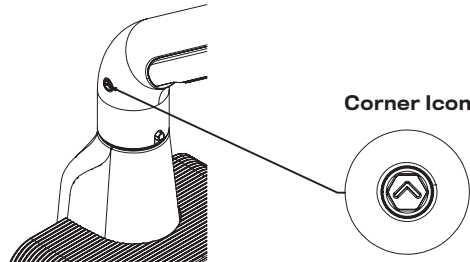


Corner Icon

When the corner icon is visible, the
rotation stop is set to 90 degrees.


360°

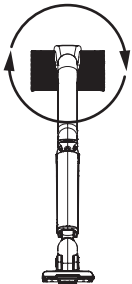

Arms must face forward to
Change the rotation stop range.

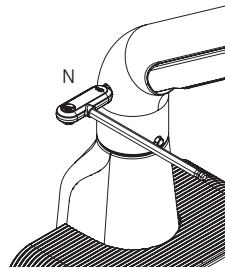

To remove the rotation stop, use the
short end of the tool to push the rotation
stop switch to the center position where
the hole is empty on both sides.

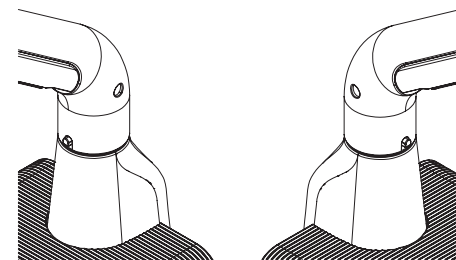

When no icon is visible on either side,
the rotation stop is removed, allowing the
arm to freely spin 360 degrees.


i ADJUSTMENT ACCESS

30°

When the arm is forward on the pole
or dual arm, the rotation stop switch is
blocked from access for adjustment.


In these cases the arm can be rotated
slightly (about 30°) to one side or the
other to allow the tool to access the
rotation stop switch.

ROTATION STOP ADJUSTMENTS - ANGLED MOUNT INSTALLATIONS




ANGLED MOUNT INSTALLATIONS


The rotation stop range can be rotated in increments of 45 degrees for angled mount installations.

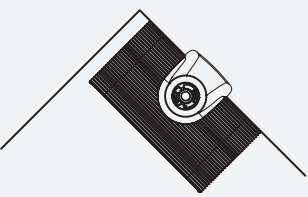


23

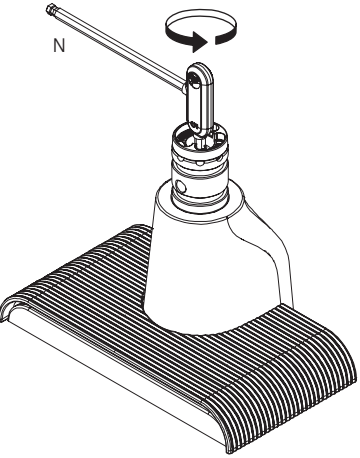


OR

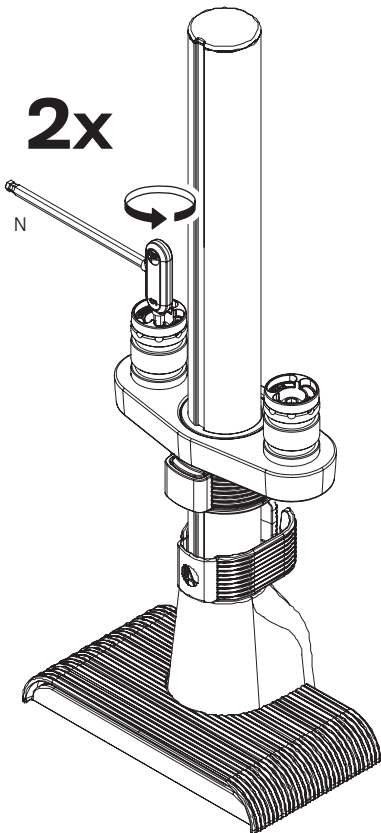


24

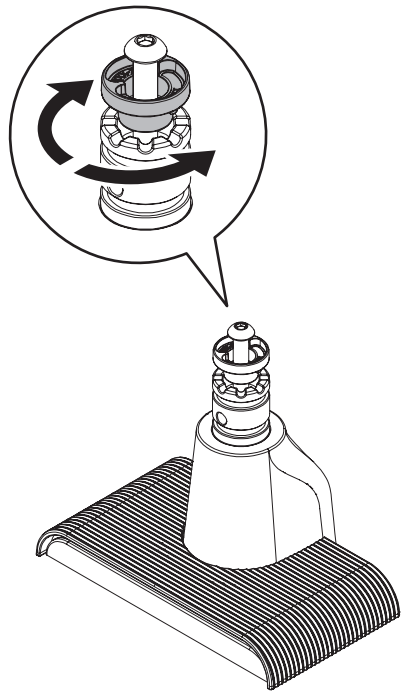

25

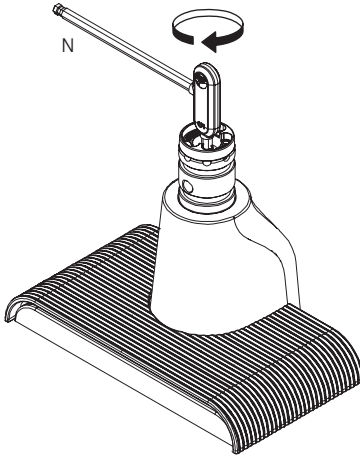

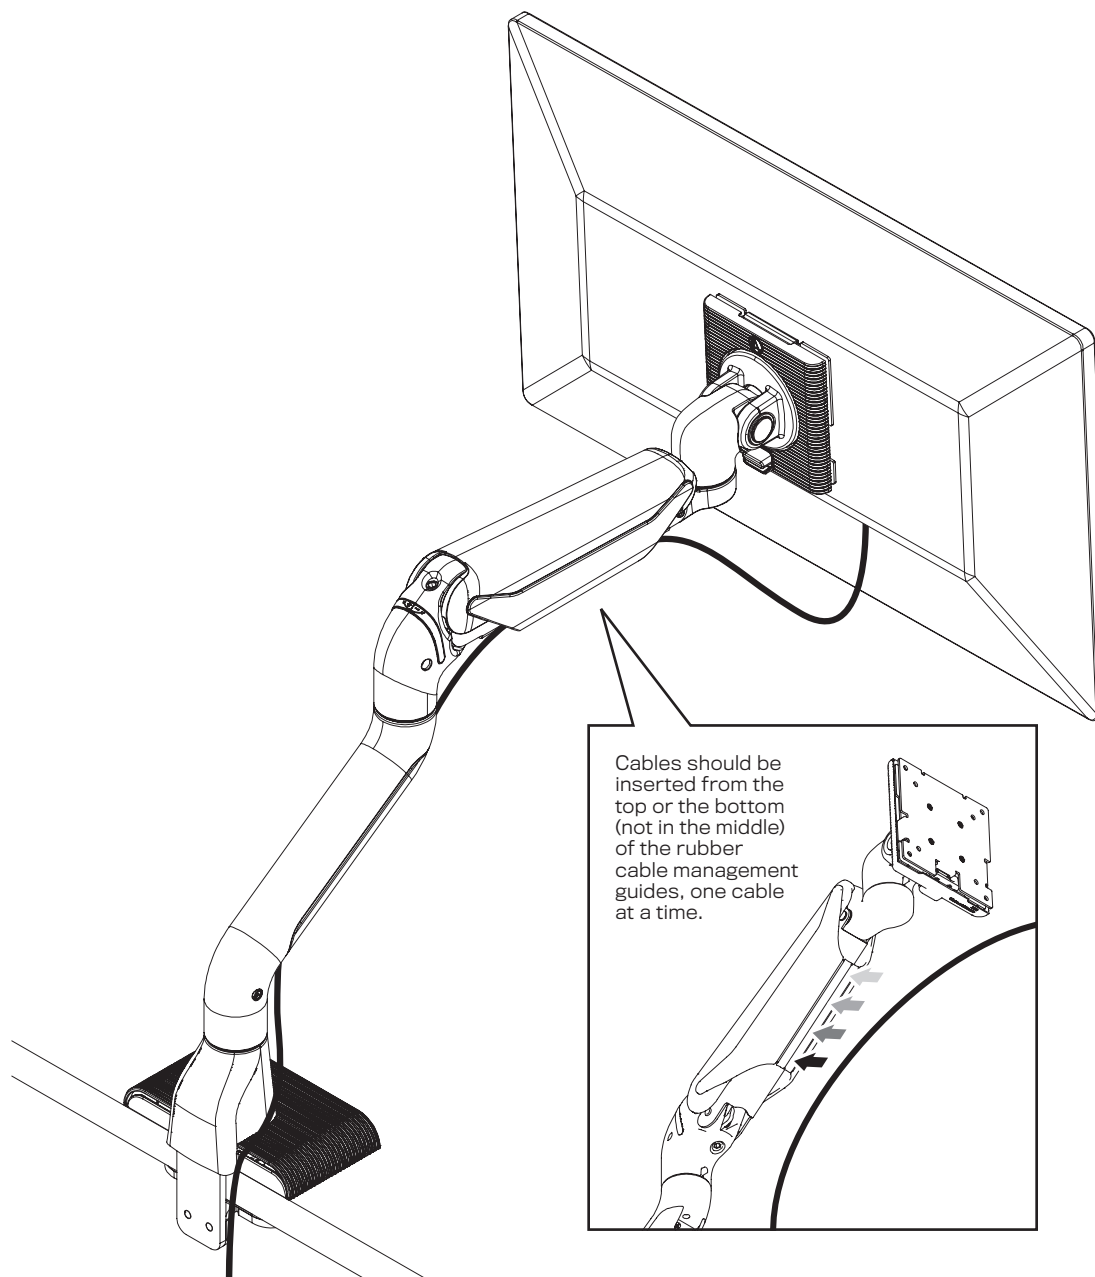

27

