Backrest Roller & Axle Pin Replacement Instructions

Models: OM5, OM5-XT, OM5 Executive Version

Tools required:

- Small flathead screwdriver or long nose pliers
- Rubber Mallet

Parts:

- (1) OM5 backrest roller & axle pin assembly Repair time:
 - Less than 5 minutes total



Figure 1 - Backrest Roller/Axle
Pin Assembly



Figure 2 - Backrest Roller

Directions

With both hands, place four fingers on each hand on each side of the J-bar. Then place your thumbs over the screws on either side of the backrest support. With your thumbs, press down AND forward to release the backrest.



step 2. Remove the old roller assembly. With the pliers, gently pry the assembly out. It's easier to start on the non-textured side of the axle pin.



- step 3. Make sure to clean any loose dirt and oils from the Backrest Roller Well and Backrest Roller Assembly (see figures 1 & 2.)
- step 4. Insert the new roller assembly into the well. Lightly tap the backrest roller with the rubber mallet. Make sure the axle pins are flush with the roller well.



Re-engage the backrest onto the J-bar. With the backrest leaning against the backrest support, gently press down on the backrest until it "clicks" into place.