

## Back Tilt Lever Replacement Instructions

Models: CLSXX, BC44, BC48, PA55, PA57

---

Tools required:

- Small flathead screwdriver
- Pliers

Parts:

- (1) Lever

Repair time:

- Approximately 5 minutes total



Figure 1 – Back Tilt Lever with pin and c-clip

---

## Directions

**step 1.** *Remove the c-clip and pin by using the pliers and screw driver.*

**step 2.** *Remove and discard the broken lever.*

**step 3.** *Install the new lever.* Make sure the hook on the lever enters the tension gap in the mechanism.



**step 4.** *Insert the pin and attach the c-clip.*

**step 5.** *Test the lever to ensure proper function.*