

VALUE ELECTRIC HEIGHT ADJUSTABLE DESK

ASCENT



OPERATING INSTRUCTIONS

- Make sure no obstacles are in the desk's path.
- Make sure the work surface is not touching any walls.
- Make sure all cords are the appropriate length to accommodate the change in height.
- Plug the power cord into a 110v outlet.
- Use the up/down buttons to adjust your work surface from 25"H to 50"H.
- To program the four presets: Use the up/down buttons to select a desired height.
 - > Press "S" and release.
 - > Select a number 1 – 4, press and release.
 - > Follow the same procedure until you've selected 4 preset heights.
- Once a preset button is pushed, the desk will move to the programmed height and stop.
- Your desk is now ready to use.

TROUBLESHOOTING GUIDE

- If the display reads "HOT", let the base cool down for 20 minutes.
- If your desk is not functioning properly or the digital display reads "Er1" or "Er2" it may need to be reset.
- Unplug the power from the wall for 20 seconds.
- Make sure all the wired connections are secure at the legs and at the control box.
- Plug the power cord back into a 110v outlet
- Push and hold the DOWN button until it reaches its lowest height, slightly rises and stops.
- Your desk is now ready to use.