 




Sierra Series Workcenters Special Settings

1 Initialize legs if you have not done so already


After all the legs and the switch are connected *and* the power cord has been plugged in, hold the **down** arrow on the switch until the legs make a short motion down and then back up. This initializes and synchronizes the table legs.

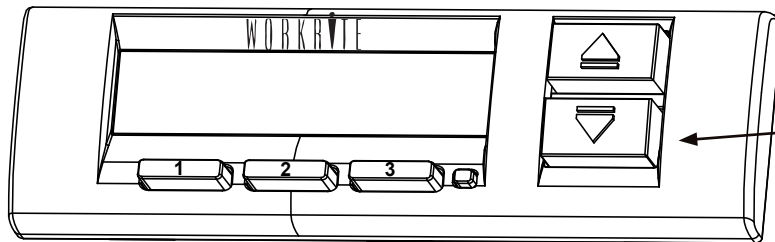

2 Change display from inches to centimeters

- a Simultaneously press and hold 1 & 2 and the Up Arrow until the readout changes to show "5 5".
- b Press the "SET" button with a ballpoint pen (NOT paperclip) to change from inches to centimeters.

To return to inches, repeat the same process.

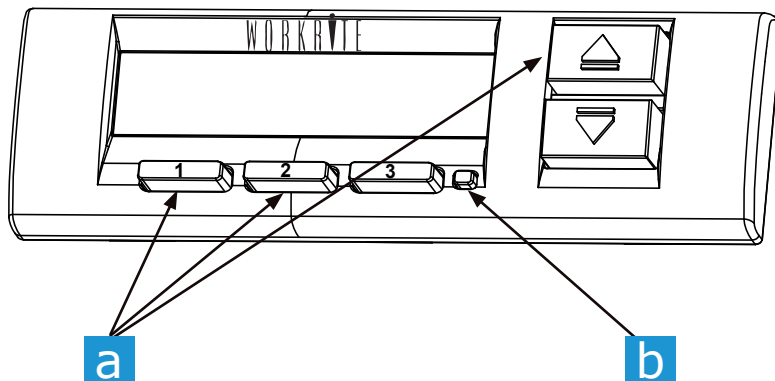


3 Adjust Starting Digital Height Readout

(Use if you have a worksurface that is not 1½" thick, causing inaccurate readout of the lowest height)

- a** Lower the table to the lowest position and measure the height from the floor to the top of the worksurface. (not shown)
- b** Press the "SET" button with a ballpoint pen (Do NOT use a paperclip - it may damage the electronics).
- c** Press and hold "Down" button until display flashes.
- d** Press "Up" or "Down" button until display shows actual measured height for the worksurface.
- e** Press the "SET" button with a ballpoint pen (NOT a paperclip).

Note: Height readout must be readjusted separately for inches and centimeters.

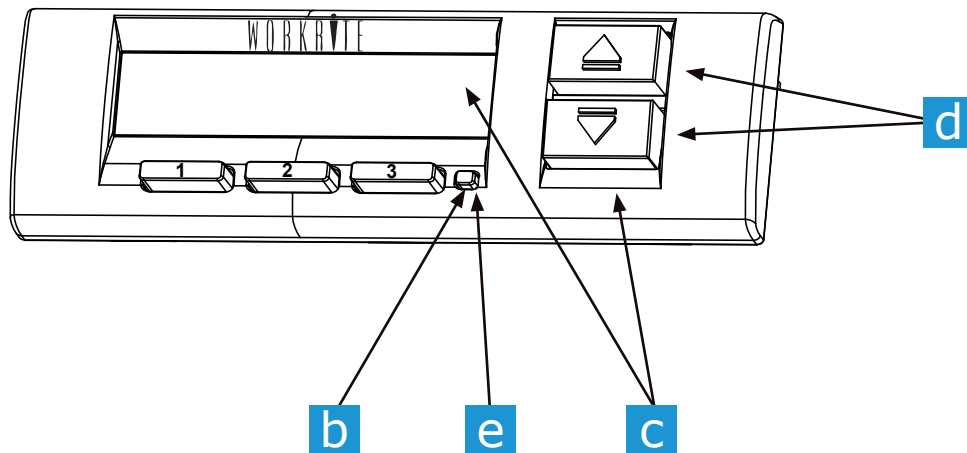

4 Table Locking Feature

- a** To Lock:
Press and hold the "SET" button with a ballpoint pen until the control box clicks two times – The table will now be locked and will not move when any buttons are pushed. A padlock icon will appear on the display when the table is locked.
- b** To Unlock:
Press 1, then 2 and then 3 to unlock. *The default unlock code is always 1-2-3.

