




# #89821 Role Model




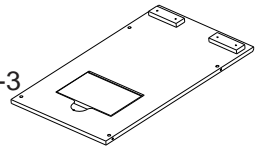
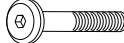
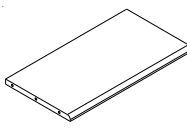
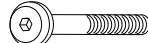
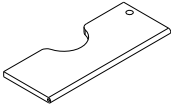

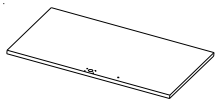

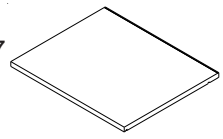

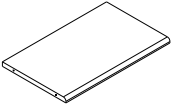

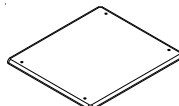


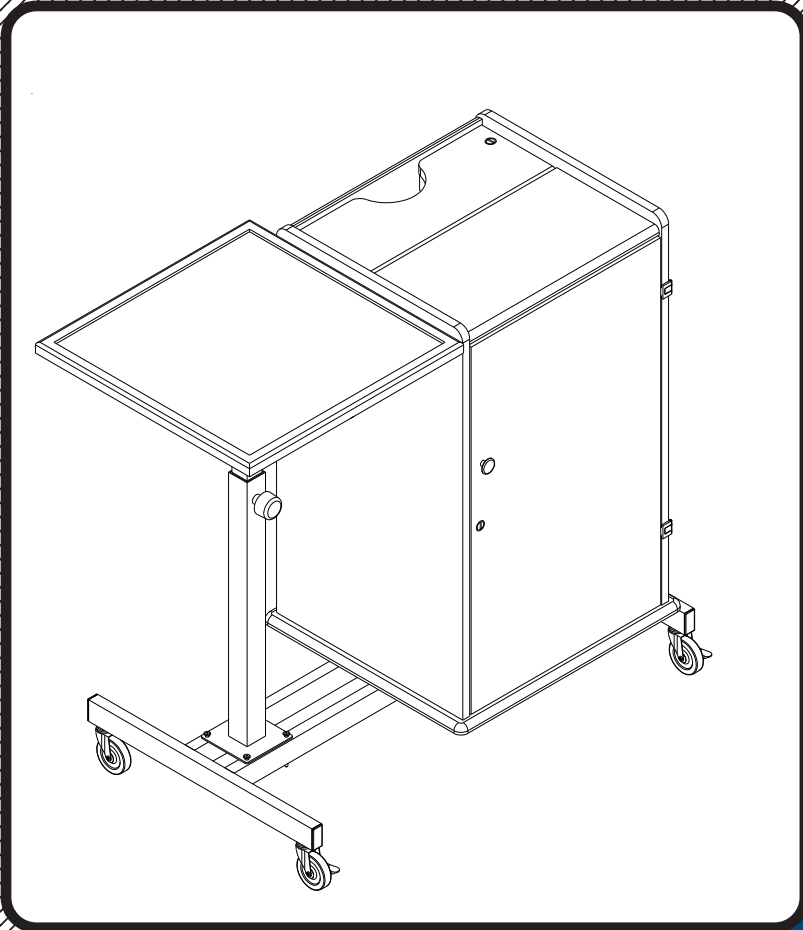



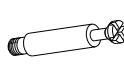
 
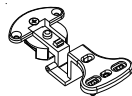
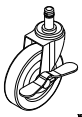

Portable AV Center



**Assembly Instructions**





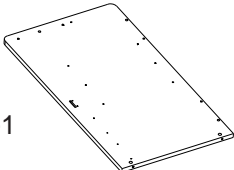
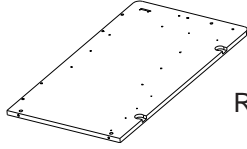



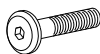










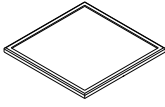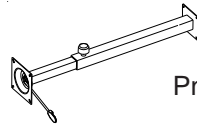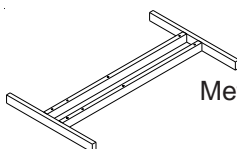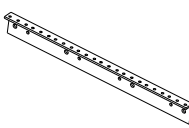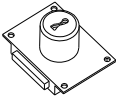
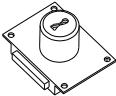


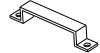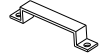

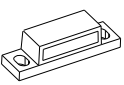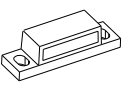



# #89821

  
# Role Model Portable AV Center

Part	Drawing	Description	Qty	Part	Drawing	Description	Qty
P-1		Left Side Panel	1 EA	<b>Hardware List</b>			
P-2		Right Side Panel	1 EA	A		Socket Screw M6X15mm	4 EA
P-3		Back Panel w/door	1 EA	A1		Socket Screw M6X55mm	4 EA
P-4		Top Panel	1 EA	A2		Socket Screw M6X60mm	4 EA
P-5		Top Door	1 EA	A3		Wood Screw #6x5/8"	18 EA
P-6		Front Door	1 EA	A4		Wood Screw #4x1/2 (magnet & Catch)	4 EA
P-7		Removable shelf	3 EA	A5		Screw (Door Knob)	2 EA
P-8		Keyboard Shelf	1 EA	A6		Wood Screw #8x3/4 (Pan Head For Rack Rails)	8 EA
P-9		Bottom Panel	1 EA	A7		Wood Screw -Strike Plate	1 EA
				A8		Wood Screw #4x1/2 (locks)	12 EA
				A9		Screw M6X25 (For Optional Electric Assy.)	2 EA
				B		Keyboard Slide	2 EA
				C		Shelf Support Pins	12 EA
				D		Cam Lock	10 EA
				E		Cam Post	10 EA
				F		Wood Dowel	12 EA
				G		Door Hinge	2 EA
				H		3" Locking Caster (for front)	2 EA
				J		3" Caster (for Back)	2 EA

# #89821

# Role Model Portable AV Center

Part	Drawing	Description	Qty	Part	Drawing	Description	Qty
P-10		LCD Shelf	1 EA	<b>Hardware List</b>			
P-11		Pneumatic Column	1 EA				
P-12		Metal Base	1 EA				
P-13		Rack Rail	2 EA				
K		Door Lock	3 EA	K		Door Lock	3 EA
K1		Lock Ring	3 EA	K1		Lock Ring	3 EA
K2		Lock Catch	1 EA	K2		Lock Catch	1 EA
L		Key	6 EA	L		Key	6 EA
M		Door Magnet	1 EA	M		Door Magnet	1 EA
M1		Metal Strike Plate	1 EA	M1		Metal Strike Plate	1 EA
N		Metal Door Knob	1 EA	N		Metal Door Knob	1 EA
N		Wood Door Knob	1 EA	N		Wood Door Knob	1 EA
P		Plastic Spring Button (Installed in Top Door(P-5)) (Installed in door in Back Panel (P-3))	1 EA	P		Plastic Spring Button (Installed in Top Door(P-5)) (Installed in door in Back Panel (P-3))	1 EA
R		Allen Wrench	1 EA	R		Allen Wrench	1 EA
S		Caster Wrench	1 EA	S		Caster Wrench	1 EA
S1		Phillips Screwdriver	1 EA	S1		Phillips Screwdriver	1 EA
T		Adjustment Knob (Factory Installed on Column (P-11))	1 EA	T		Adjustment Knob (Factory Installed on Column (P-11))	1 EA

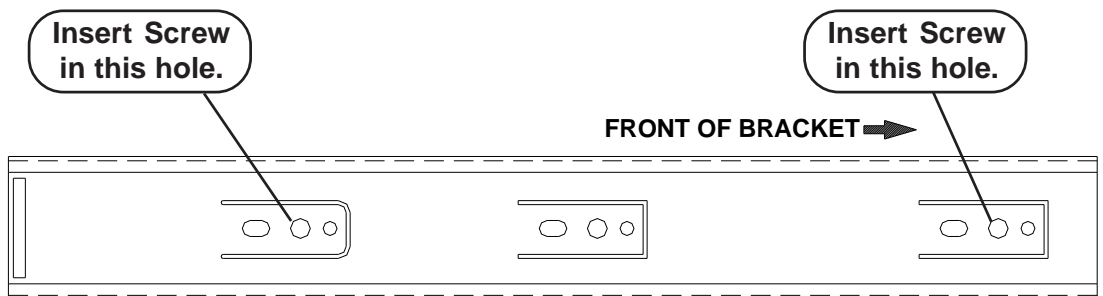


**Keyboard Slide Detail**

# #89821 Role Model Assembly Diagram



## To Assemble:

1. Identify and Separate all the Parts and Hardware.
2. Place the Left Side Panel (P-1) with the Predrilled holes facing up. Attach 1 Keyboard Slide (B) to Left Side Panel (P-1) and secure using 3 Wood Screws (A3) as shown in illustration # 1.  
**(See Slide Detail on Page 3)**
3. Install 3 each Cam Posts (E) in the 3 threaded insert nuts (Pre-installed) as shown in illustration # 1.
4. Install 4 each Wood Dowels (F) in the 4 Holes as shown in illustration # 1.
5. Install 2 Cam Locks (D) into the 2 large holes as shown in illustration # 1

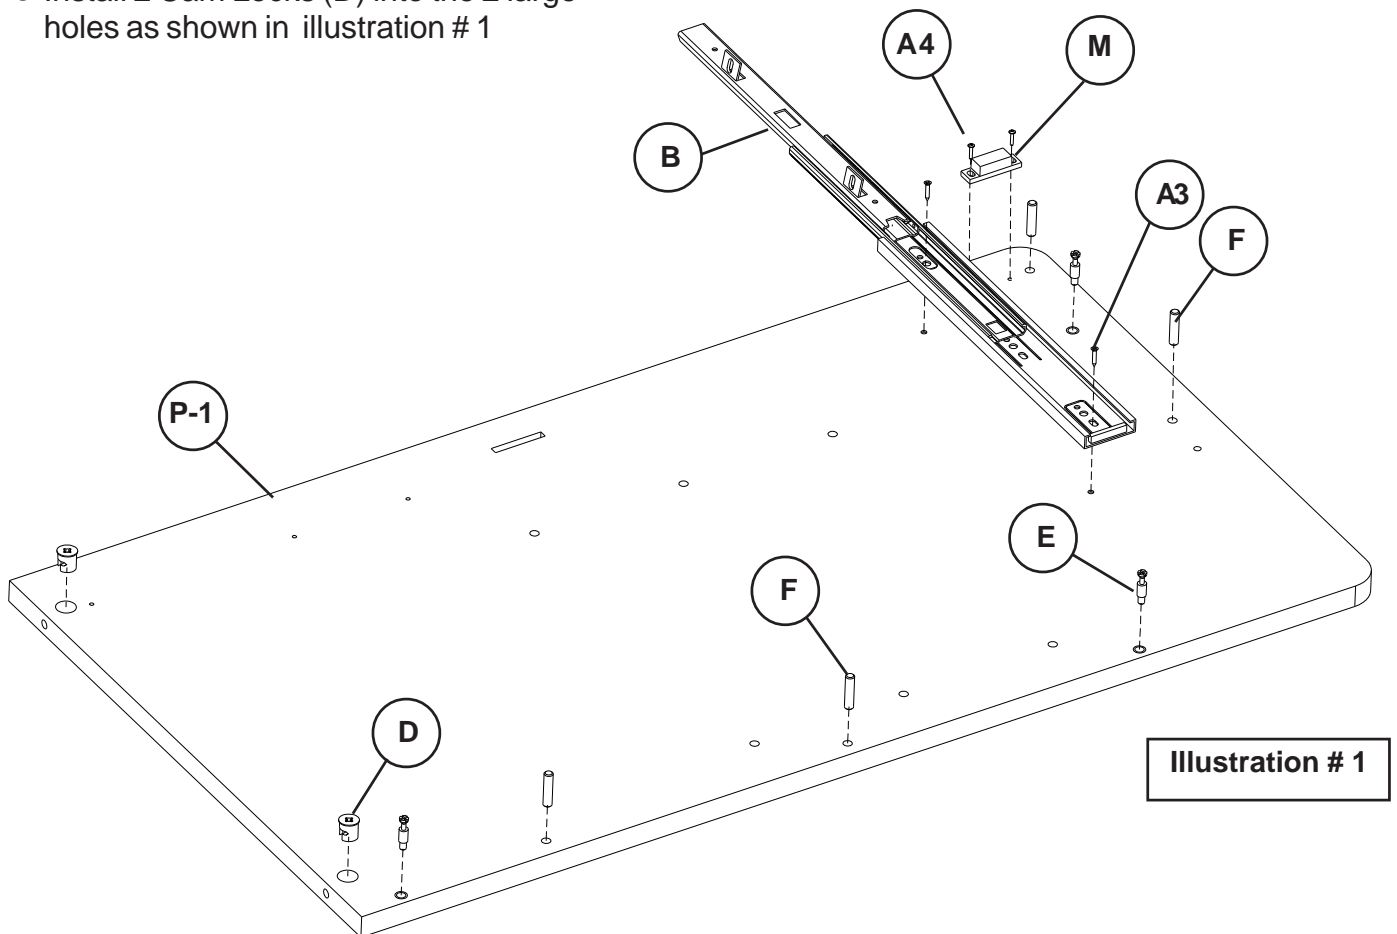


6. Attach 1 each Door Magnet (M) to the Left Side Panel (P-1) and secure using 2 Wood Screws (A4) as shown in illustration # 1.

7. Place the Right Side Panel (P-2) with the Predrilled holes facing up. Attach 1 Keyboard Slide (B) to right Side Panel (P-2) and secure using 2 Wood Screws (A3) as shown in illustration # 2. **(See Slide Detail on Page 3)**

8. Install 3 each Cam Posts (E) in the threaded insert nuts (Pre-installed) as shown in illustration # 1.

9. Install 4 each Wood Dowels (F) in the 4 Holes as shown in illustration # 2.

10. Install 2 Cam Locks (D) into the 2 large holes as shown in illustration # 2.

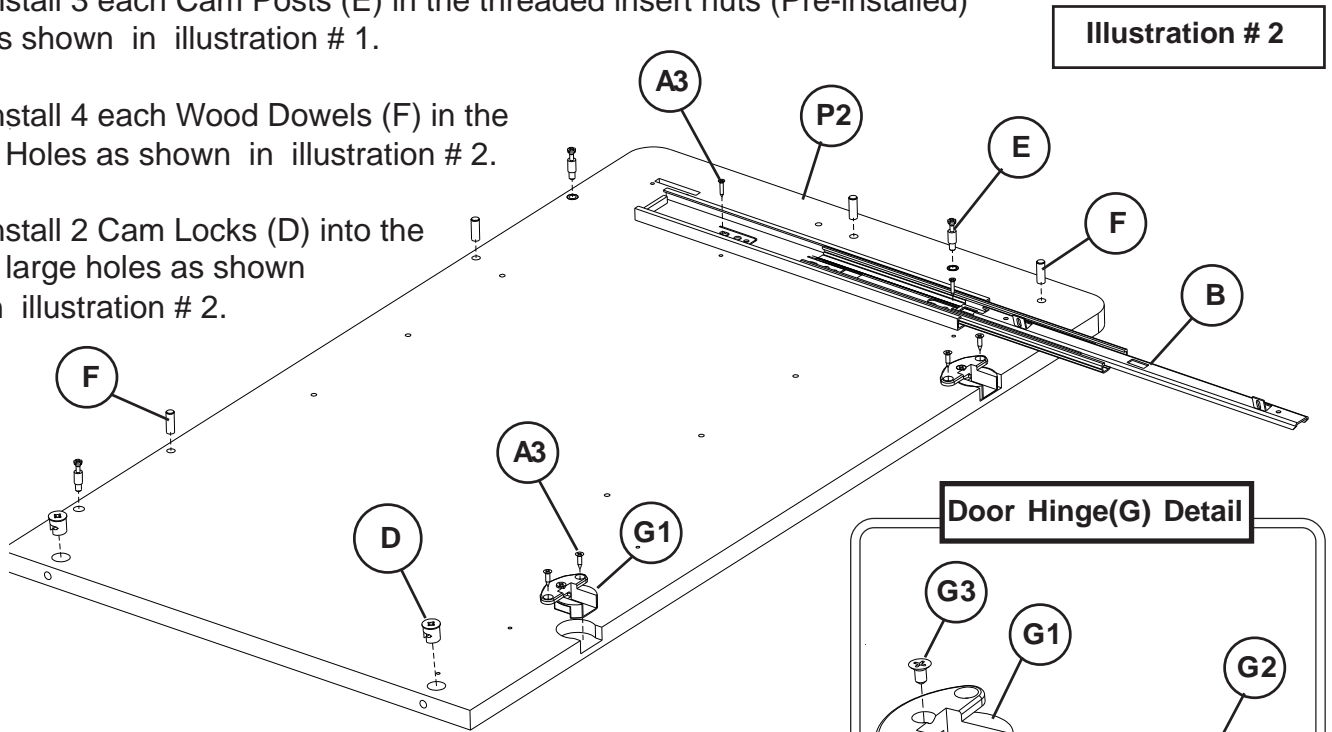


11. Separate parts of Door Hinge(G) by loosening Screw (G3) as shown in Door Hinge Detail. Attach 2 each (G1) to the right Side Panel (P-1) using 4 screws (A3) as shown in illustration # 2.

12. Place the Front Door (P-6) with the 4 Screw Holes facing up and insert 1 Lock (K) into the large hole as shown in illustration # 3. Press Lock Ring (K1) over protruding end of Door Lock (K) as shown in illustration #3. Secure using 4 Wood Screws (A8) as shown in illustration # 3.

13. Attach 2 each (G2) to the Front Door (P-6) using 2 each (G4) and 4 screws (A3) as shown in illustration # 3. **Do not Tighten all the way.**

14. Attach Metal Door Knob (N) to Front Door (P-6) using 1 screw (A5).

15. Attach 1 Metal Strike Plate (M1) to Front Door (P-6) using 1 screw (A7).

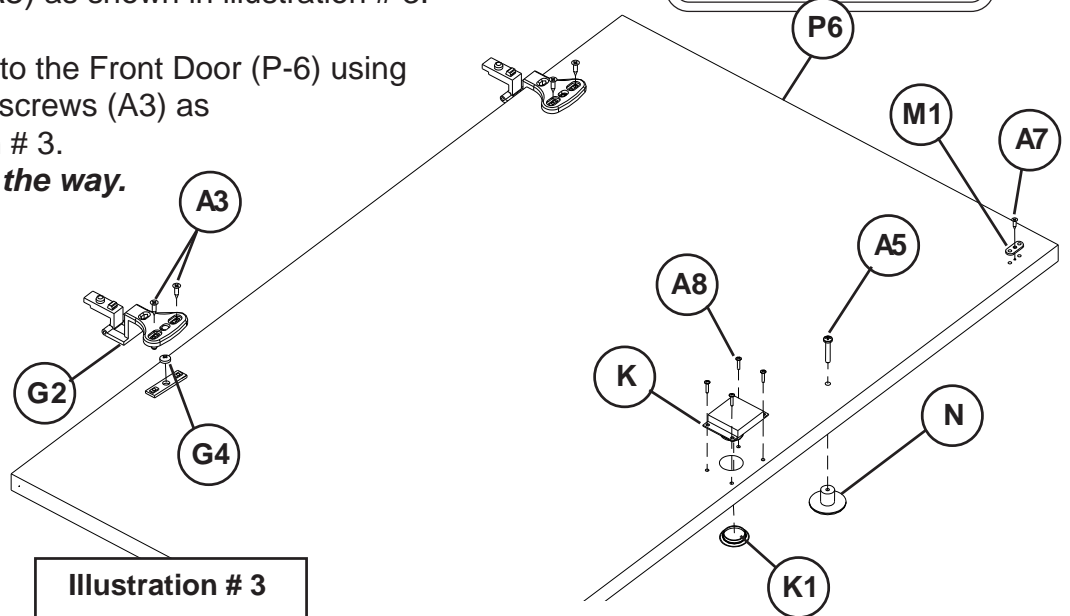

16. Place the Back Panel (P-3) with the Holes facing up and install 4 each Cam Locks (D) into the large holes (Pre-installed) as shown in illustration # 4.

17. Attach Wood Door Knob (N1) to Door in Back Panel (P-3) using 1 each (A5) screw.

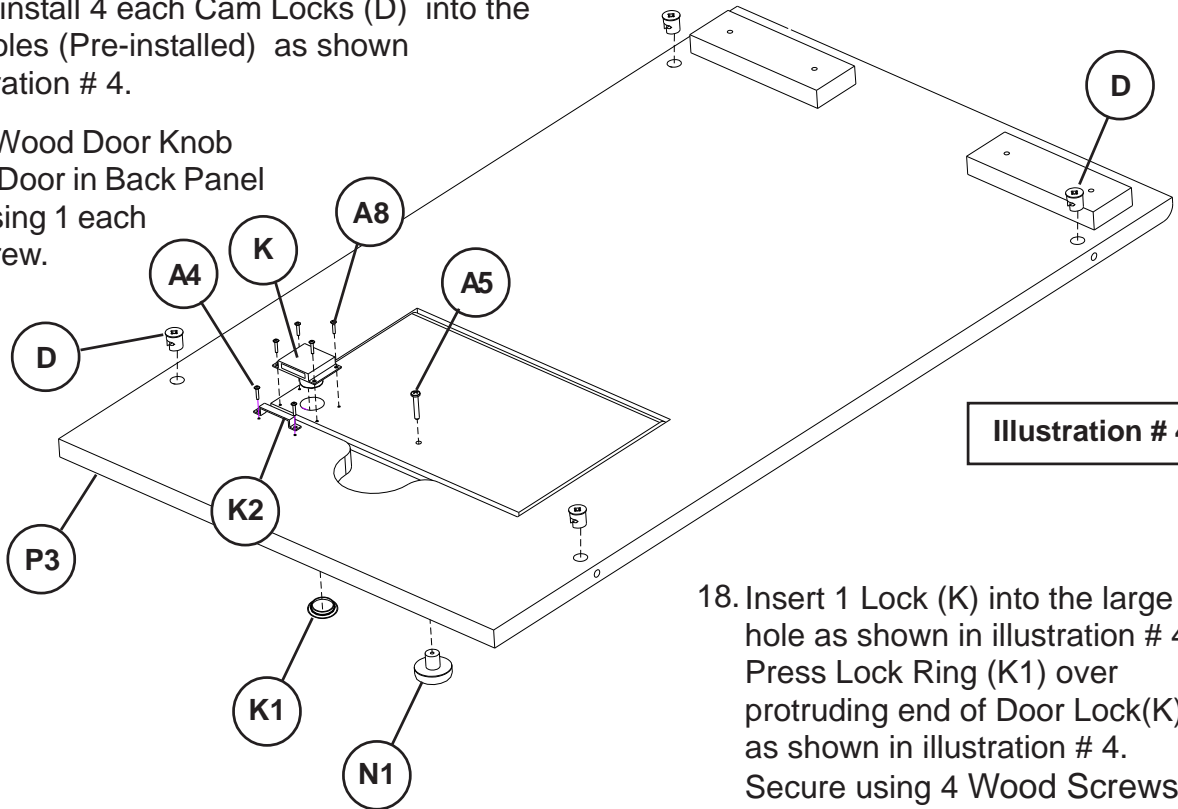


Illustration # 4

18. Insert 1 Lock (K) into the large hole as shown in illustration # 4. Press Lock Ring (K1) over protruding end of Door Lock(K) as shown in illustration # 4. Secure using 4 Wood Screws (A8) as shown in illustration # 4.

19. Attach Door Catch (K2) to the inside of Door in Back Panel (P-3) using 2 each screws (A4).

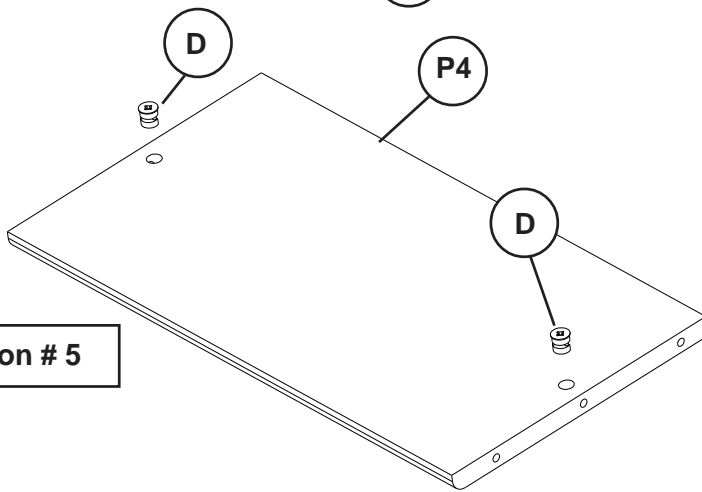


Illustration # 5

20. Place the Top Panel (P-4) with the Pre-drilled Holes facing up and install 2 Cam Locks (D) into the 4 large holes as shown in illustration # 5.

21. Place the Bottom Panel (P-9) with the Pre-drilled Holes facing up. Install 4 each Cam Posts (E) in the 4 threaded insert nuts (Pre-installed) as shown in illustration # 6.

22. Install 4 each Wood Dowels (F) in the 4 Holes as shown in illustration # 5.


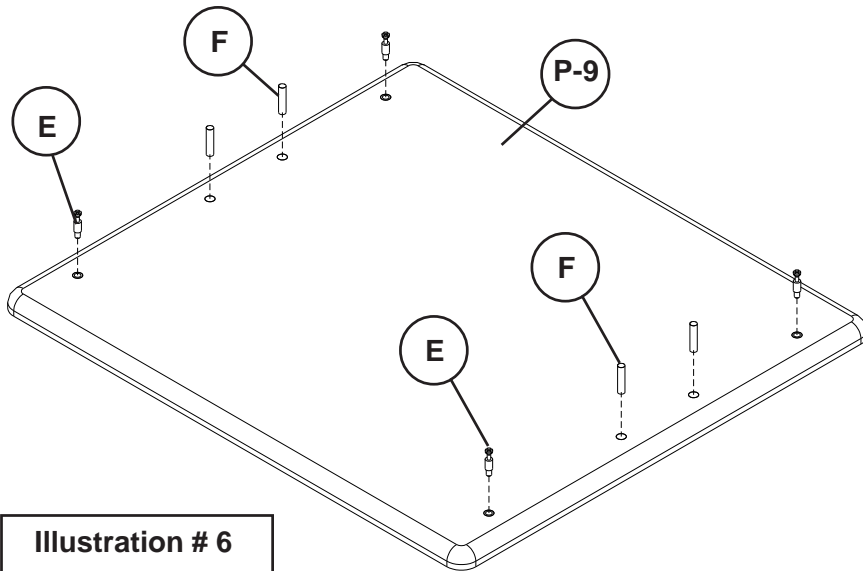


Illustration # 6



23. Place the Top Door (P-5) with the 4 small holes facing up and insert 1 Lock (K) into the large hole as shown in illustration # 7. Press Lock Ring (K1) over protruding end of Door Lock(K) as shown in illustration # 7.  
Secure using 4 Wood Screws (A8).

Illustration # 7

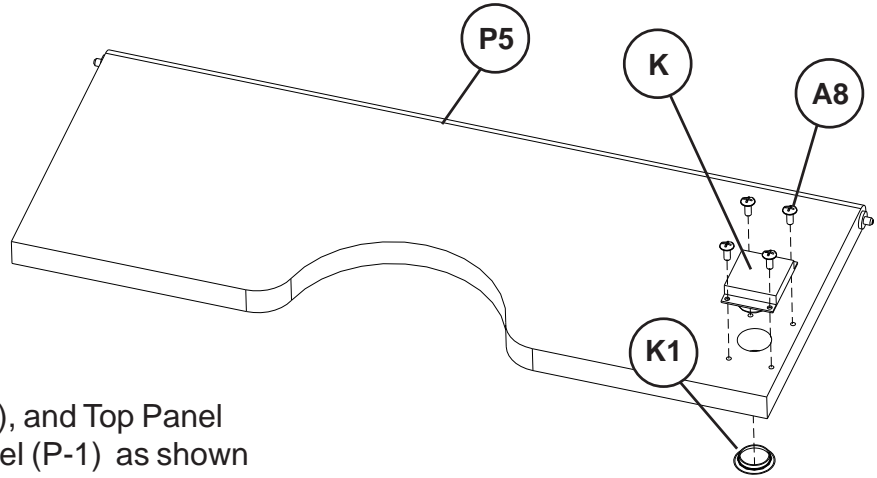

24. Attach Back Panel (P-3), and Top Panel (P4) to the Left Side Panel (P-1) as shown in illustration # 8. Secure by turning the Cam Locks (D) 1/4" Turn until they lock.

Illustration # 8

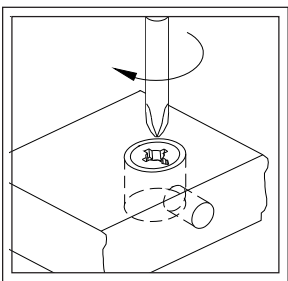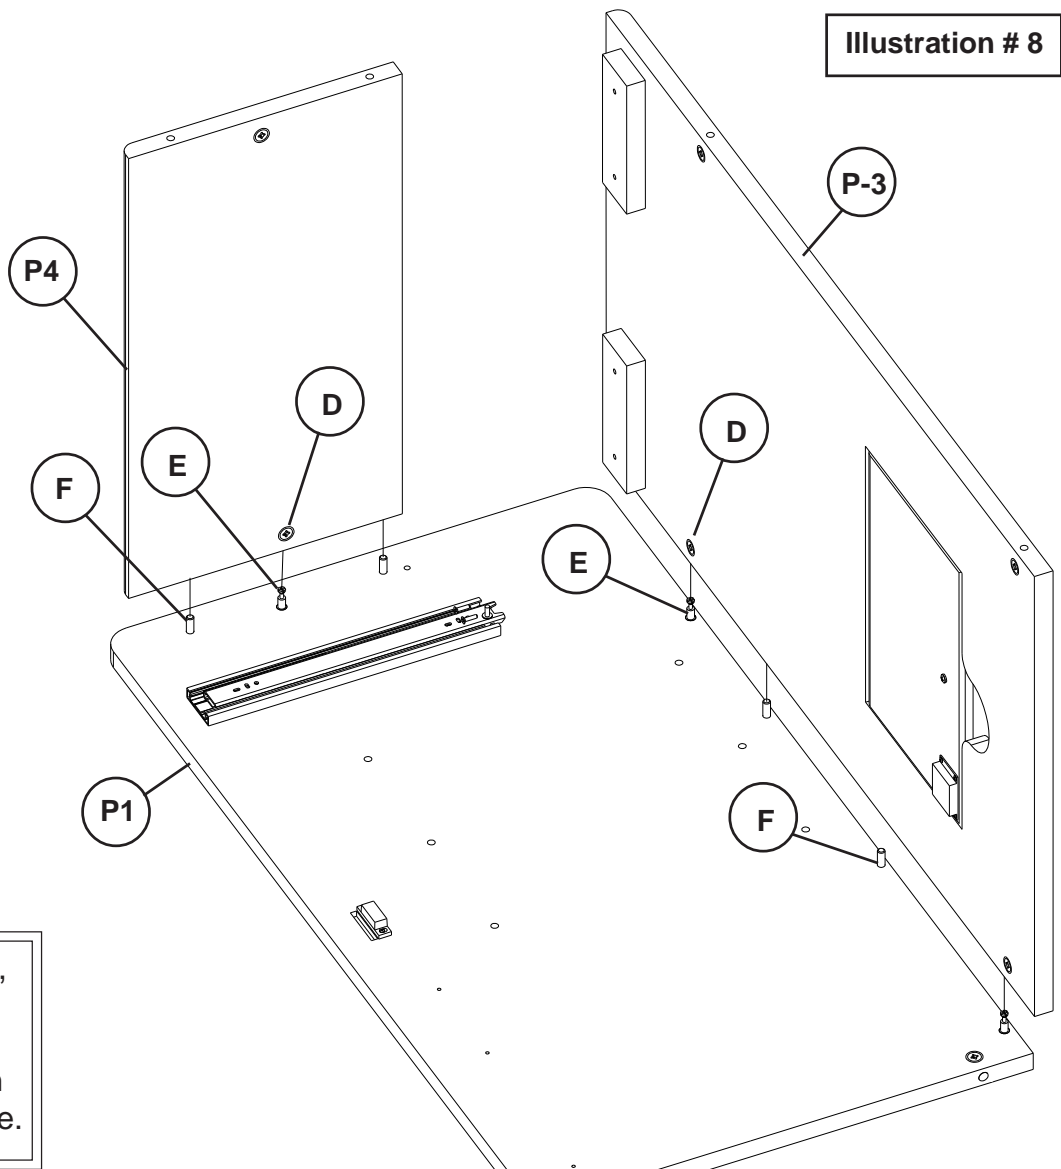

To Secure Cam Locks, Insert Large Phillips Head Screwdriver and turn Cam Lock 1/4 turn (90 degrees) clockwise.

Illustration # 9

25. Attach Right Side Panel(P-2) to the Back Panel (P-3), and Top Panel (P4) as shown in illustration # 9. Secure by turning the Cam Locks (D) 1/4" Turn until they lock.


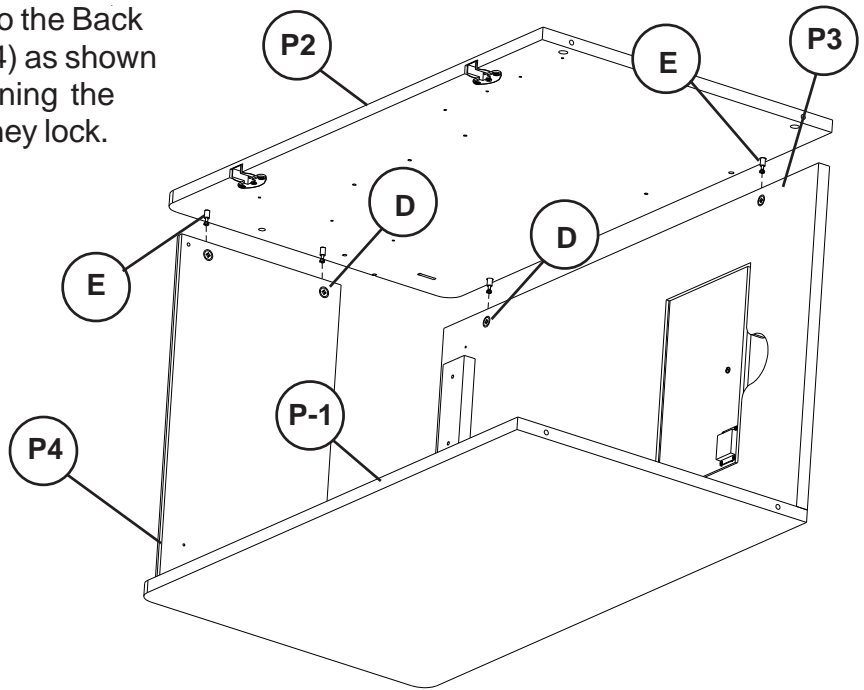


Illustration # 10

26. Attach 2 Locking Casters (K) to the front, and 2 Casters (L) to the back of the unit. Tighten all Casters using Caster Wrench (M).



27. Attach Bottom Panel (P-9) to the Metal Base (P-12) using 4 each screws (A2) as shown in illustration # 10. Tighten these 4 Screws using Allen Wrench (R).

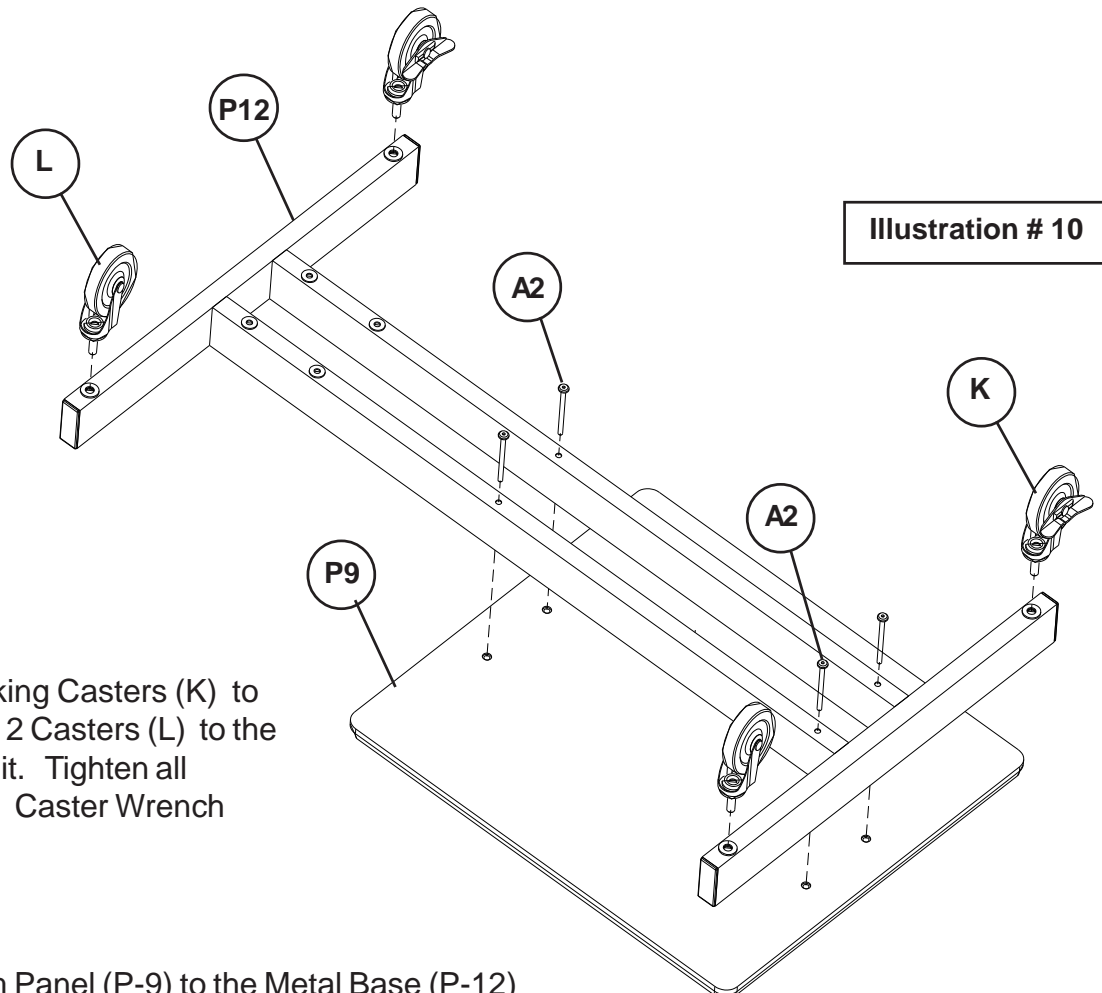

**Illustration # 11**


28. Slide Left Side Panel(P-1) and Right Side Panel (P-2) over Cam Posts(E) in Bottom Panel (P-9) as shown in illustration # 11. To secure Cam Locks, Insert Large Phillips Head Screwdriver and turn Cam Lock 1/4 turn (90 degrees) clockwise.

29. Locate 2 each Spring Buttons (P) in the ends of the Top Door (P-5).



30. Insert the end of Spring Buttons (P) into the holes in Left Side Panel (P-1) and the Right Side Panel (P-2) as shown in illustration # 12B.

31. To assemble keyboard, press Plastic Clips as shown by arrows in illustration # 12A to release inner keyboard slide.


32. Turn Keyboard Shelf (P-8) over and attach 2 Inner Keyboard Slides (B) using 4 each screws (A3) as shown in illustration # 12A.

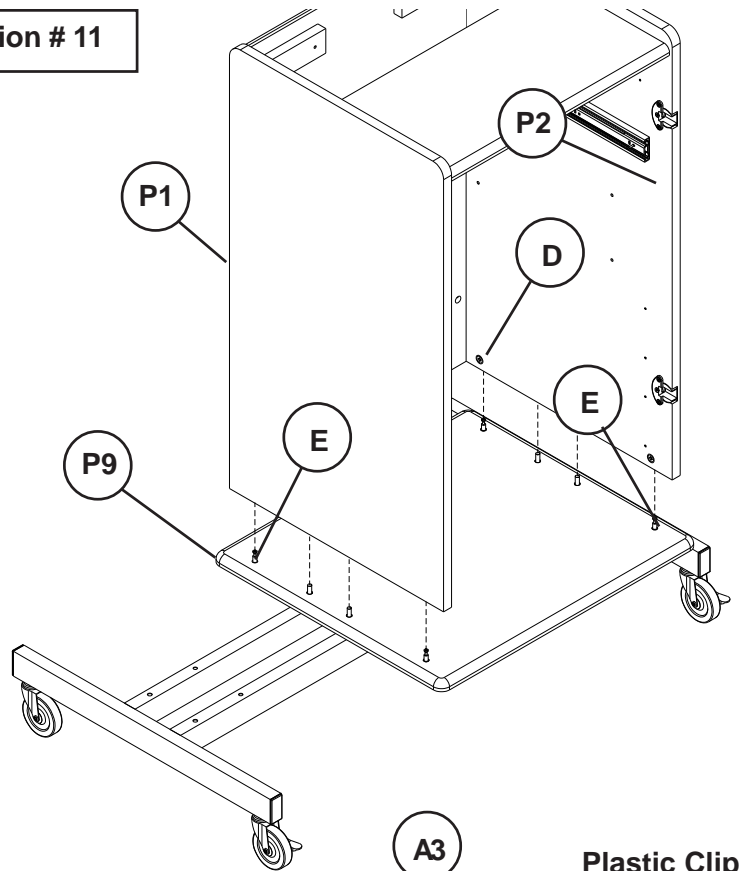

**Illustration # 12A**

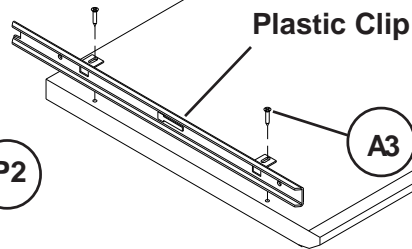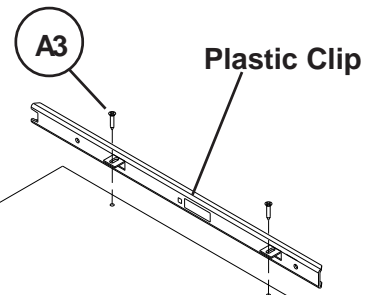


33. Slide Keyboard Shelf Assembly back into the Keyboard Slides as shown in illustration # 12B.

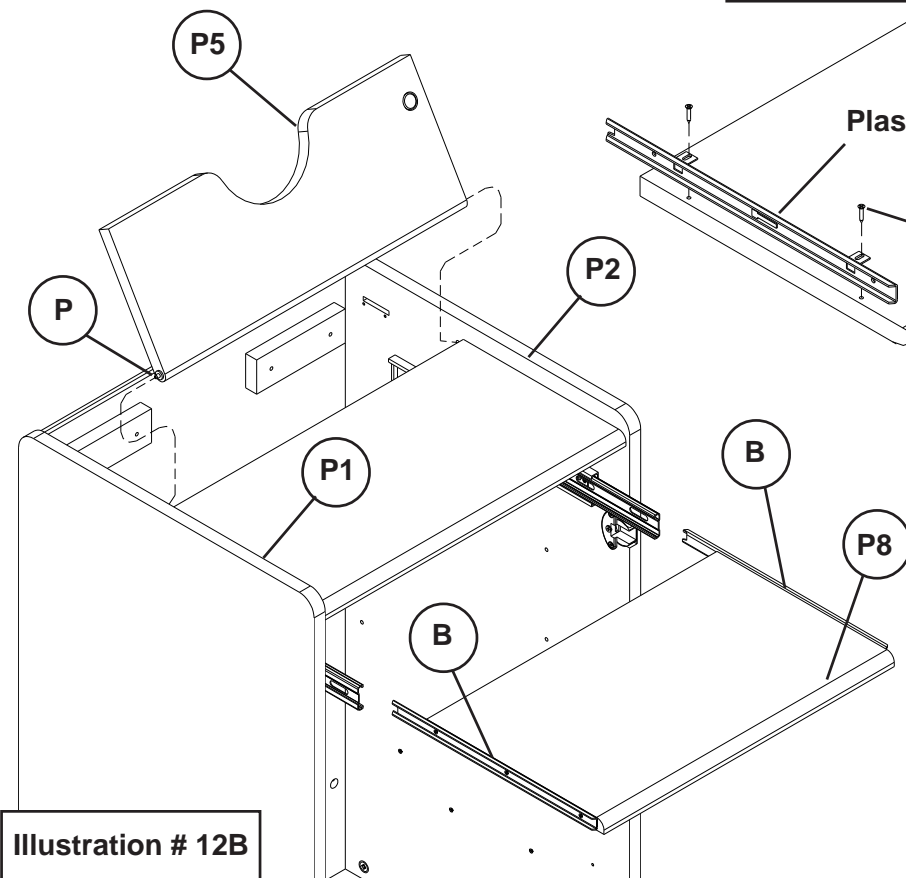

**Illustration # 12B**


**Illustration # 13**

34. Attach the Pneumatic Column (P-11) to the Metal Base (P-12) using 4 each screws (A1) as shown in illustration # 13. *(Finger tighten only.)*
35. Attach the LCD Shelf (P-10) to the Pneumatic Column (P-11) using using 4 each screws (A) as shown in illustration # 13. *(Finger tighten only.)*

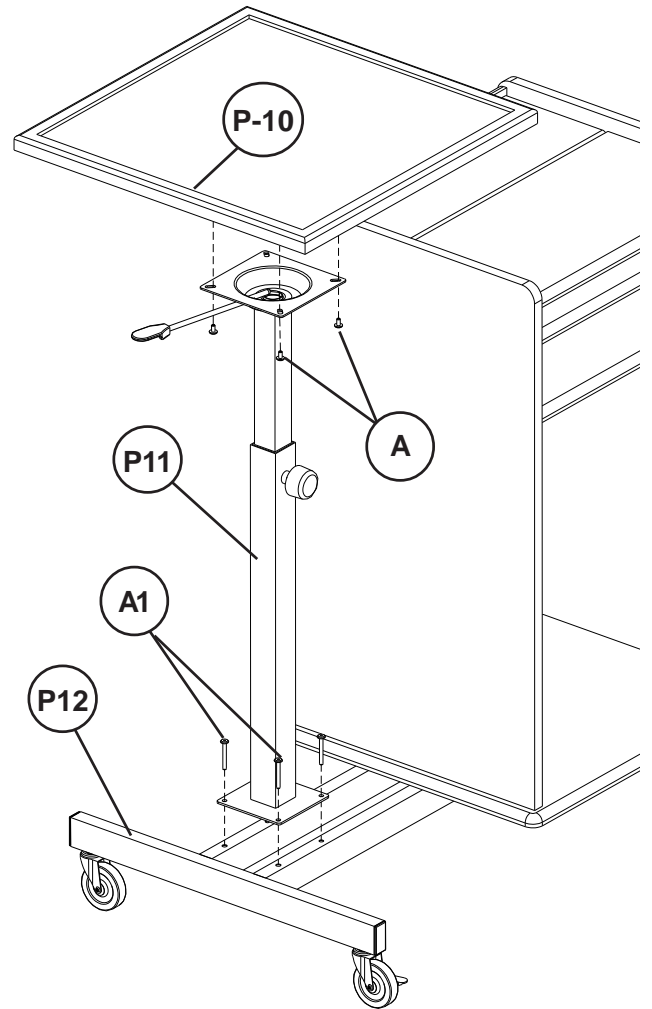

**Missing Parts or UPS Damaged Parts**

For Your Convenience you can  
EMAIL us at  
**[furniture@baltinc.com](mailto:furniture@baltinc.com)**  
24HOURS 7 DAYS A WEEK

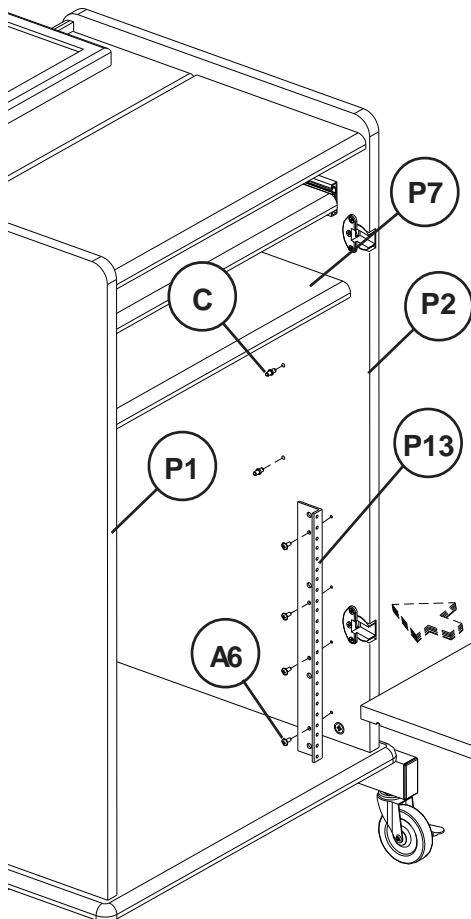


36. Attach 2 each Rack Rails (P-13) to the Left Side Panel (P-1) and the Right Side Panel (P-2) using 8 each screws (A6) as shown in illustration # 14. *(Finger tighten only.)*
37. Place 12 Shelf Support Pins (C) in each of the two Side Panels (P-1 & P-2) at desired shelf height. Place Removable Shelves (P-7) on Shelf Support Pins (C).




**Illustration # 14**

38. Align Front Door (P-6) With the Right Side Panel (P-2) as shown in illustration #15A & 15B.  
 To Adjust hinge spacing, insert Screwdriver in center hole on Hinge (G2) and turn. Slide Hinge (G2) into (G1) and tighten screw (G3).


39. Secure Door Hinges (G2) to the Front Door (P-6) using 2 each Short Wood Screws (A3) as shown in illustration #15A & 15B.

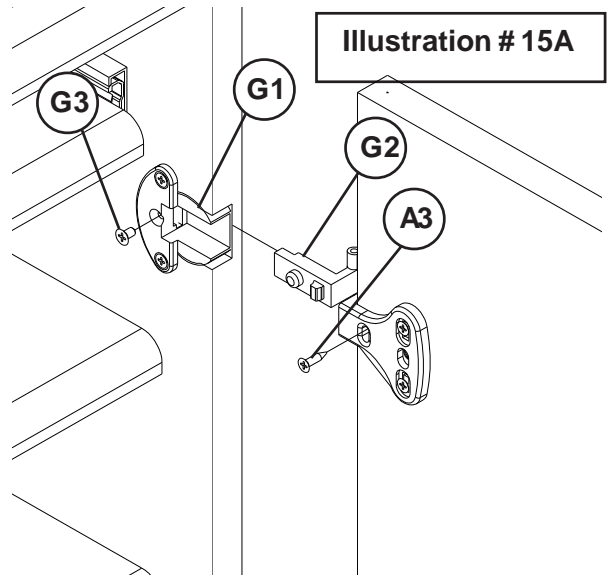

**Illustration # 15B**

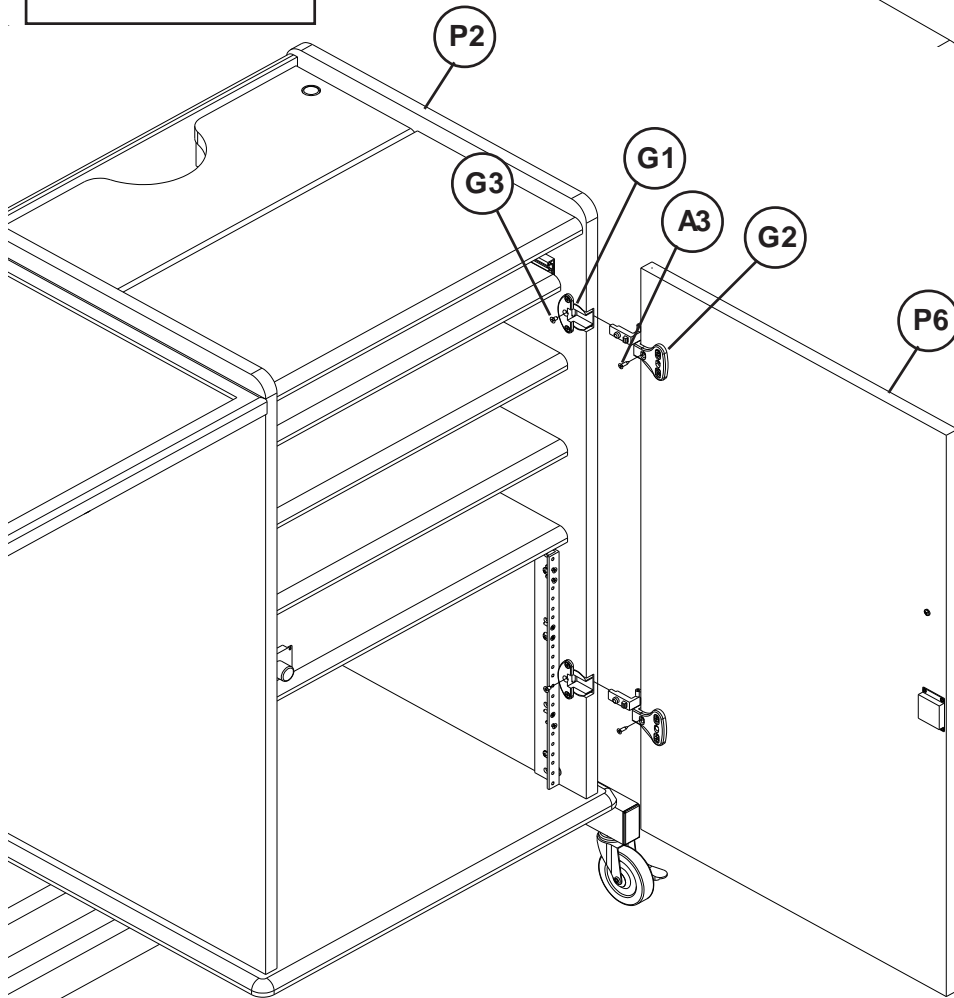

Insert Screwdriver here.

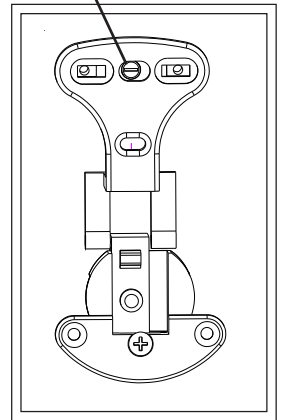

Do not use unless all screws are tight. At least every six months, check all screws to be sure they are tight. If parts are missing, broken, damaged, or worn, stop use of the product until repairs are made by your dealer using factory authorised parts.


**Should you require assistance during assembly, please call our Customer Service Department Monday - Friday 8 a.m. - 5 p.m. Central Standard Time Toll-Free Customer Service 1-800-749-2258**

To raise height of platform, loosen adjustment knob (T) and press handle on height adjustment bracket upward toward top. The pneumatic cylinder will begin lifting the unit, and you can release handle at the desired height. Secure platform at desired height by tightening adjustment knob (T).

To lower height of platform, loosen adjustment knob (T) and press handle on height adjustment bracket upward toward top. Press on center of Top Platform using body weight. Top Platform will lower and you can release handle at the desired height. Secure platform at desired height by tightening adjustment knob (T).

### Height Adjustment

Illustration # 16

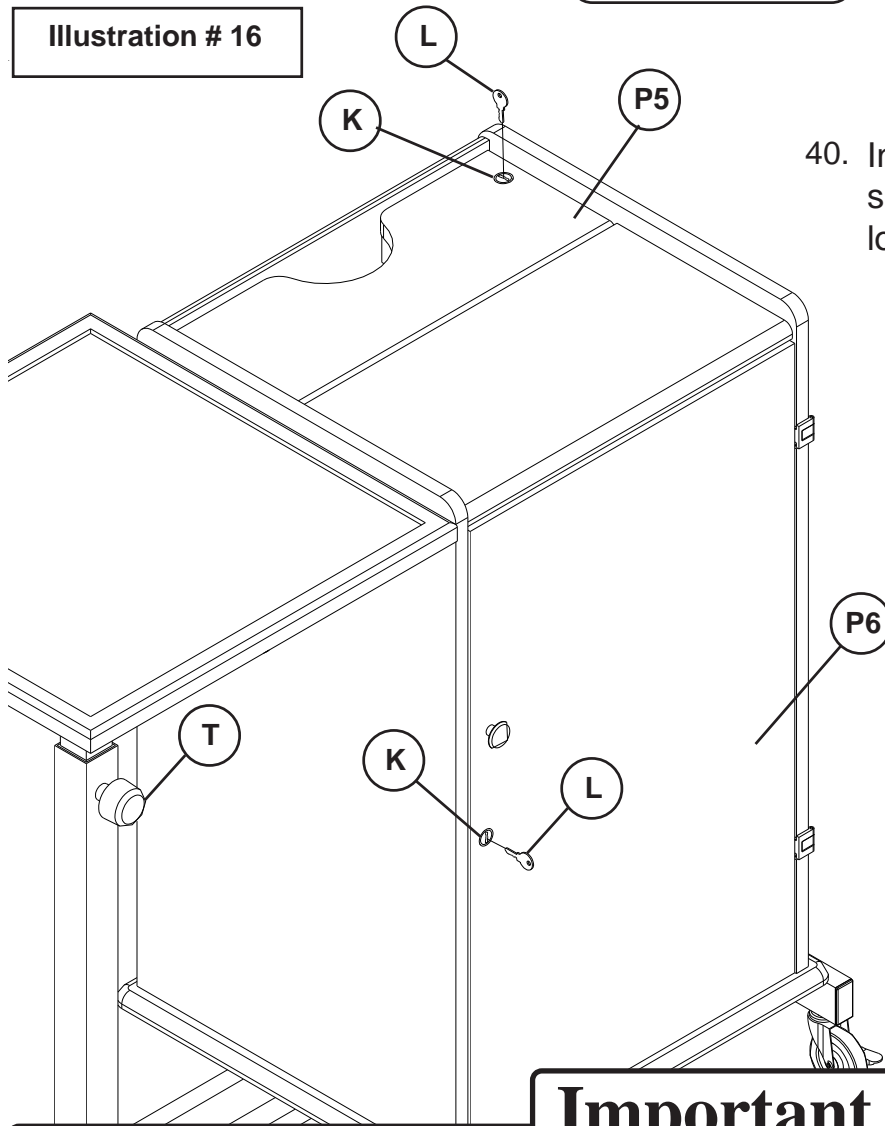

40. Insert Key (L) in Door Lock (K) as shown in illustration # 16 and turn lock counter-clockwise to lock door.

## Important


The Balt product you have purchased is guaranteed against material and workmanship defects. This guarantee extends 1 year from date of purchase. Should this product fail to function satisfactorily under normal use due to defect or imperfection, the defective part or product will be replaced. Damage caused by common carriers during shipment is not included in this guarantee.

**This guarantee sets forth all applicable guarantees and remedies. No other warranty, expressed or implied shall apply. Failure to follow instructions found in Important Information Section of Owner Sheet shall void the guarantee. Consequential or incidental damages and or costs are not refundable.**

# #89823 Role Model Portable AV Center




For more information  
1-800-749-2258

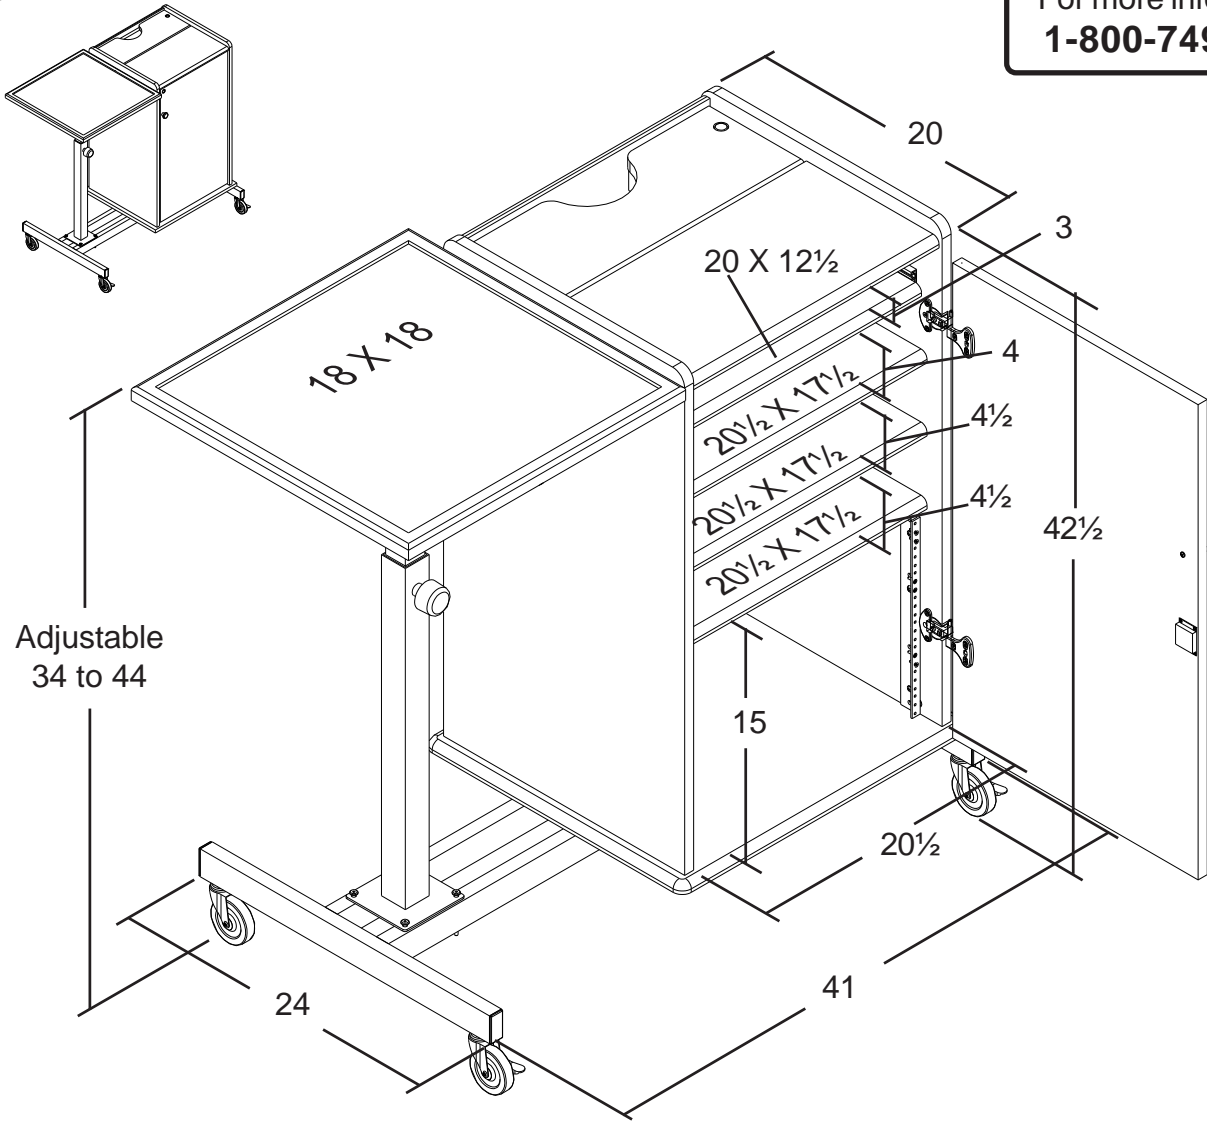

## Shipping Information

2.6 Cubic Feet


71 lbs.

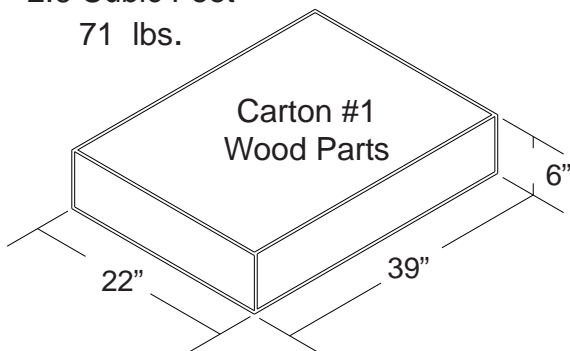

## Shipping Information

5.3 Cubic Feet

77 lbs.

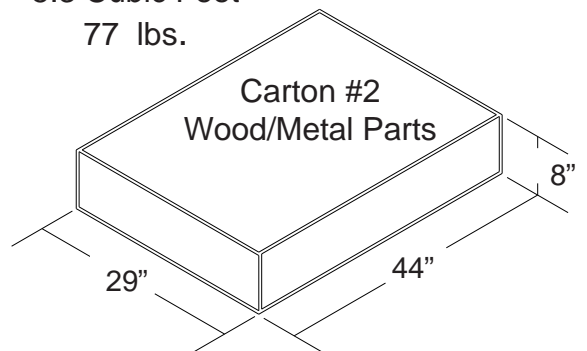


# #89823

## Role Model Portable AV Center

unit Wt	150 lbs
shelf1	30 lbs
shelf1	30 lbs
keyboard	30 lbs
bottom	50 lbs
Pneumatic lift	60 lbs

Total Recommended weight not to exceed 300lbs.

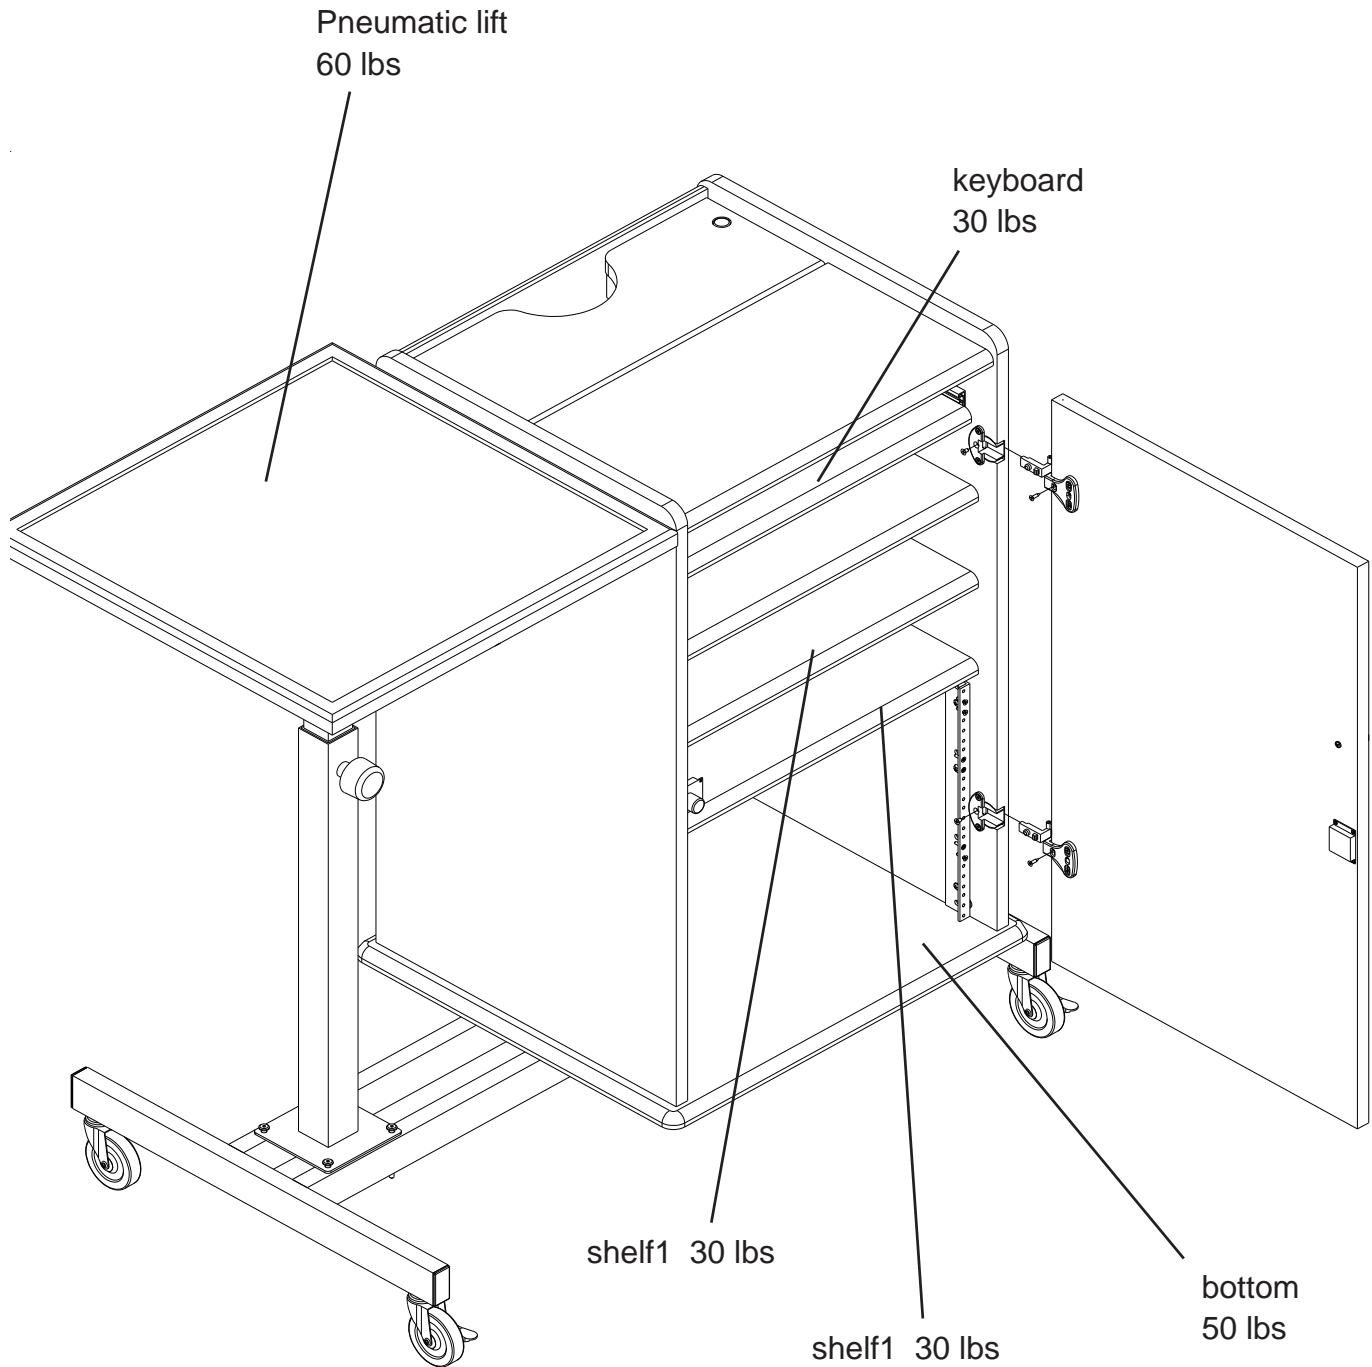

Unit Tested with 150 lbs of equipment added.