 




#89782 INCLINATION™

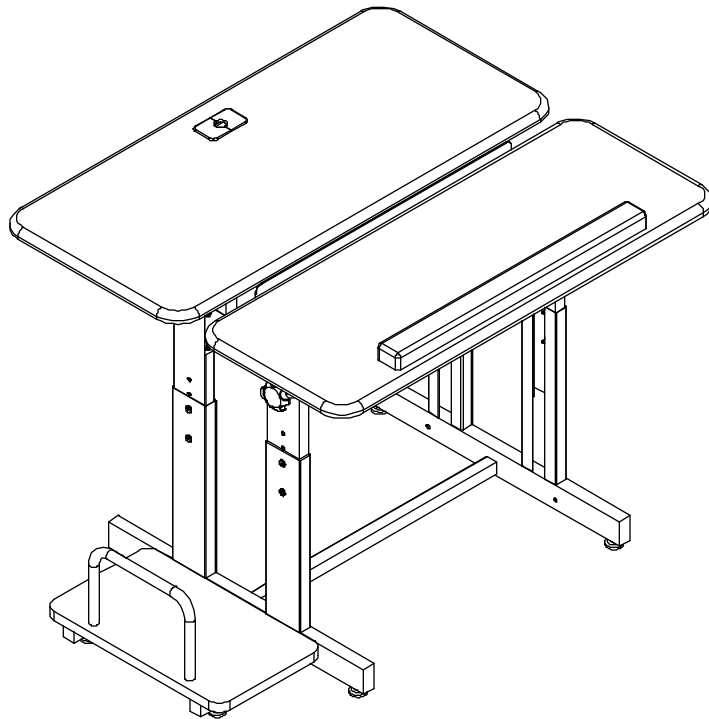








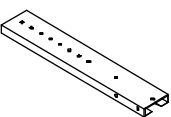
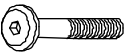
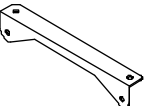
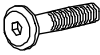
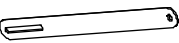

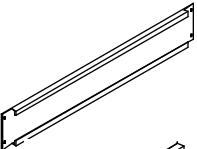
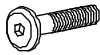

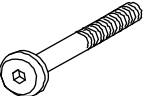
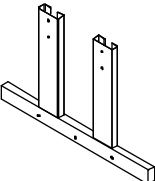

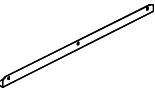

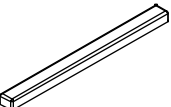



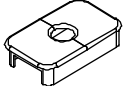



Adjustable Split-Level Computer Desk
With Tilting Ergonomic Keyboard



Assembly Instructions

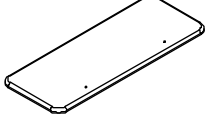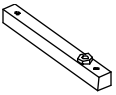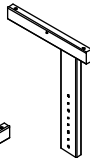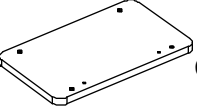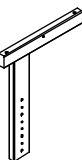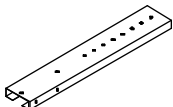INCLINATION

Adjustable Split-Level Computer Desk With Tilting Ergonomic Keyboard

Part	Drawing	Description	Qty	Part	Drawing	Description	Qty
P1		Monitor Platform	1 EA	P14		CPU Rail	1 EA
P2		Keyboard Platform	1 EA	P15		CPU Foot	2 EA
P3		Left Monitor Insert	1 EA	P16		CPU Platform	1 EA
P4		Right Monitor Insert	1 EA	Hardware List			
P5		Left Keyboard insert	1 EA	A		9/16" Socket Screw	24 EA
P6		Right Keyboard insert	1 EA	A1		1-7/8" Socket Screw	8 EA
P7		Keyboard Bracket	2 EA	A2		1-1/2" Socket Screw	4 EA
P8		Hinge Bracket	2 EA	A3		Wood Screw	3 EA
P9		Stability Panel	2 EA	A4		1-1/4" Socket Screw	2 EA
P10		Crossbrace	2 EA	B		2-3/8" Socket Screw	4 EA
P11		Leg Receiver	2 EA	C		Square Nut	8 EA
P12		Keyboard Security Rail	1 EA	D		Lock Nut	4 EA
P13		Wrist Rest	1 EA	E		Flat Washer	8 EA
				F		Lock Washer (External Tooth)	2 EA
				G		Plastic Knob	2 EA
				H		Plastic Grommet	1 EA
				J		Glide	6 EA
				K		Allen Wrench	1 EA
				L		Wrench for Locknut	1 EA

INCLINATION Assembly Diagram




READ THROUGH INSTRUCTIONS FROM BEGINNING TO END BEFORE STARTING TO ASSEMBLE UNIT.





We recommend that you assemble this unit on a table.

Tools required: Adjustable Crescent Wrench

- 1.) Identify and Separate all the Parts and Hardware.
- 2.) Place the Monitor Platform (P1) with the insert nuts facing up. Attach 1 each Left Monitor Insert (P3) and 1 each Right Monitor Insert (P4) using 4 each (B) screws. **(Finger tighten only)**

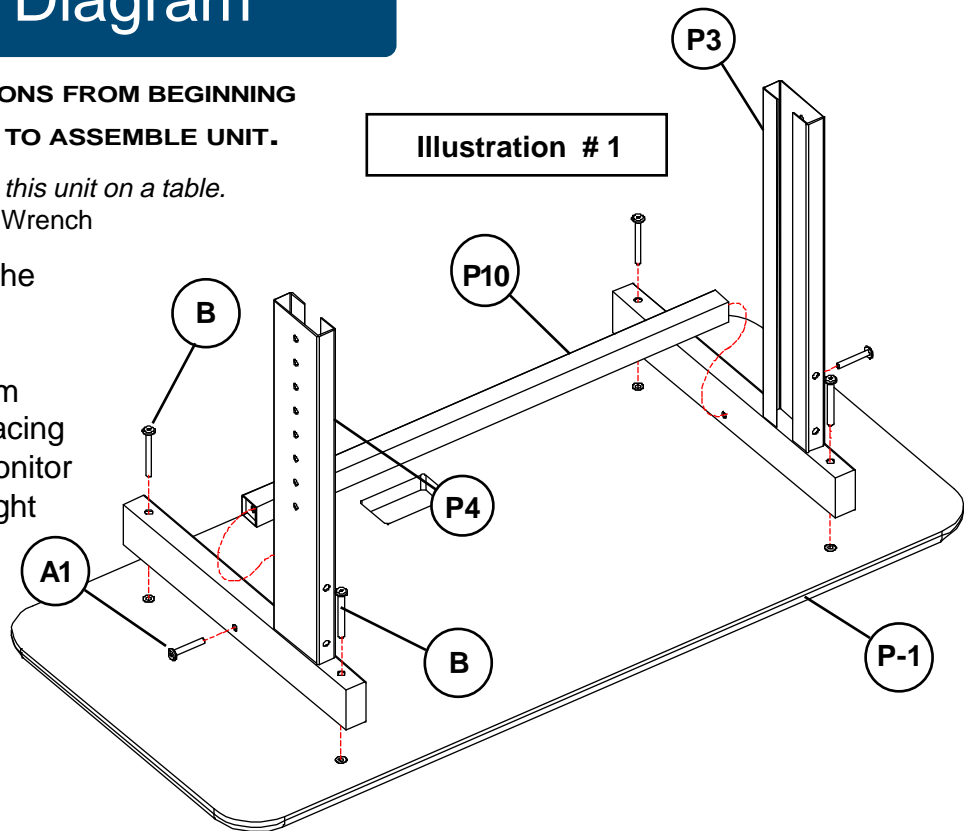

- 3.) Attach Crossbrace (P10) between the Upper Inserts (P3 & P4) using 2 Screws (A1) as shown in illustration #1.

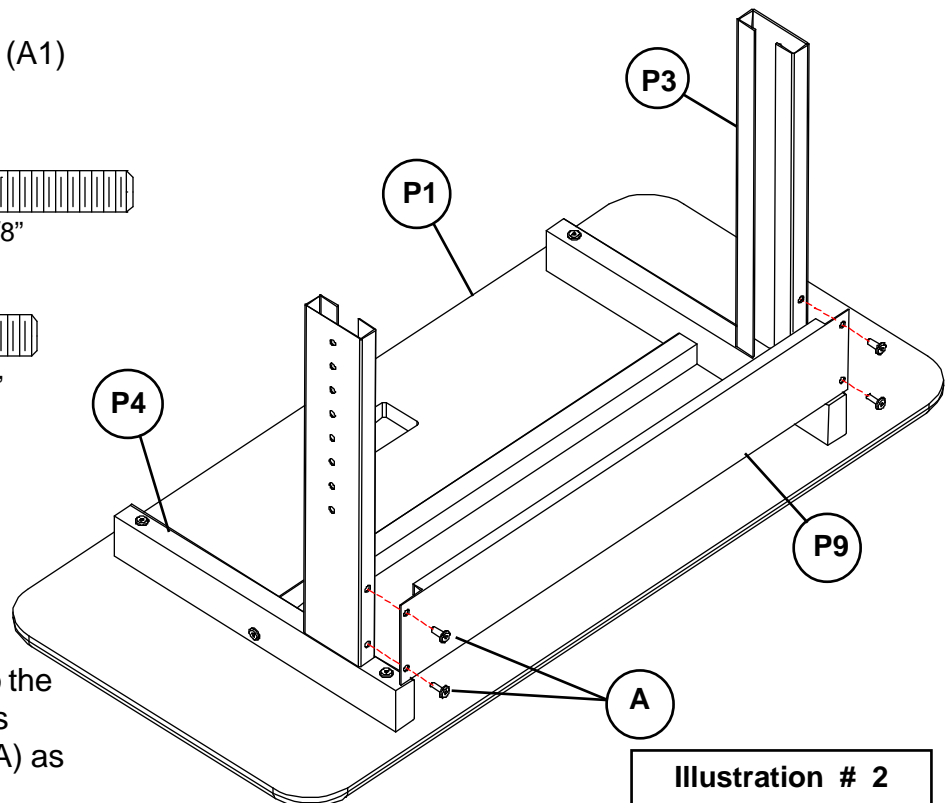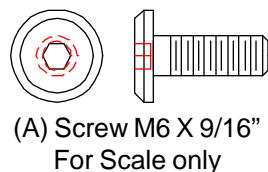
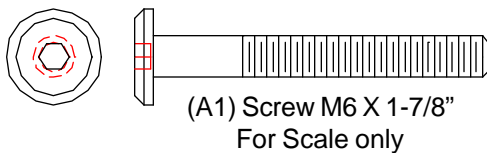
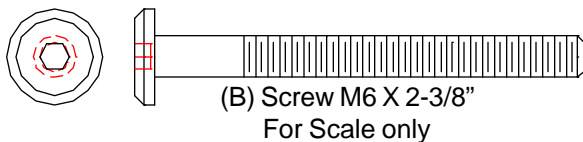


- 4.) Attach Stability Panel (P9) to the Left and Right Monitor Inserts (P3 & P4) using 4 Screws (A) as shown in illustration #2.

Do not use unless all screws are tight. At least every six months, check all screws to be sure they are tight. If parts are missing, broken, damaged, or worn, stop use of the product until repairs are made by your dealer using factory authorized parts.

5.) Place the Keyboard Platform (P2) with the insert nuts facing up. Attach Keyboard Security Rail (P-12) to the Keyboard Platform (P-2) using 3 screws (A3) .

6.) Attach Wrist Rest Pad (P-13) to the Keyboard Platform (P-2) using 2 Screws (A4) as shown in illustration #3.

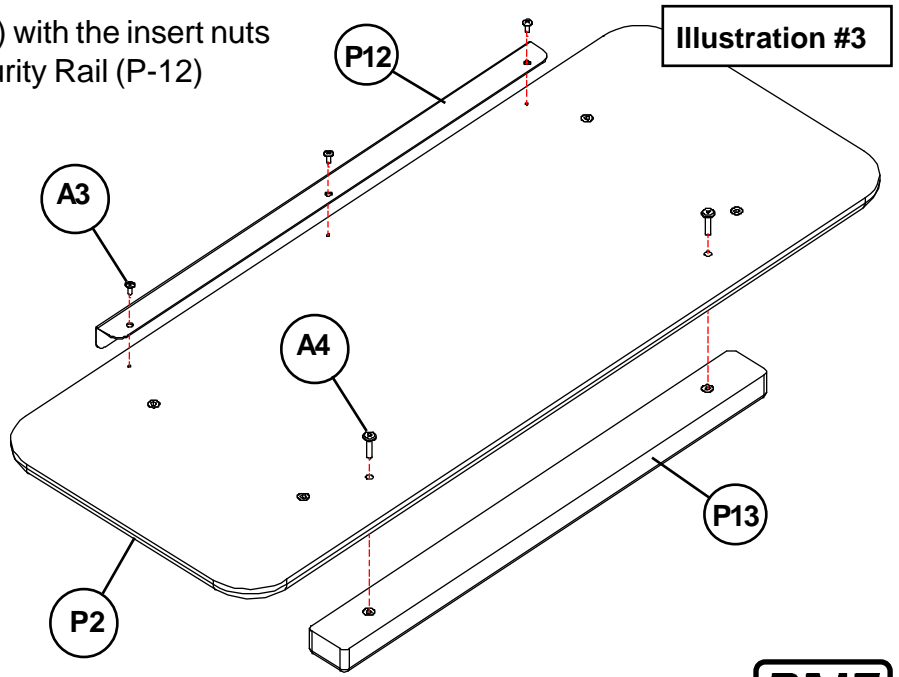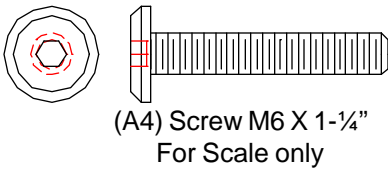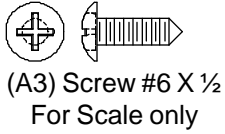

7.) Attach 2 each Keyboard Brackets (P-7) to the Keyboard Platform (P-2) using 4 Screws (A) as shown in illustration #4.





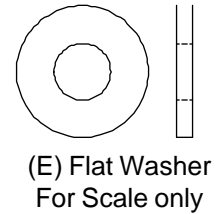



Illustration #4

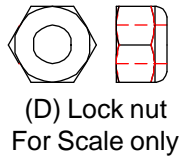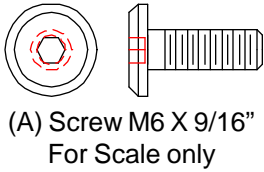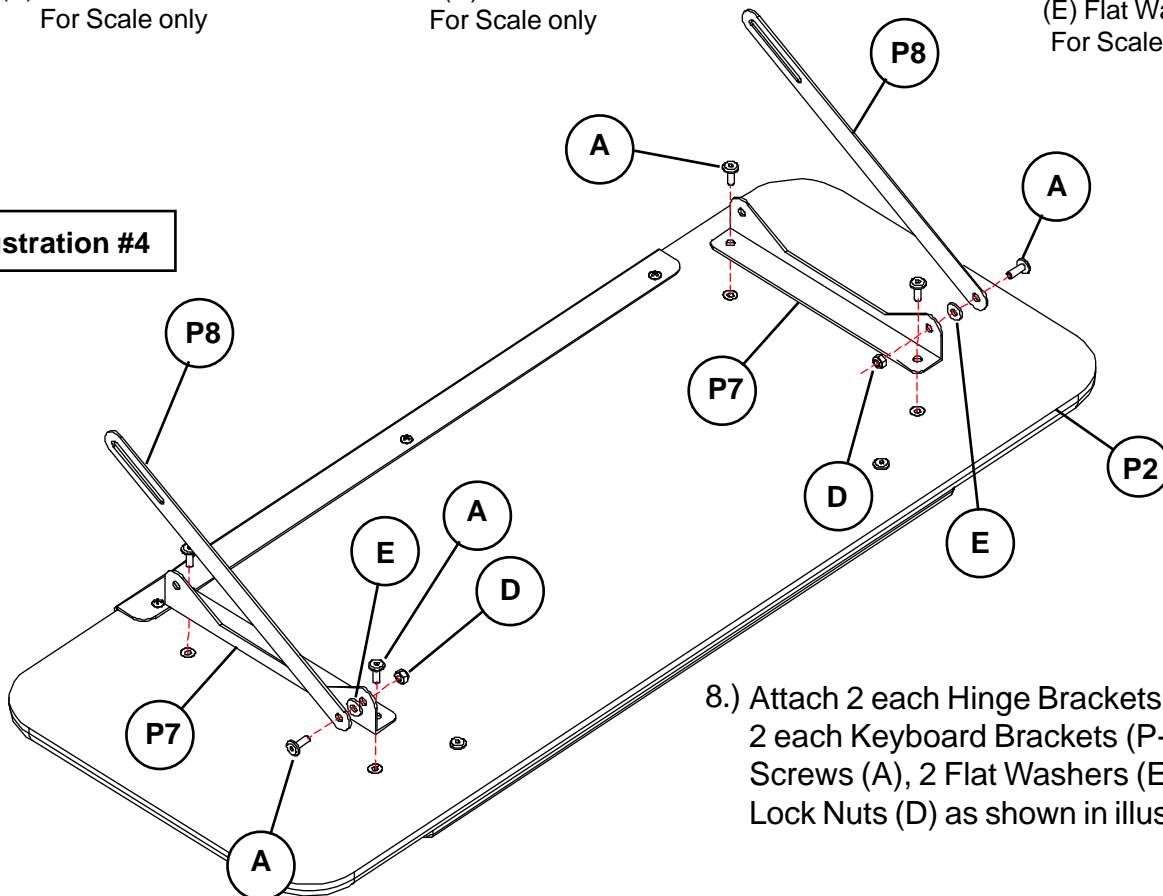 


8.) Attach 2 each Hinge Brackets (P-8) to the 2 each Keyboard Brackets (P-7) using 2 Screws (A), 2 Flat Washers (E), and 2 Lock Nuts (D) as shown in illustration #4.

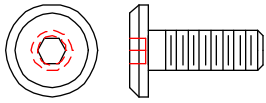


(A) Screw M6 X 9/16"
For Scale only

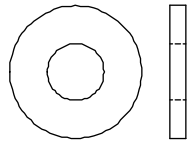

(E) Flat Washer
For Scale only

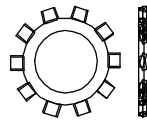

(F) Lock Washer
For Scale only

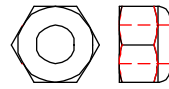

(D) Lock nut
For Scale only



9.) Place the Keyboard Platform (P2) with the insert nuts facing up. Attach 1 Left Keyboard Insert (P-5) and 1 Right Keyboard Insert (P-6) to the 2 each Keyboard Brackets (P-7) using 2 Screws (A), 2 Flat Washers (E), and 2 Lock Nuts (D) as shown in illustration #5.

10.) Attach Left Keyboard Insert (P-5) and Right Keyboard Insert (P-6) to 2 each Hinge Brackets (P-8) using 2 Knobs (G), 2 Lock Washers (F), and 4 Flat Washers (E) as shown in illustration #5.



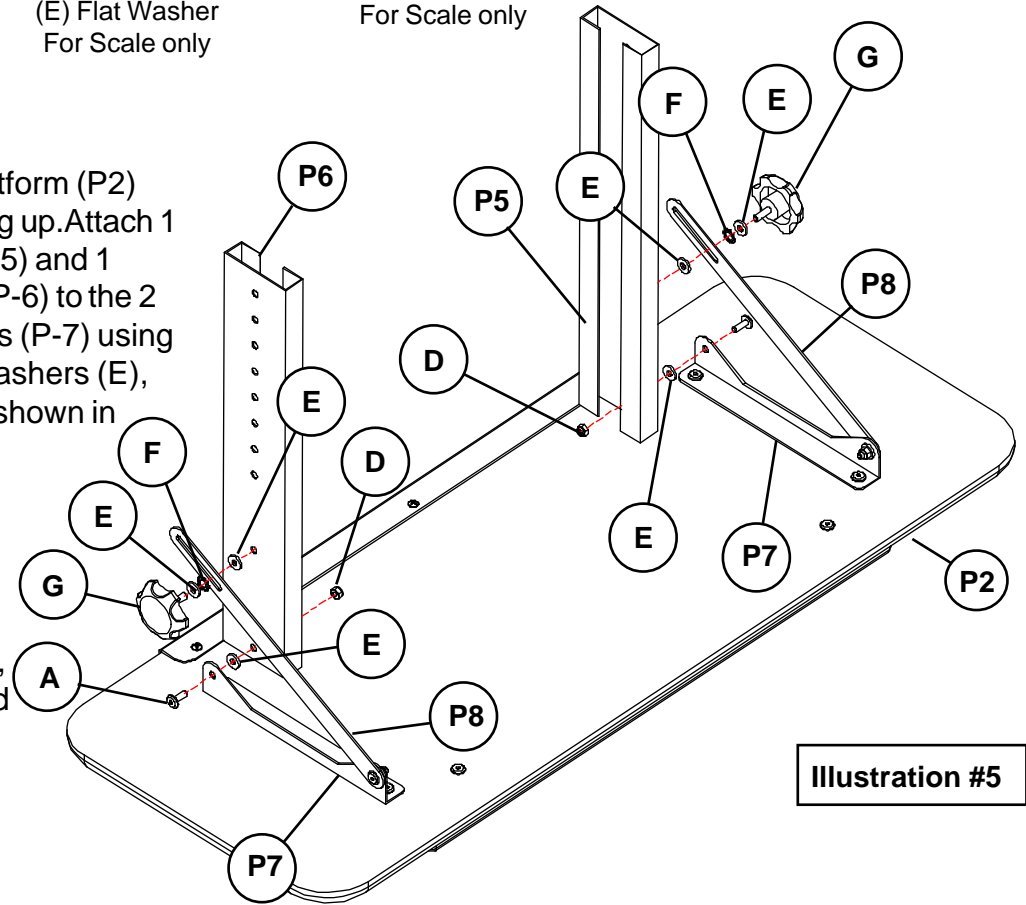


Illustration #5

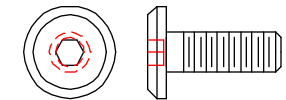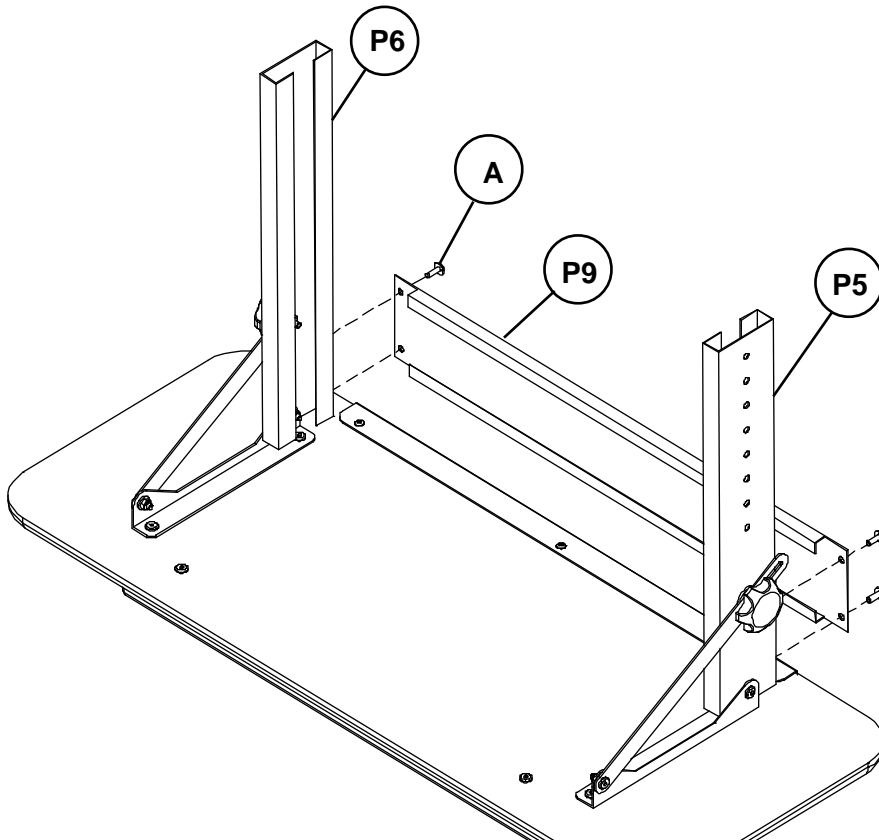

(A) Screw M6 X 9/16"
For Scale only

11.) Attach Stability Panel (P9) to Left Keyboard Insert (P-5) and Right Keyboard Insert (P-6) using 4 Screws (A) as shown in illustration #6.

Illustration #6


11.) Slide 2 Leg Receivers (P11) over 2 Monitor Inserts (P3 & P4) and 2 Keyboard Inserts (P5 & P6) as shown in illustration #7. Secure at desired height using 8 each (A) Screws and 8 each (C) Square nuts (flat side of the nut should be next to the metal).

(Finger tighten only)


12.) Attach 1 each Crossbrace (P10) between Leg Receivers (P11) using 2 Screws (A1) as shown in illustration #7.

(Finger tighten only)


13.) Attach 4 each (J) Leveling Glides to the 2 each Leg receivers (P11) .

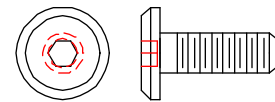

(A) Screw M6 X 9/16"
For Scale only

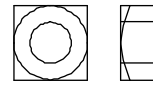

(B) Square Nut M6
For Scale only

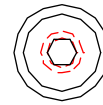

(A1) Screw M6 X 1-7/8"
For Scale only

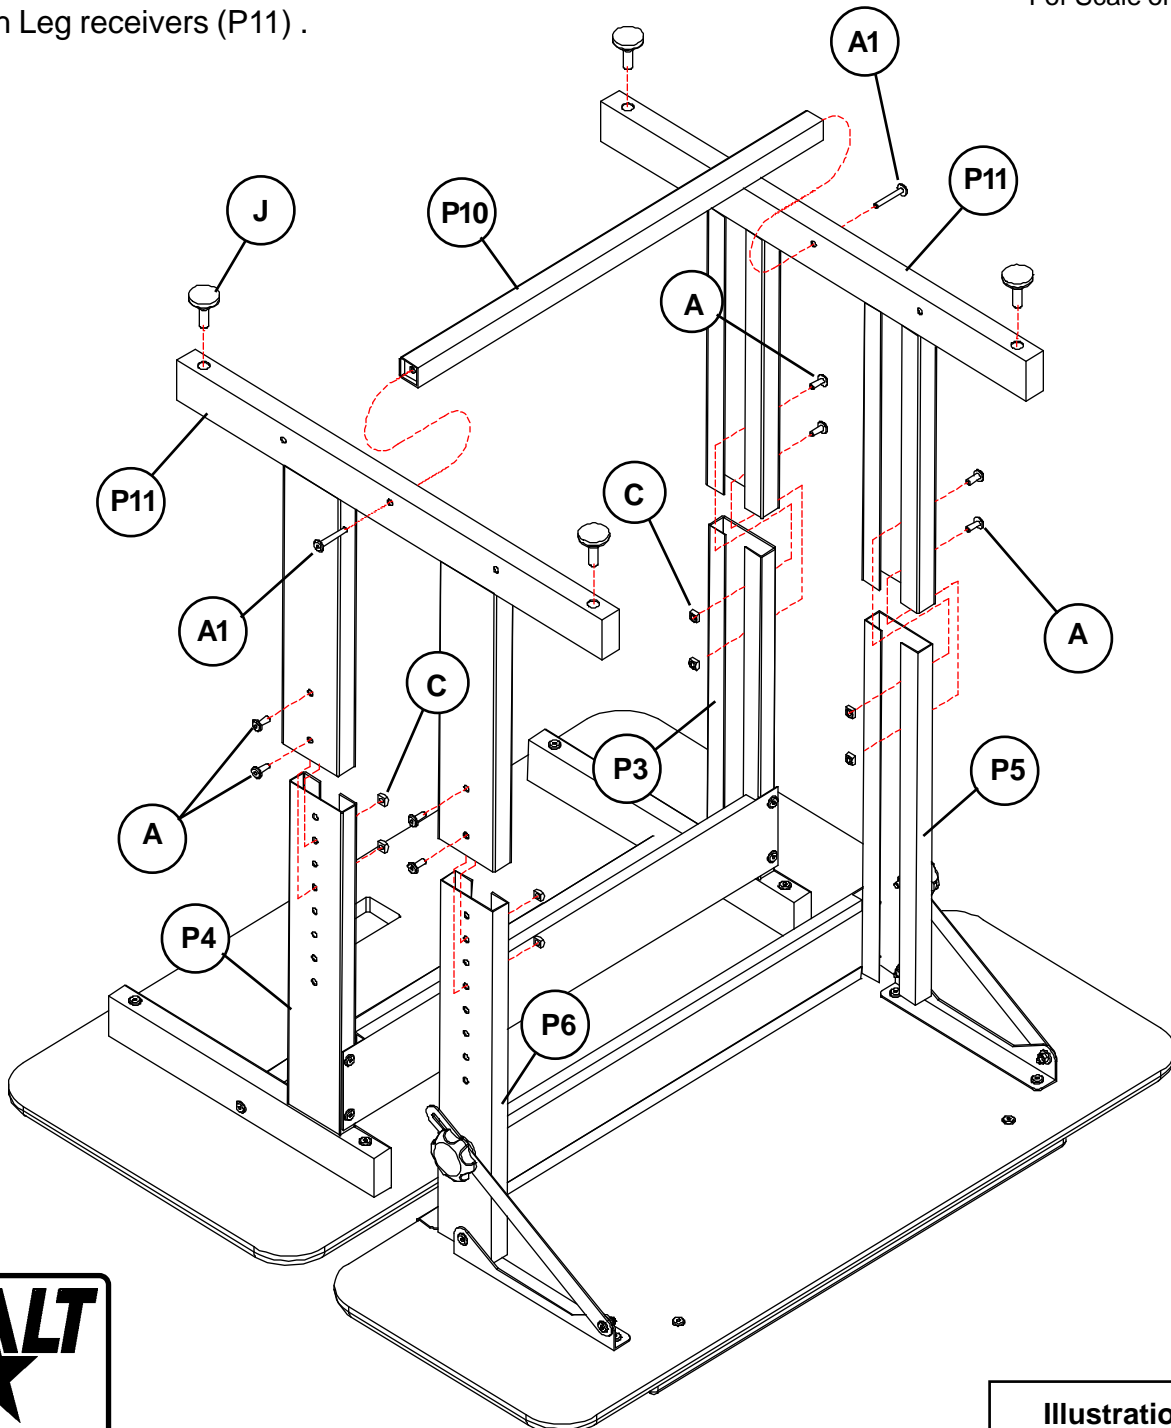


Illustration #7

14.) Place the CPU Platform (P16) with the insert nuts facing up. Attach 2 each CPU Feet (P15) using 4 each (A2) screws.
(Finger tighten only)

15.) Attach 1 each CPU Rail (P14) to the CPU Platform (P16) using 2 each (A1) screws.
(Finger tighten only)





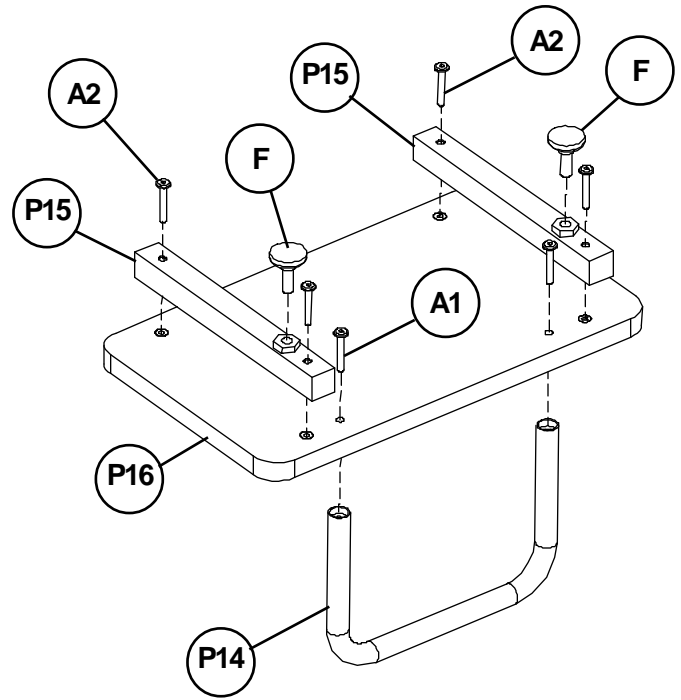


Illustration #8

16.) Attach 2 each Glides (J) to the 2 CPU Feet (P15) as shown in illustration #8.

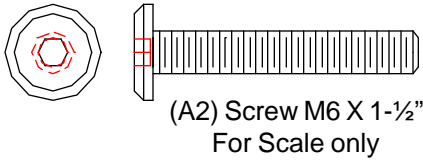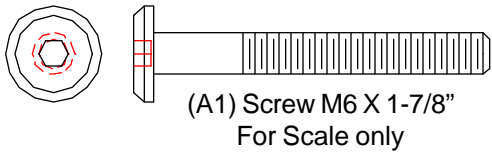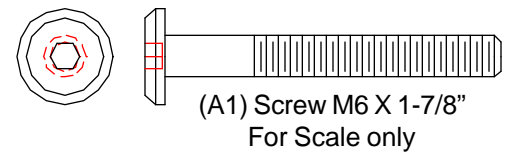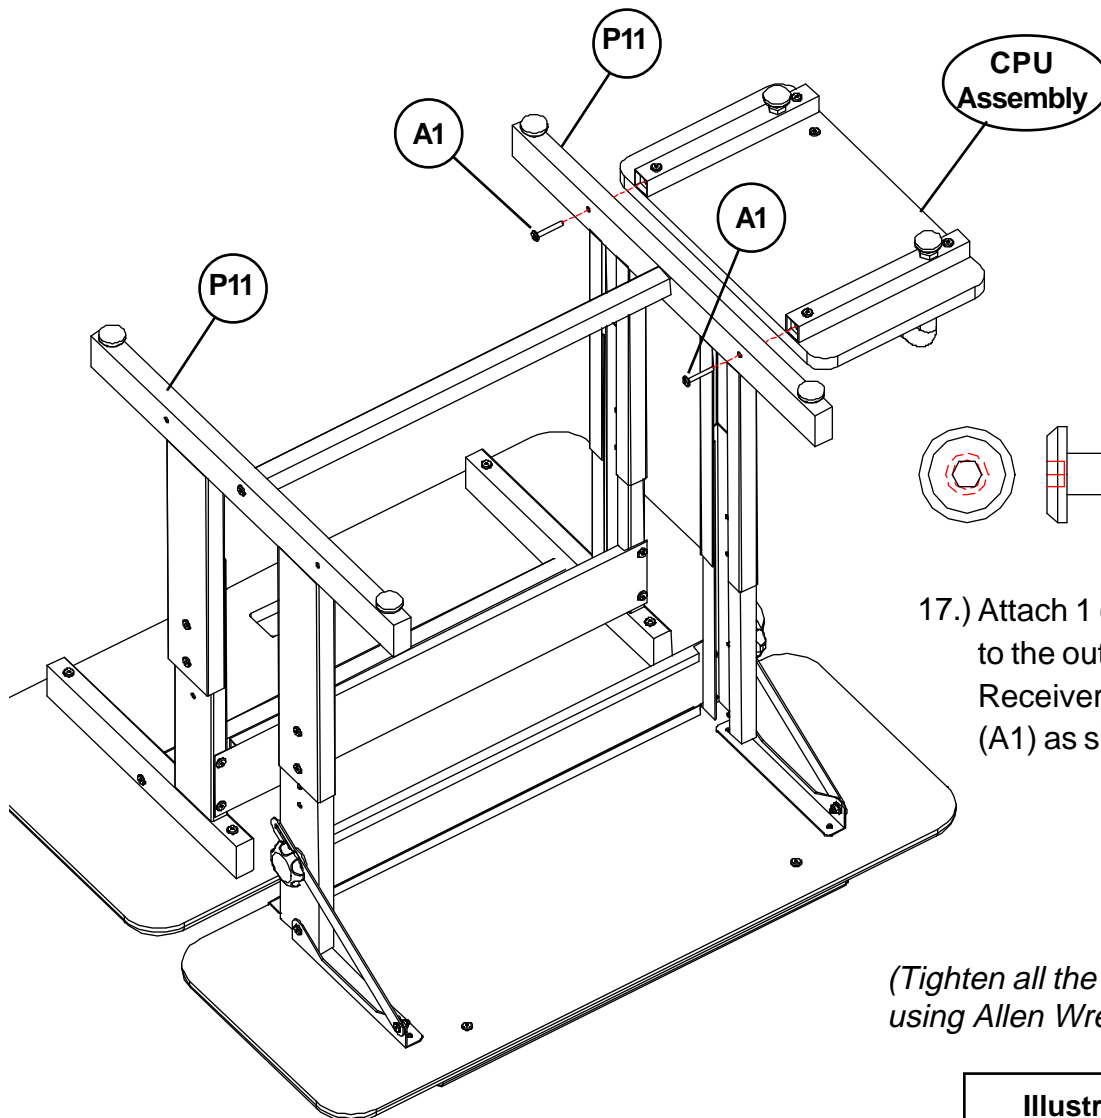

17.) Attach 1 each CPU Assembly to the outside of either Leg Receiver (P11) using 2 Screws (A1) as shown in illustration #6.

(Tighten all the screws at this time using Allen Wrench (K)).


Illustration #9

Missing Parts or UPS Damaged Parts


For Your Convenience you can
EMAIL us at
furniture@baltinc.com
24HOURS 7 DAYS A WEEK

*Should you require assistance during assembly,
please call our Customer Service Department
Monday - Friday 8 a.m. - 5 p.m.
Central Standard Time 1-800-749-2258*

18.) To install Grommet (H), separate parts and press Grommet Sleeve in rectangular opening in Monitor Platform (P1) as shown in illustration #6. Snap 2 plastic Caps over top of Sleeve as shown in illustration #10.

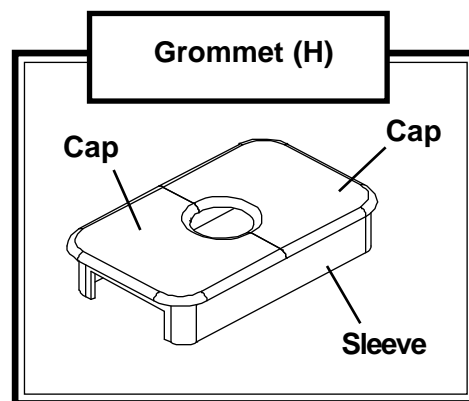

**Grommet(E) installation
Illustration #10**

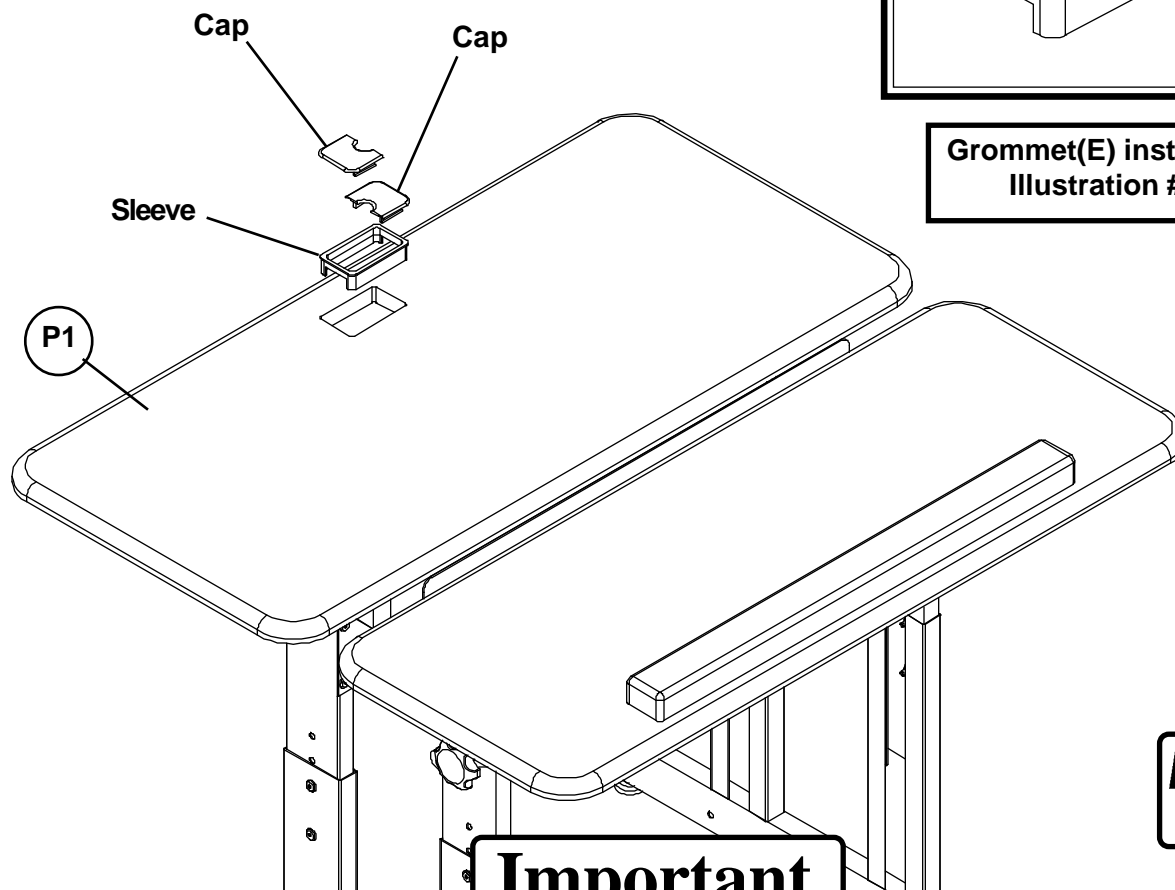

Important

The Balt product you have purchased is guaranteed against material and workmanship defects. This guarantee extends 1 year from date of purchase. Should this product fail to function satisfactorily under normal use due to defect or imperfection, the defective part or product will be replaced. Damage caused by common carriers during shipment is not included in this guarantee.

This guarantee sets forth all applicable guarantees and remedies. No other warranty, expressed or implied shall apply. Failure to follow instructions found in Important Information Section of Owner Sheet shall void the guarantee. Consequential or incidental damages and or costs are not refundable.