

Installation and Assembly - Universal Projector Mount

Models: PAP 40, PAP 40-S, PAP 40-W
PAP 45, PAP 45-S, PAP 45-W

IMPORTANT! Read entire instruction sheet before you start installation and assembly.



Before you start check the parts list below to make sure all of the parts shown are included.

WARNING

- Installer must verify that the ceiling will safely support four times the combined weight of all attached equipment and hardware.

Parts List Description	Qty.	Model	Model	Model	Model	Model	Model
		PAP 40	PAP 40-S	PAP 40-W	PAP 45	PAP 45-S	PAP 45-W
A top plate	1	055-1093	055-4093	055-2093	055-1108	055-4108	055-2108
B horizontal slide	2	054-1094	054-4094	054-2094	054-1109	054-4109	054-2109
C vertical slide	2	054-1095	054-4095	054-2095	054-1110	054-4110	054-2110
D M6 x 1 x 12 mm security screw	8	520-1050	520-2050	520-2050	520-1050	520-2050	520-2050
E VCR foam 3/8" x 12.75" x 1/8"	4	599-3802	570-0015	570-0015	599-3802	570-0015	570-0015
F allen wrench 4 mm security	1	560-9646	560-9646	560-9646	560-9646	560-9646	560-9646
G 1/4" Flat washer	8	540-9440	540-9444	540-9444	540-9440	540-9444	540-9444
H 1/4" lock washer	8	540-9402	540-9447	540-9447	540-9402	540-9447	540-9447
I #10-32 x .75" socket pin screw	2	510-2128	510-2128	510-2128	510-2128	510-2128	510-2128

Note: Actual parts may appear slightly different than illustrated.

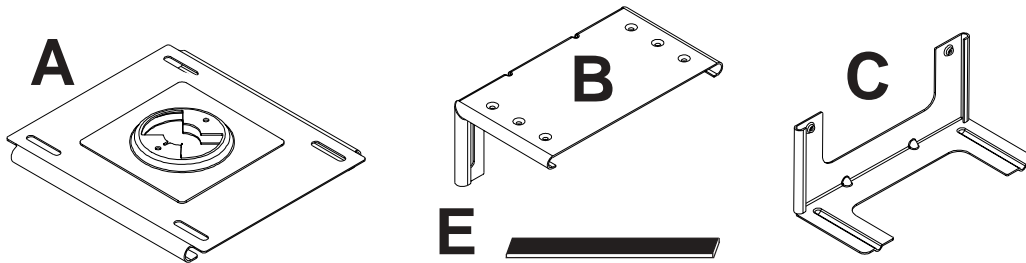
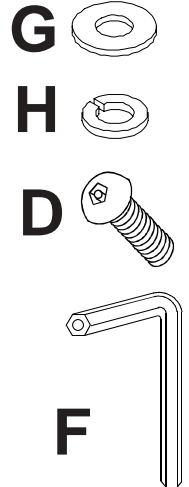


PRS MOUNT FASTENERS
Refer to PRS mount instructions for adapter plate attachment.


NOTE: *Notch indicates front.
1 Cut VCR foam (E) to proper length to line Universal mount assembly (as shown).
Place projector in center of Universal mount assembly (as shown in far right side).

CAUTION

- Before installation, identify the location of all vents and ports on the projector to ensure they will not be obstructed by the universal mount. Blocked vents may cause damage to the equipment.

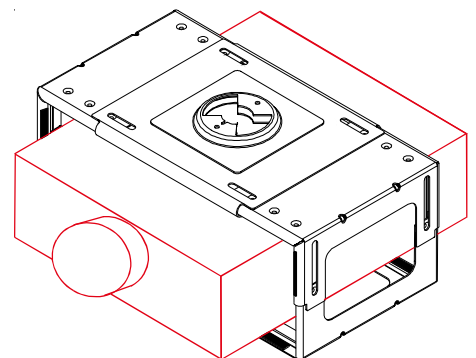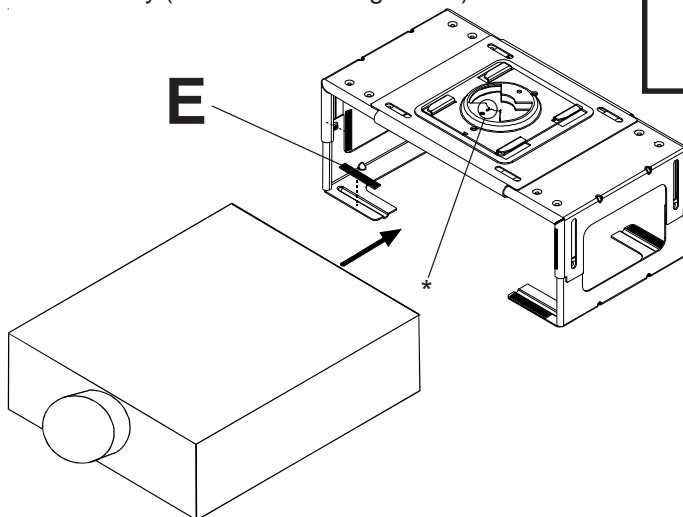

- 2** Slide both horizontal slides (**B**) inward until left and right sides are against projector (as shown). Fasten with four M6 screws (**D**), lock washers (**H**), and flat washers (**G**). **Note: Be sure to center top plate (A).** Tighten using 4 mm security allen wrench (**F**).

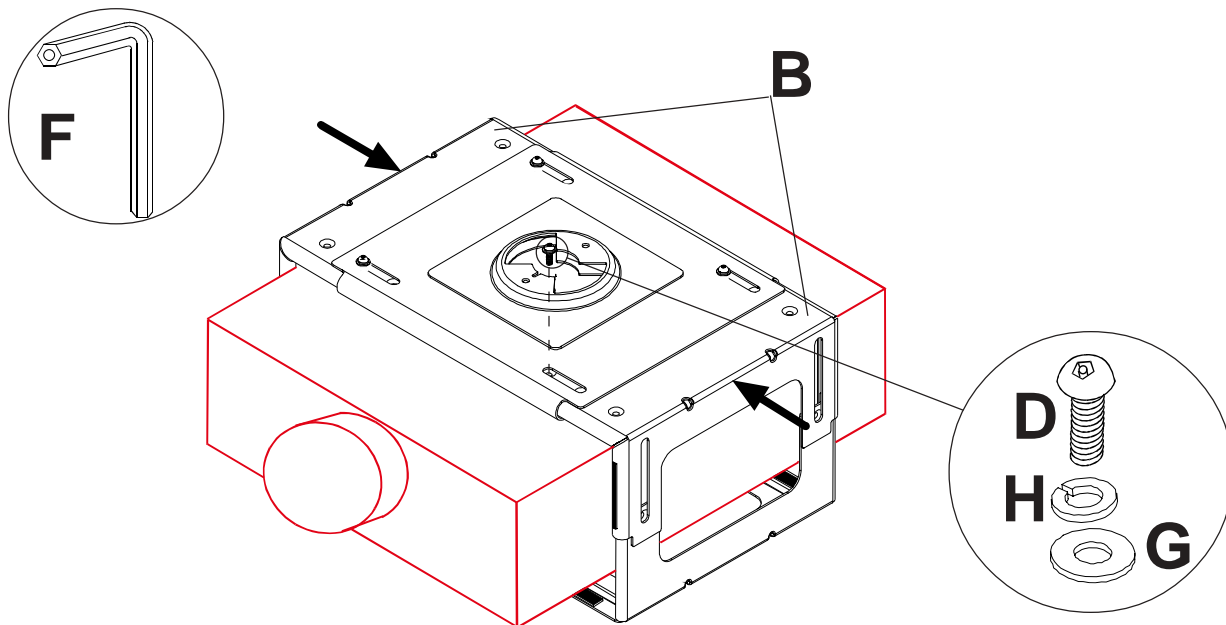

- 3** Slide top assembly downward until top and bottom sides are against projector (as shown). Fasten with four M6 screws (**D**), lock washers (**H**), and flat washers (**G**). Tighten using 4 mm security allen wrench (**F**).

