


Assembly & Installation Instructions: Conform Two Piece C-Clamp & Grommet Base CONF-BSE-TPCCG-S

Parts Included

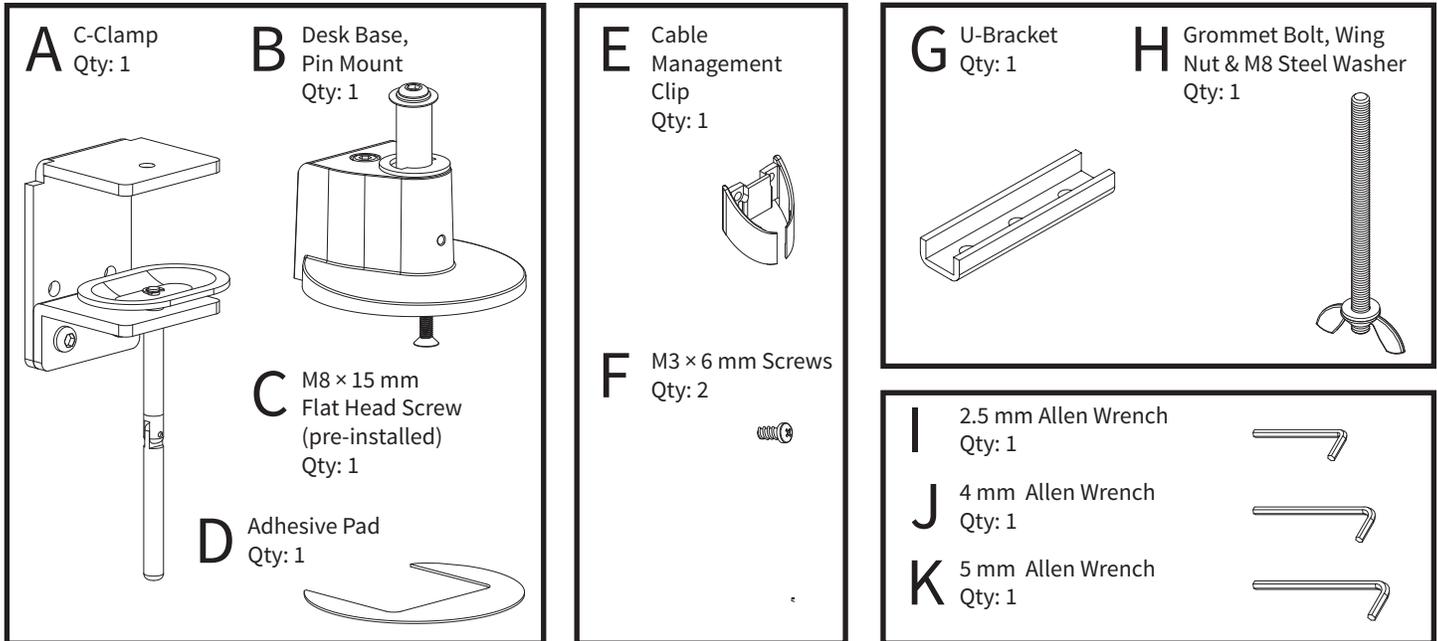

Required Parts Sold Separately

Conform Monitor Arm.

Tools Required

A Phillips head screwdriver and included Allen Wrenches.


If a grommet mount hole is required, you'll need a drill and .375" bit.



**Do not use on hollow core tables.
Do not exceed 48 lb.**

1 Attach Cable Management Clip

Use M3 × 6 mm screws (F) to attach the Cable Management Clip (E) to the Conform Base (B) with Phillips head screwdriver.


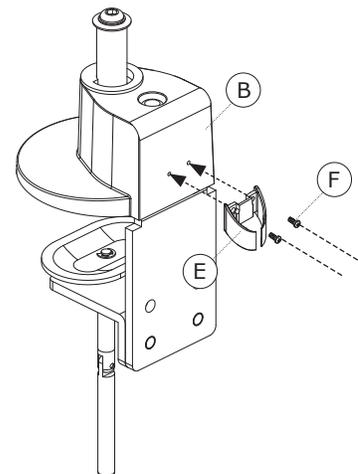


Note:

If you plan to use C-Clamp Base, proceed to Step 2.
If you plan to use Grommet Base, proceed to Step 3.

2 C-Clamp Base Installation




- a** Remove M8 × 15 mm Flat Head Screw (C) and use it to attach the C-Clamp (A) to the Desk Base (B), using the 5 mm Allen wrench (K).
- b** Adjust the C-Clamp lower plate if it's too wide or narrow to fit over the edge of the worksurface. To adjust, remove the screws using the 5 mm Allen wrench (K). Slide the C-Clamp lower plate to the upper screw holes, replace the screws and tighten until secure.
- c** Remove the Adhesive Pad (D) backing. Apply the pad to the bottom surface of the base, adhesive side up, so that it aligns with the front edge of the base and sticks in place.
- d** Place C-Clamp over the rear edge of the worksurface.
- e** Tighten the clamp by turning the C-Clamp handle clockwise, until secure.

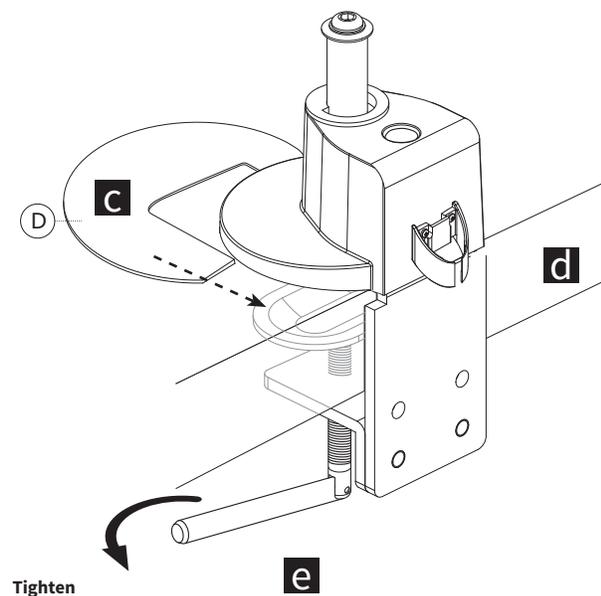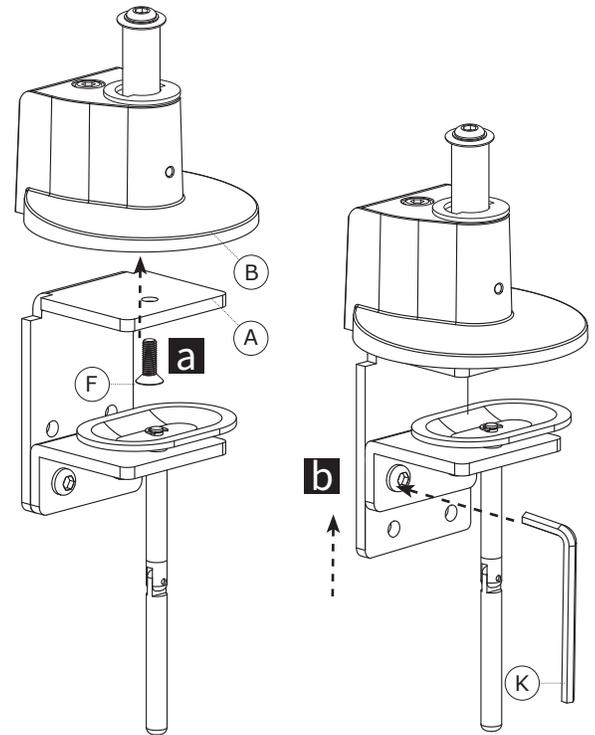

3 Grommet Base Installation

Note: A grommet hole or small hole is required in your worksurface to install the grommet base.

- a** Drill a .375" hole in worksurface if needed. The minimum distance from the edge of the worksurface to the center of the grommet hole is 2.125". The grommet mount can accommodate existing holes up to 3" in diameter.
- b** Using 5 mm Allen wrench (K), loosen M8 x 25 mm Flat Head Screw (C) on the Desk Base (A) to remove C-Clamp from the Base. Also remove the Flat head Screw.
- c** Remove the pad's adhesive cover. Apply the adhesive side to the bottom of the Desk Base, aligned with the front edge of Base, and stick in place.
- d** Insert Grommet Bolt (H) into the Desk Base (B). Tighten with 4 mm Allen Wrench (I).
- e** Insert Grommet Bolt (H) through the grommet hole of worksurface. Make sure the mount does not overlap the edge of the worksurface.
- f** From under the worksurface, place the U-Bracket (G) onto the Grommet Bolt (H) then place the M8 Steel Washer (H) followed by the Wing Nut (H) onto the Bolt and tighten Wing Nut to secure the base to the desktop.

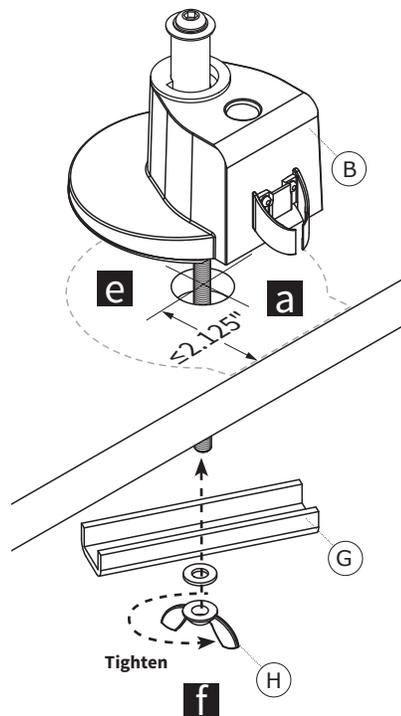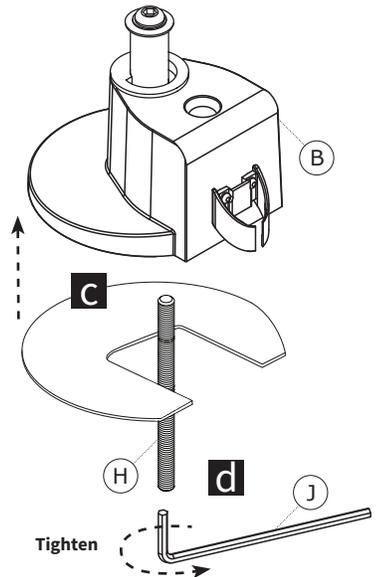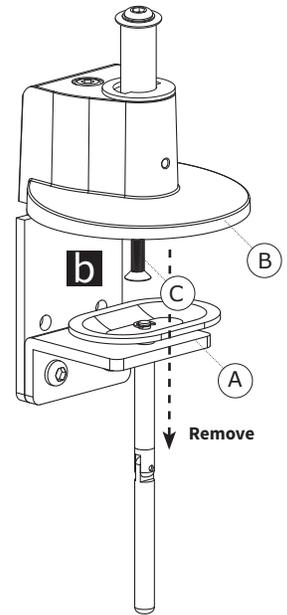

4 Ready for Arm Installation

You are now ready to attach your selected Conform Monitor Arm (sold separately).