


# Assembly & Installation Instructions: Corner Maker and Compact Corner Maker, 179CR, 179CCD-X

## Part Included

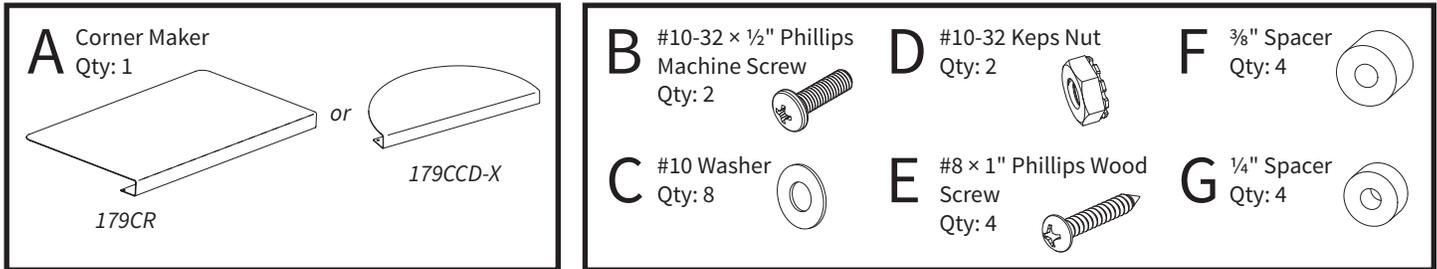

## Tools Required


#2 Phillips screwdriver or drill/driver  
Wrench with ⅜" socket if installing on some non-Workrite tracks

**Note:** These instruction assume that you have a Pinnacle 2 Arm, a Workrite Keyboard Platform and two rectangle worksurfaces.

## 1 Attach Keyboard Platform Arm to Corner Maker



If your are installing a Corner Maker without a keyboard platform arm, skip to **Step 2**.

Mount the Pinnacle 2 Track to the Corner Maker (A) using two #10-32 × ½" Phillips Head Screws (B), two #10 Washers (C) through the front track mounting holes and into the #10-32 Keps Nuts (D) inserted from behind front lip of Corner Maker. Tighten securely.

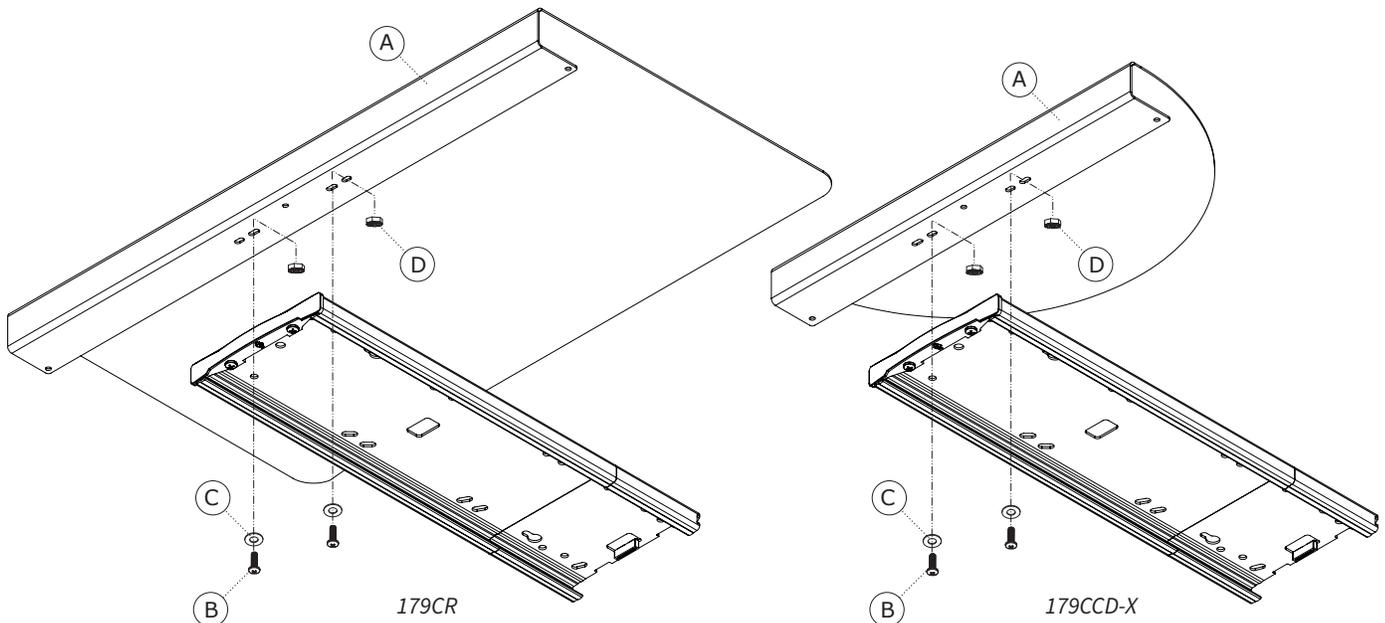



## 2 Slide Corner Maker and Pinnacle Arm Onto Worksurface(s)

- a Slide the assemble Corner Maker and Arm onto corner of the worksurface(s) making sure Corner Maker is centered between worksurfaces with equal overlap on both.
- b Move or swivel Keyboard Arm on Track to access mounting locations as needed.

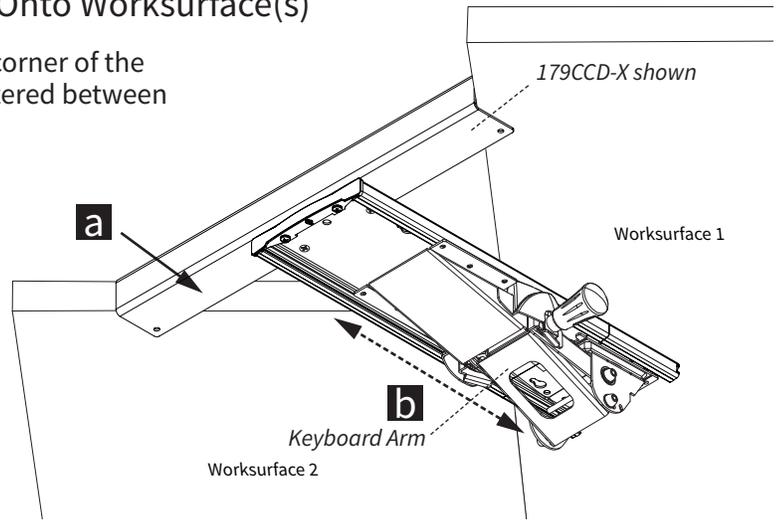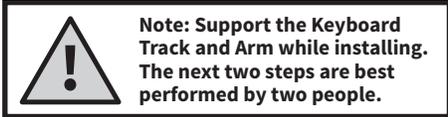

## 3 Attach Corner Maker and Keyboard Arm to Worksurface(s)

- a Add Spacers (F & G) and Washers (C) as needed to provide a flat and stable mount to the Worksurface. See side view below.
- b Attach the Corner Maker to the worksurfaces with the two #8 × 1" Phillips Head Wood Screws (E) and Washers (C).
- c Attach Pinnacle Arm to the worksurfaces with the two #8 × 1" Phillips Head Wood Screws (E).

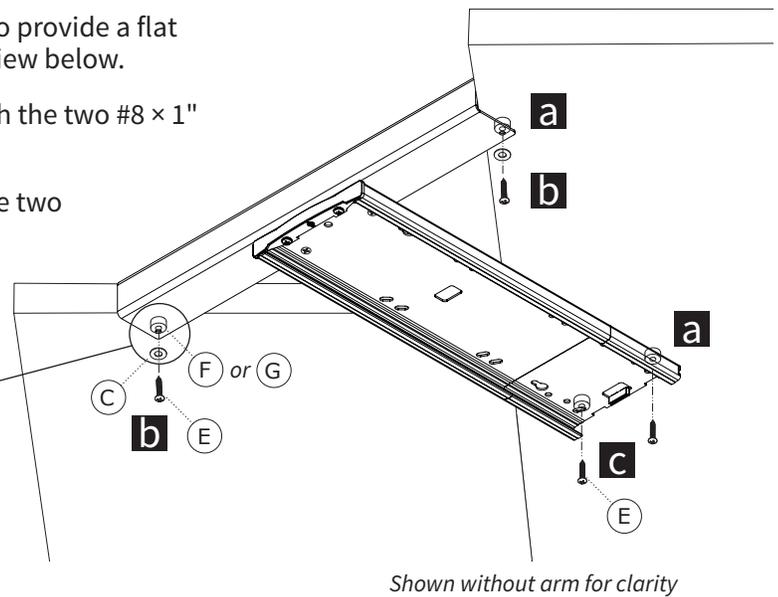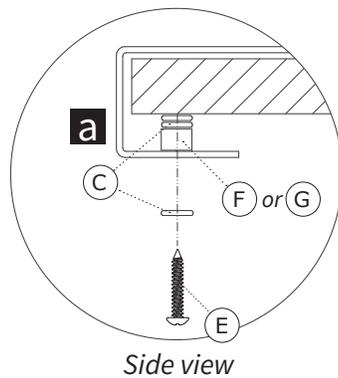

## 4 Attach Keyboard Platform to Arm

Use the instruction that came with your keyboard platform to mount to arm.

