


WLO1BT

Wave Light w/ Bolt Through


Patent Pending

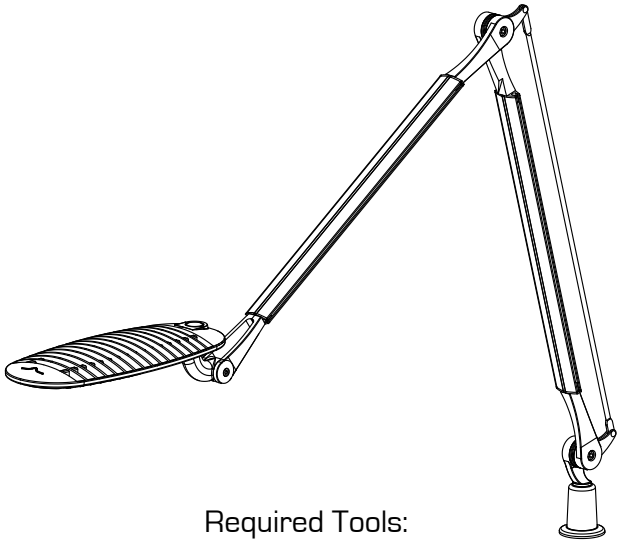

Required Tools:
5/16" Screw driver bit
5mm Allen key (provided)
2mm Allen key (provided)




Wave Light

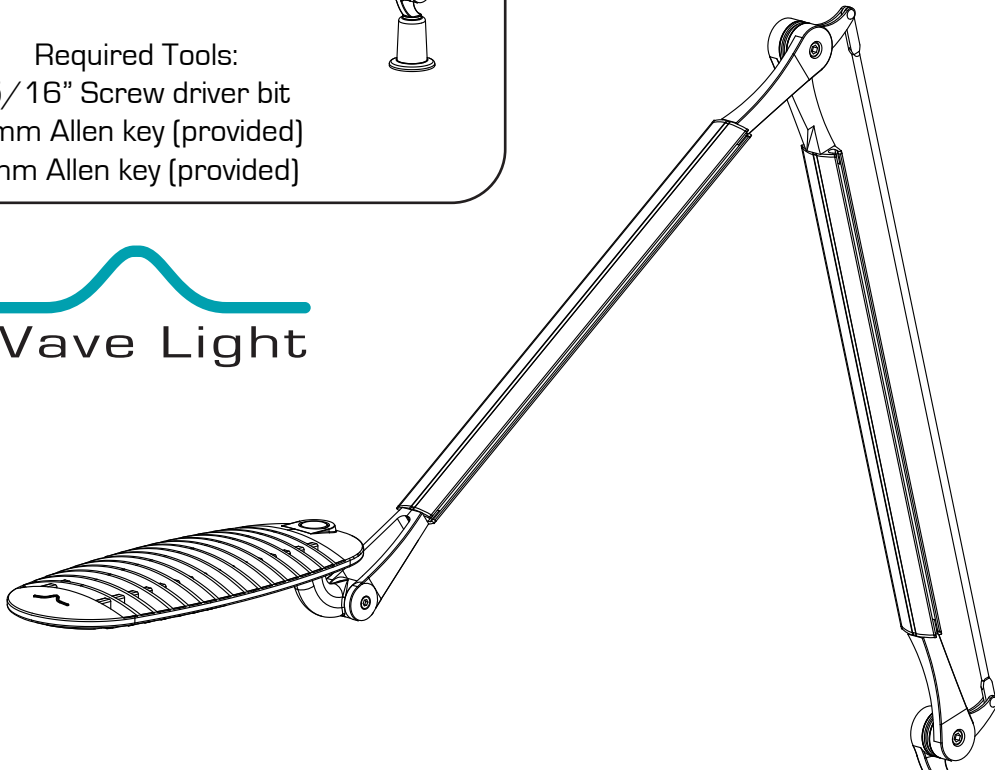

After inserting the
Wave Light into the
base plate,
Use 2mm allen key
to tighten security
set screw.



DISCLAIMER OF DAMAGES FOR IMPROPER USE. SpaceCo shall not be responsible for damage to its products, or injuries or damages caused by its products, resulting from improper installation, maintenance, unintended use or attempts to operate such products beyond their mechanical capacity, intentionally or otherwise, or by reason of unauthorized repair.

SpaceCo Business Solutions, Inc.
800.840.8499
www.spaceco.com