Installation and Assembly - Threaded Rod adapter and Kit.


Model: ACC 810, ACC 820

IMPORTANT! Read entire instruction sheet before you start installation and assembly.

Parts List Before you start make sure all parts listed are included with your product.						
ACC 820				ACC 810		
	QTY.	DESCRIPTION		QTY.	DESCRIPTION	
Α	4	1/2-13 x 36" threaded rod	С	1	1/2-13 nylock nut	
В	2	1/2-13 coupling nut	D	1	threaded rod adapter	
С	8	1/2-13 nylock nut				
Some parts may appear slightly different than illustrated.						

ACC 820 - Threaded Rod Kit.

For added length, connect two threaded rods (**A**) using coupling nut (**B**). Use nylock nut (**C**) to lock threaded rod (**A**) to appropriate connections.

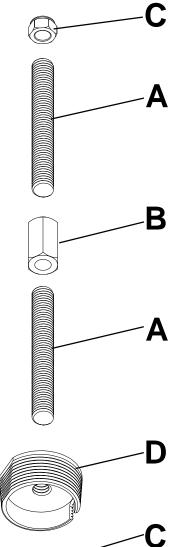

ACC 810 - Threaded Rod Adapter.

Note: ACC 810 is required to convert 1/2-13 threaded rod connection to 1-1/2-11.5 NPT.

Fasten threaded rod adapter (**D**) to threaded rod (**A**). Leave a minimum of 1/4" of thread from the threaded rod showing then lock into place using nylock nut (**C**)

