

Installation and Assembly - Electrical Outlet Strip with Cord Wrap

Models: ACC 320


IMPORTANT! Read entire instruction sheet before you start installation and assembly.

For customer care call 1-800-729-0307 or 708-865-8870. Visit the Peerless Web Site at www.peerlessmounts.com.

Before you start make sure all parts shown below are included with your product.

Parts List

| DESCRIPTION | QTY. | PART # |
|-------------------------------------|------|----------|
| A cord wrap - clip | 1 | 009-1023 |
| B 20' extension cord | 1 | 600-1006 |
| C M5 x 12mm phillips head pan screw | 2 | 520-1027 |

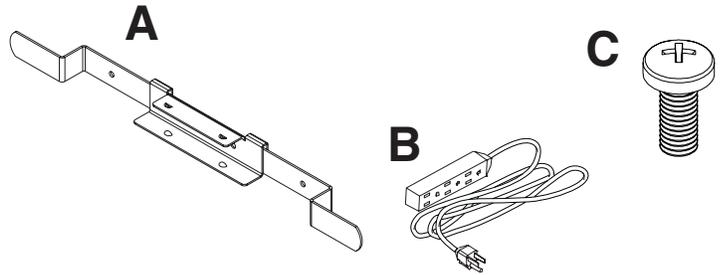

Note: Some parts may appear slightly different than illustrated.

1 Attach cord wrap (A) to cart base using two M5 x 10 mm phillips head pan screws (C) as shown. Tighten securely.

NOTE: Cord wrap does not hook into base.

1-1 Next press extension cord (B) into center of mounting clip (A) as shown in fig. 1.1.

1-2 Wrap extension cord (B) around cord wrap (A) as shown in fig. 1.2.

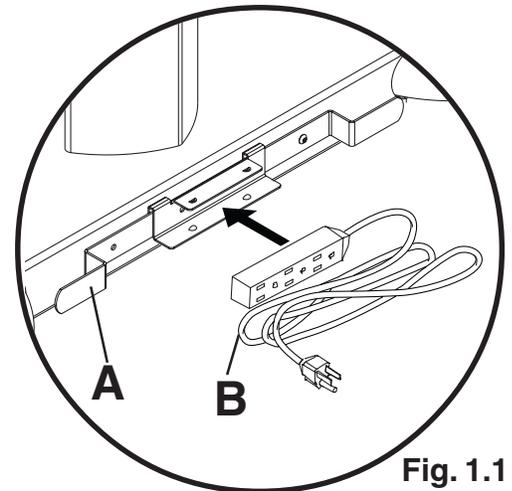
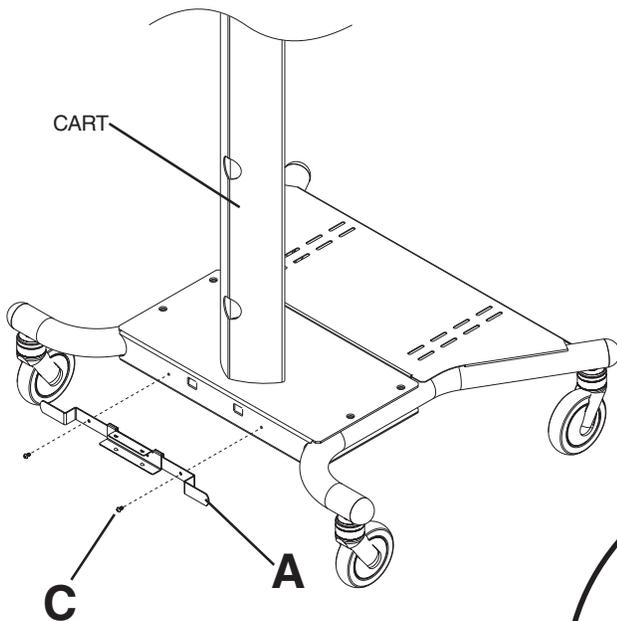


Fig. 1.1

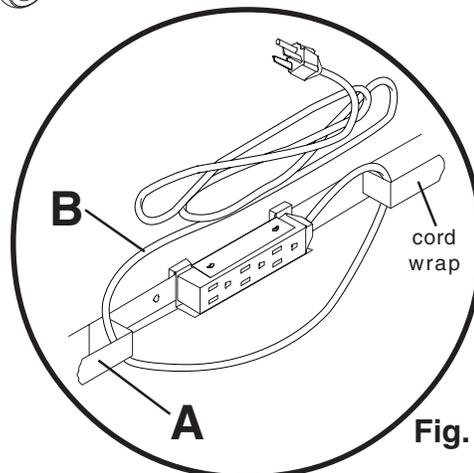


Fig. 1.2