


Assembly & Installation Instructions:


Keyboard Mounting:

Workrite
ergonomics®

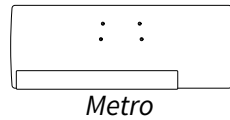


Metro

Parts Included

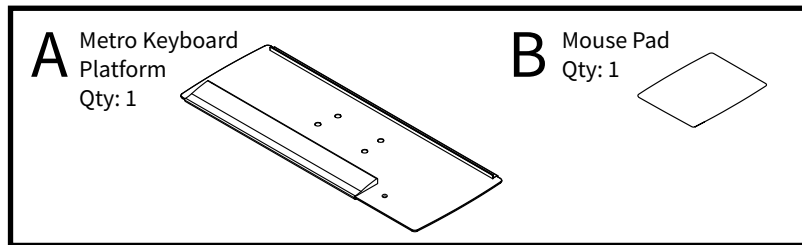

Hardware Kit #AKP-HDWR-ULT

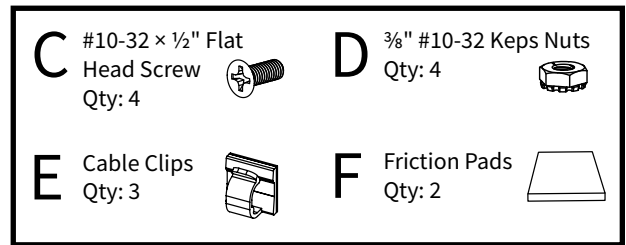

Required

Adjustable Keyboard Arm

Tools Required


Wrench with ⅜" socket
#2 Phillips screwdriver or drill/driver

Note: Mount your keyboard arm to your worksurface using the instructions that came with your keyboard arm.

1 Configuring Optimizer Models for Left Handed Use


Metro Platforms are pre-configured for right handed use but can easily be converted to left handed use.

Remove the Wrist Rest by removing the two Phillips Head Wood Screws and Washers from the right two hole locations and reattach in the left two hole locations. Apply the Mouse Pad on left in **Step 3**.

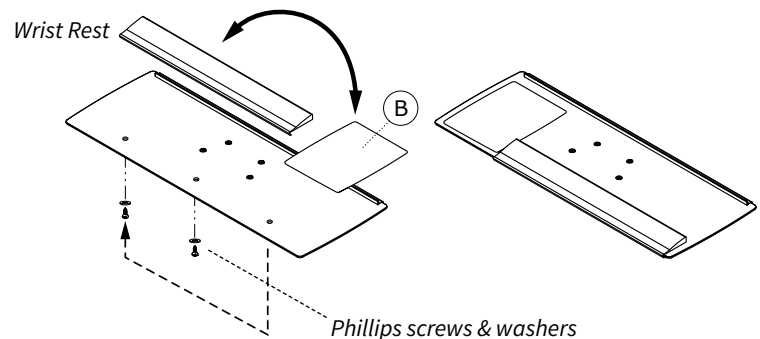


2 Mount Keyboard Platform to Arm

- Place the Keyboard Platform (A) on the keyboard arm and align the four holes on the platform with the four holes in the arm.
- Insert the #10-32 × ½" Flat Head Screws (C) through holes on platform, through the holes in the arm and fasten using four ⅜" #10-32 Keps Nuts (D). Tighten securely using Phillips head screwdriver.

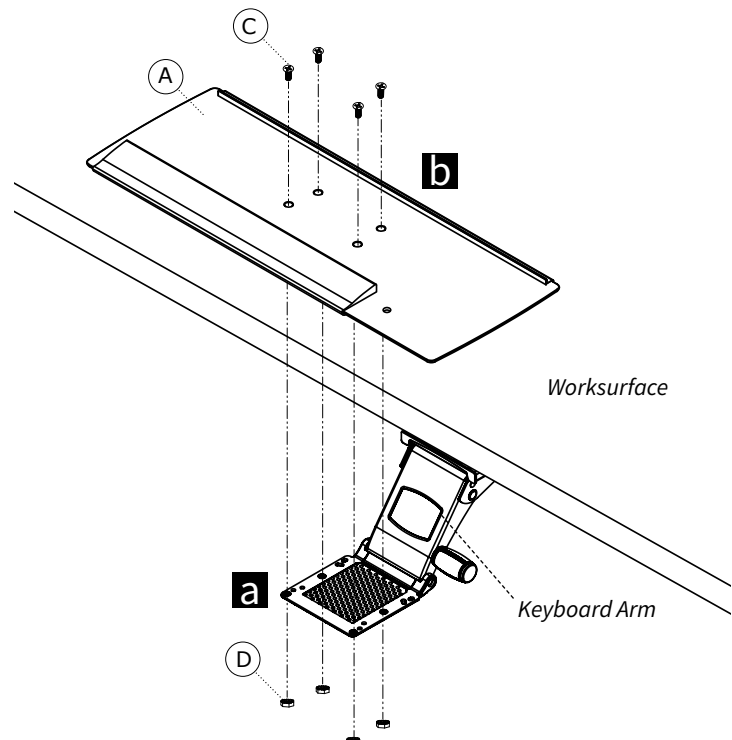

3 Place Mouse Pad


Peel the backing off the Mouse Pad (B) and place in either the right handed or left handed location. The Mouse Pad provides improved traction and pointing accuracy. It can be repositioned by simply peeling it up and placing it elsewhere.

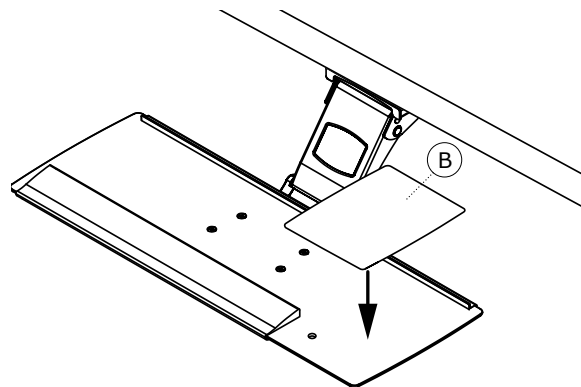

4 Attach Cable Clips and Route Keyboard and Mouse Cords


Note: Make sure your keyboard arm is fully extended before routing your cables.

- a** Place one Cable Clip (E) on the side of the arm mechanism. Place the other Cable Clip on the rear of the track. Do the opposite side in the same fashion if cords run down the left side.




Caution: Adhesion is designed to bond immediately. You will not be able to reposition the clip once it's in place.

- b** Route the Keyboard and mouse cords through Cable Clips and be sure to leave enough slack in cord to allow for unrestricted movement of the mouse.

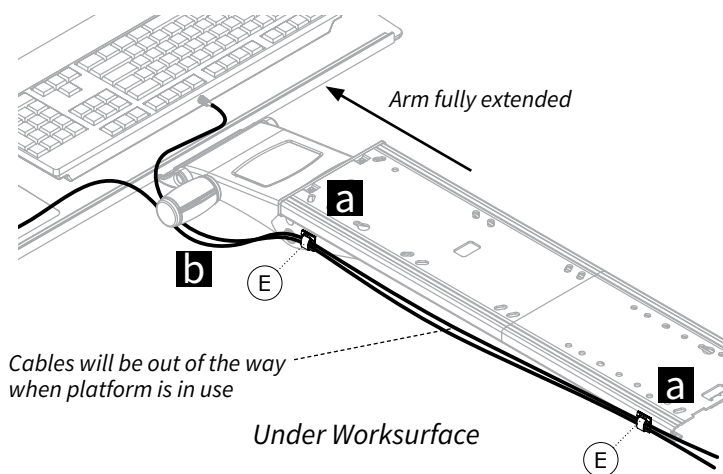

5 Apply Friction Pads

Place Friction Pads (F) on the bottom surface of your keyboard to keep it in place, if necessary. The Friction Pads will keep your keyboard from sliding when the platform is angled.

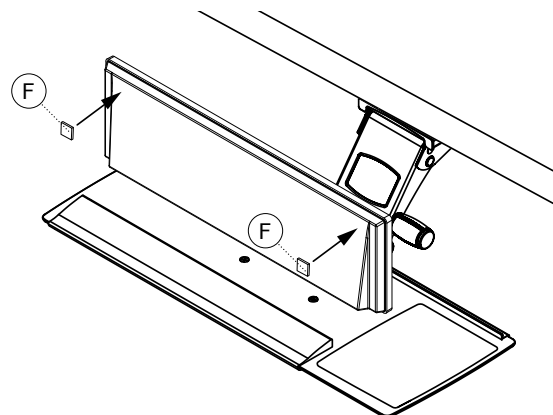

6 Consult the User Guide for your Leader Arm

Go to www.workriteergo.com/instructions to find the Leader Arm User Guide for instructions on how to set up this product for ideal ergonomic benefit.

