

Extension Tubes

Assembly Instructions




Hello! Thank you for choosing Anthro.

Before beginning installation of your Extension Tubes, please take a moment to review the parts listed to verify that your shipment is complete. The AnthroCart (shown shaded & purchased separately) must be completely assembled prior to your Extension Tubes.

IMPORTANT SAFETY NOTICE: The split sleeves contain some sharp edges, please handle with care!

SAVE THESE INSTRUCTIONS!

NOTE: These Instructions cover all Anthro Extension Tubes. Quantity & Length of Extension Tubes will vary.

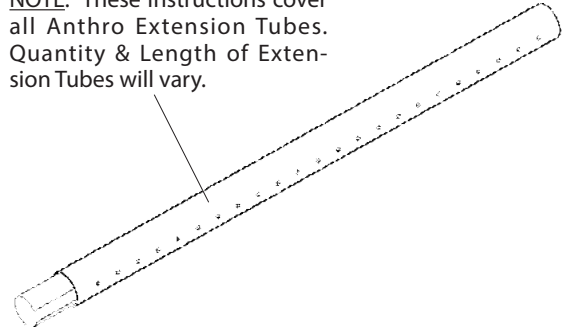

Questions? 1-800-325-3841

Component list

Extension Tube Assembly.....Quantity Varies.....
Wax Stick (not shown)Qty. 1..... 175-5034-00

A Standard Flat Head Screwdriver (not included), may be needed for this assembly procedure.

Step 1

If you are installing your Extension Tubes to an assembled AnthroCart, begin by removing the Small End Caps with a Standard Flat Head Screwdriver. (There is a small notch on the End Cap for easy removal).

Next, take the small blue wax stick from the box and rub it on the Split Sleeve of each Extension Tube. This greatly eases the tube insertion process.

Align up the holes of an Extension Tube with a Leg, then insert the Extension Tube into the Leg.

Repeat for remaining Extension Tubes as necessary.

Congratulations! Your assembly is complete.

NOTE: Make certain to align the Holes of your Extension Tubes with the Legs on your AnthroCart.

