

Anthro[®] Hanging Drawer Drill Template *(for the 275xx, 278xx & 298xx)*

Template Scale — 1 : 1





Document # 300-5140-00, page 1 of 2

The following tools are required to complete this procedure: *an electric drill, 1/8" drill bit, masking tape, ruler & scissors.*

1. Put the two pages of the template together so that the A arrows align and the B arrows align – not touch, just align.
2. Tape the pages together and trim out the template along the dotted lines.
3. Position the template on the underside of your cart's shelf so that the front edge of the template is at least 1 3/4" from the edge of the shelf.
4. Using the electric drill and the 1/8" drill bit, drill six holes 3/4" deep into your shelf as indicated on the template. How do you make sure the holes are 3/4" deep? Mark your drill bit with a piece of masking tape 3/4" from the drill's tip. Stop drilling when you get to the tape.
5. Partially install four wood screws into the corner holes on the shelf so that the heads are about 1/4 - 1/2" from the shelf.
6. Complete assembly of your drawer according to its enclosed instructions.


Questions? Call 800.325.3841

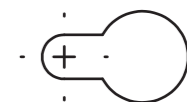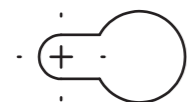

A ▼



B ▼

B ▲

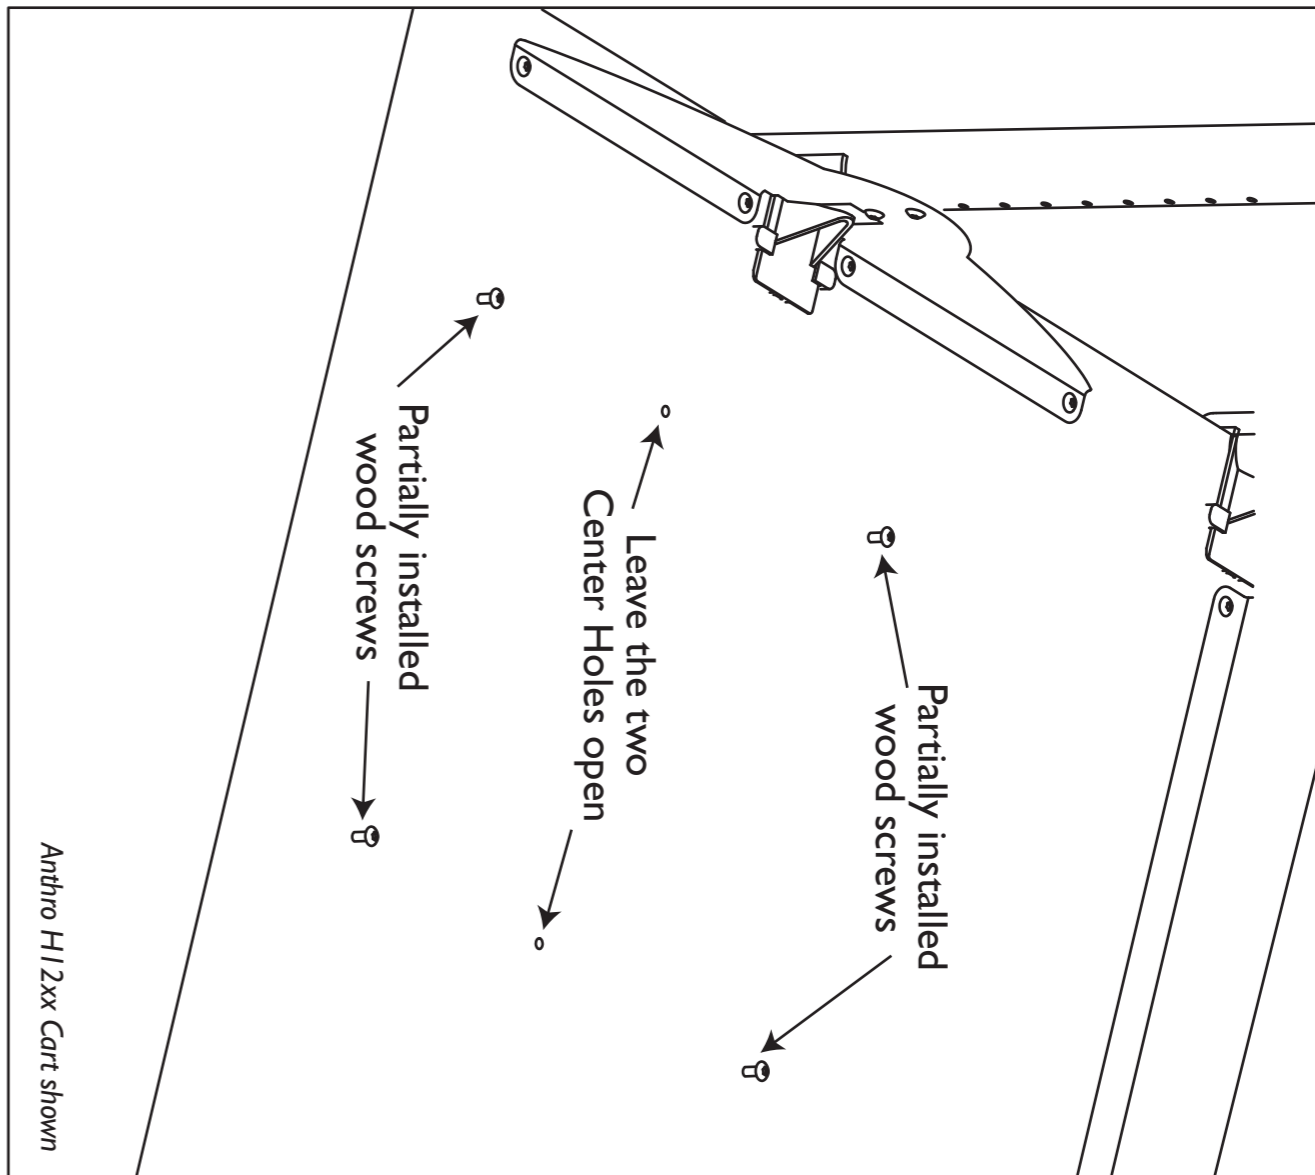

13 3/8" W

Center Hole

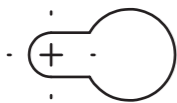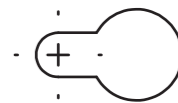

A ▲

Place this edge of the template 1 3/4" from the front edge of your cart.



www.anthro.com

Anthro® Corporation Technology Furniture®

Printed in USA. April 2008, Rev. C

10450 SW Manhasset Dr. Tualatin, Oregon 97062

Document # 300-5140-00, page 2 of 2