



# Assembly Instructions, Line of Sight Gang Brackets: LO3-STGANGBRKT-B




## Parts Included

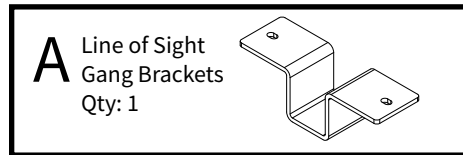

## Required, Sold Separately

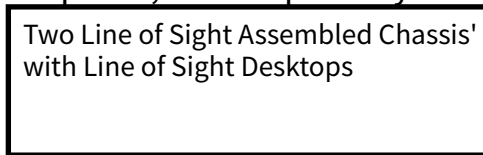


## Tools Required

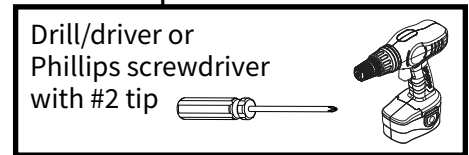

**Note:** Ganging Brackets are REQUIRED for all Line of Sight Workcenter side-by-side configurations when using Power Track power distribution.


## 1 Arrange Line of Sight Workcenters Side-by-Side

Place two fully assembled Line of Sight Workcenters side-by-side until their worksurfaces touch and they are aligned side-by-side.

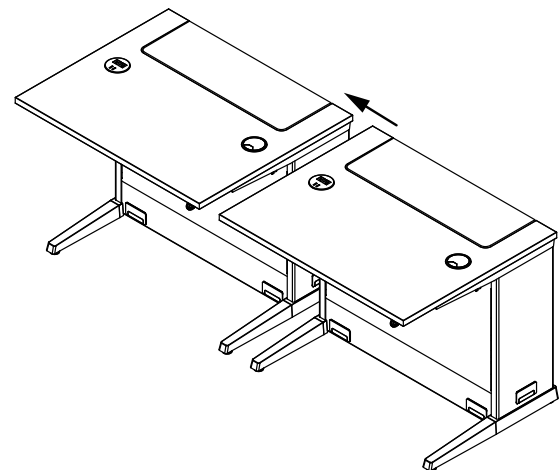


## 2 Remove Existing Screws From the Top Bracket

Remove and retain the worksurface screws from the second hole location in the opposing Top Brackets for your two side-by-side workcenters.

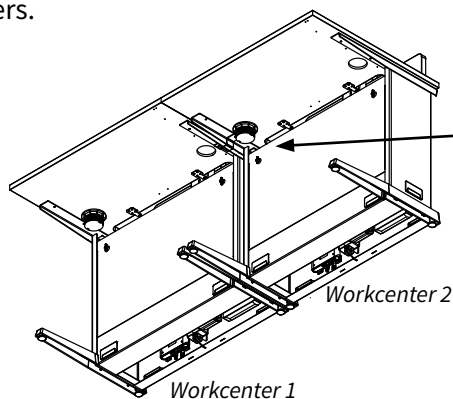


Under Workcenters

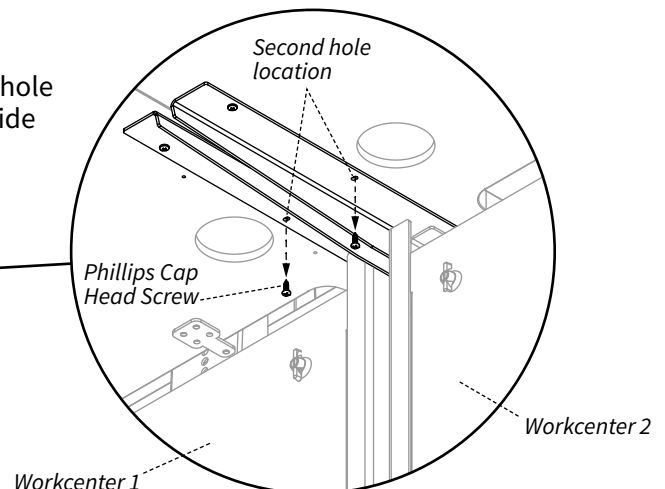

### 3 Join Two Side-by-Side Chassis With Gang Bracket

With Workcenters aligned and the screws removed, attach the Gang Bracket (A) with the worksurface screws from the preceding step, joining the two workcenters together.

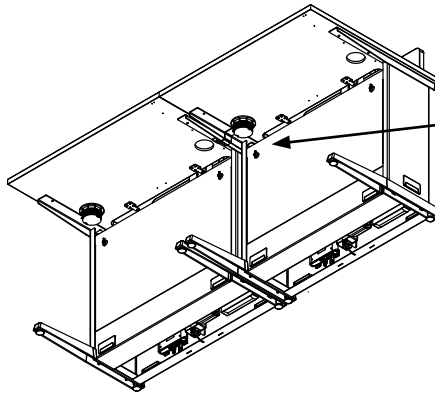

*Under Workcenters*

