



# Assembly & Installation Instructions: ISE Cable Troughs SA-CTB-XX-XXX

**Included:**

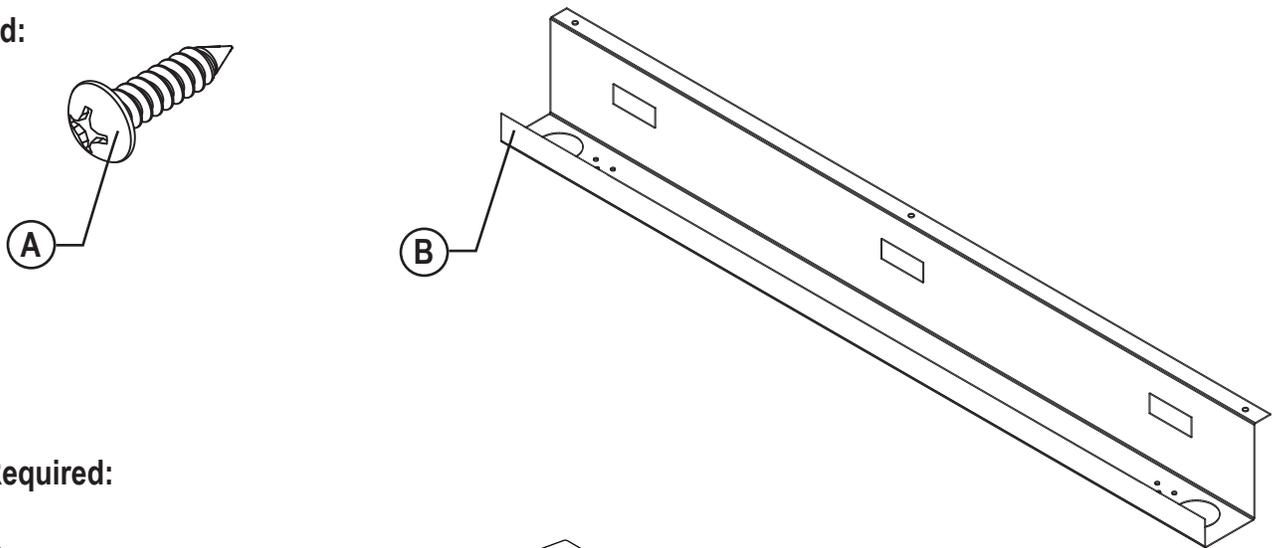


**Tools Required:**

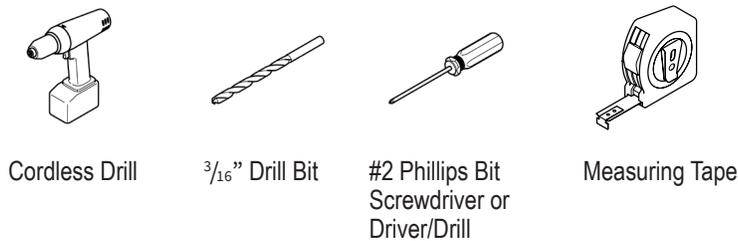


ID	Part Name	Qty
A	#10 × 3/4" Phillips Pan Head Screws	3
B	Cable Trough	1

**1**


Position Cable Through (B) underneath the worksurface

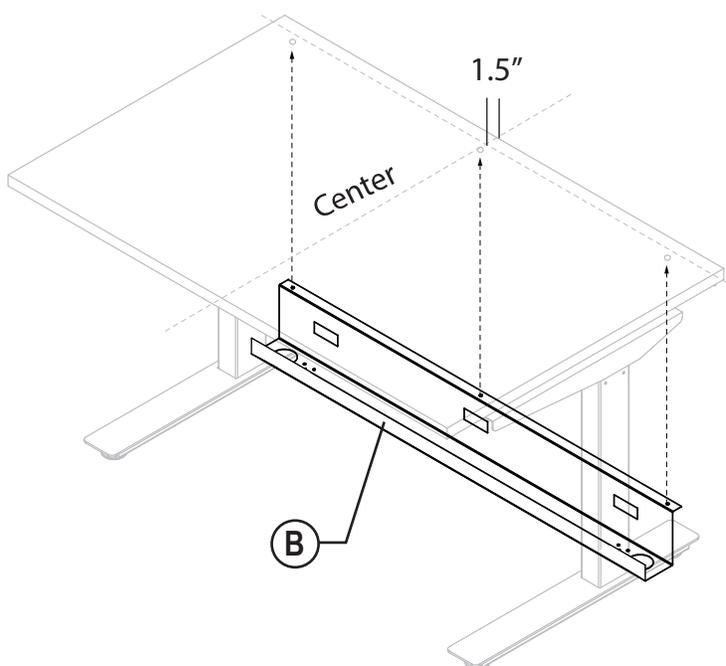

Centered the Cable Trough (B) left to right and 1.5" from rear edge of worksurface

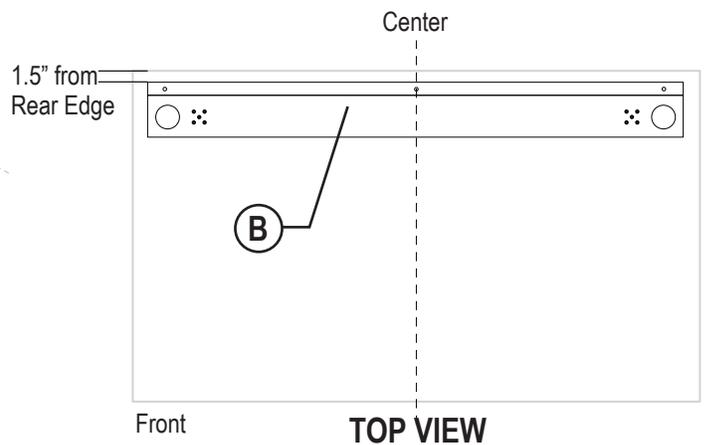


## 2 UNDERSIDE VIEW

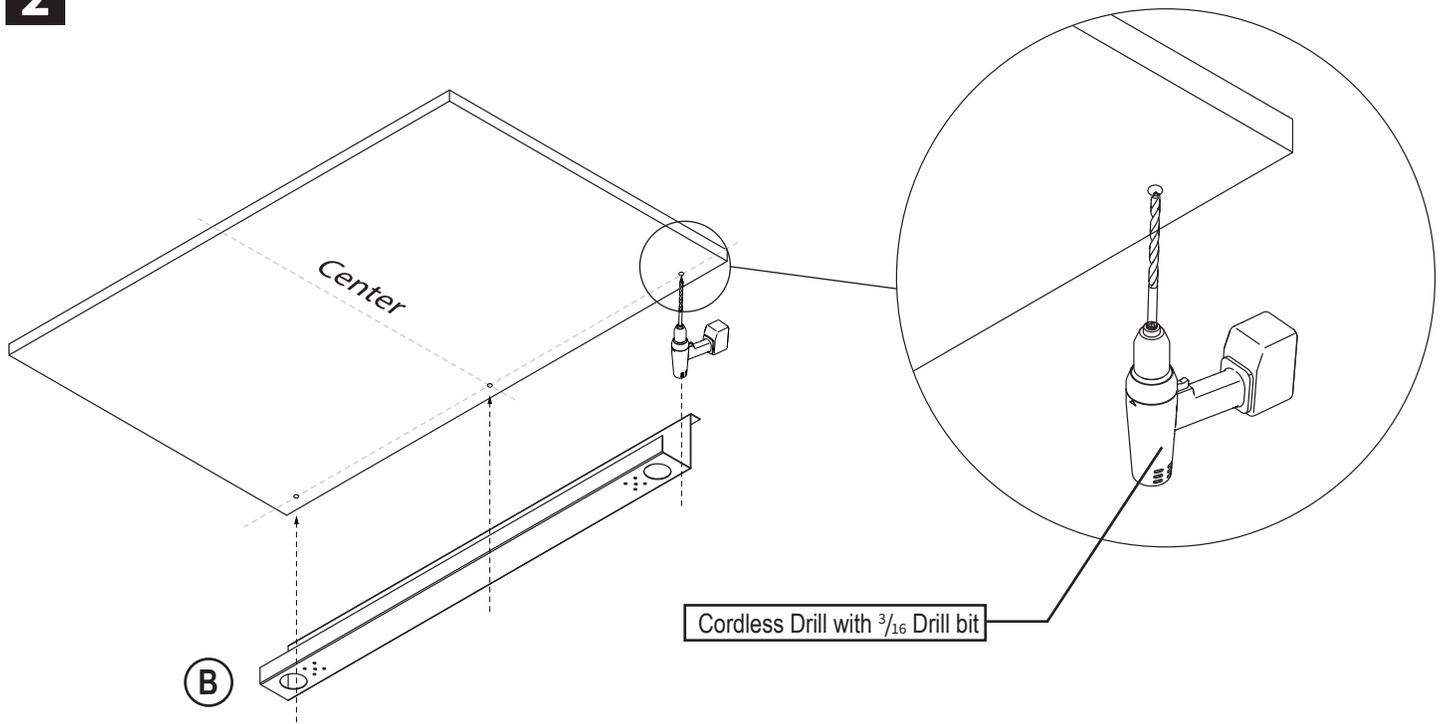

Drill three pilot holes using  $\frac{3}{16}$  Drill Bit

**!** Drill Three Pilot Holes from Underside of Worksurface  
DO NOT DRILL DEEPER THAN  $\frac{3}{4}$ "

## 3 UNDERSIDE VIEW

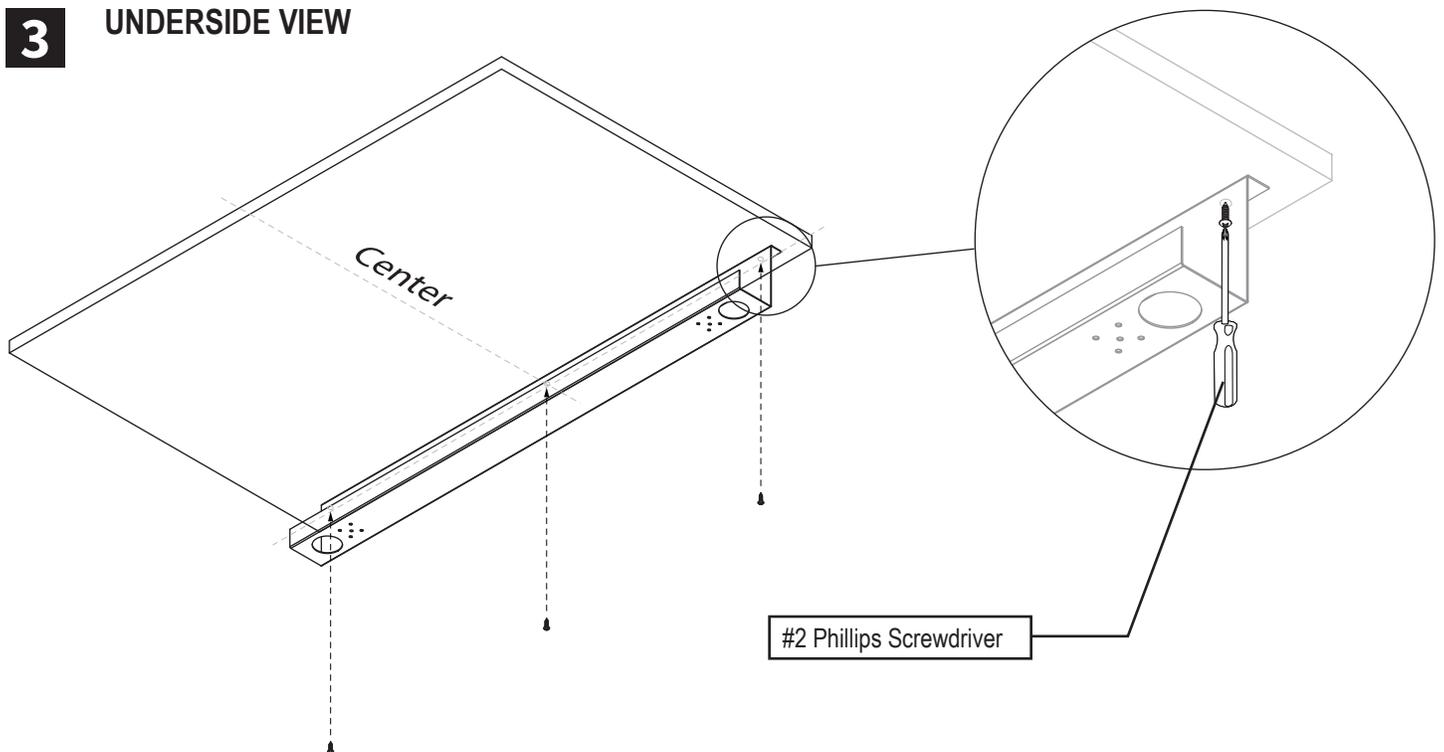

Use #10 ×  $\frac{3}{4}$ " Pan Head Screws (A) to attach trough to worksurface