


# Assembly & Installation Instructions: Cable Trough, ACC-CBLTRKIT-XX-X

## Parts Included

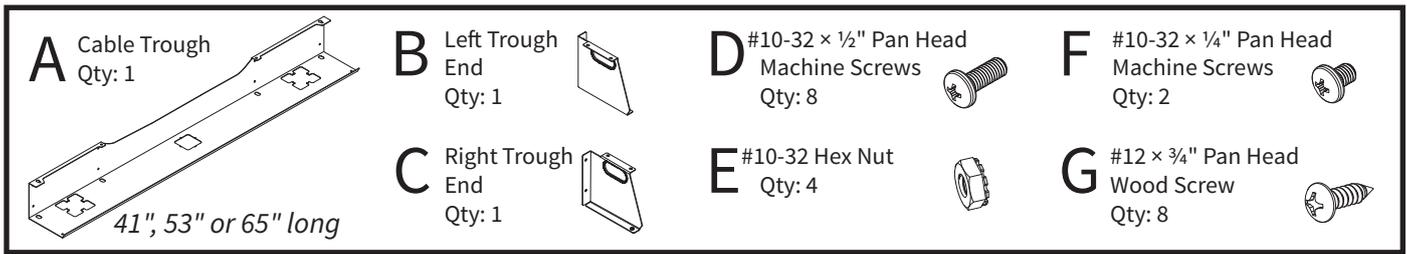


## Optional & Sold Separately

Daisy Chain Power System, Rigid Modesty Panel

### ✓ Verify that you have all the tools needed for the assembly

#2 tip Phillips screwdriver over 6" long or drill/driver with extension ¾" wrench if needed for Hex Nut (E)

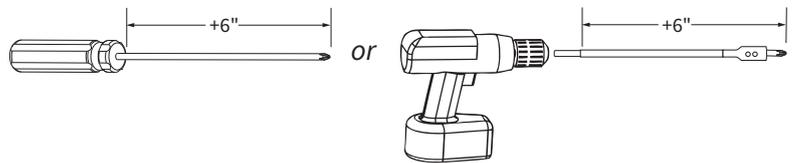


## 1 Attach Trough Ends to Cable Trough

- a** Slide Trough Ends (B & C) onto Cable Trough (A).
- b** Attach from below using #10-32 × ¼" Pan Head Machine Screws (F). Repeat for other side.

If Installing optional Rigid Modesty Panel, skip to **Step 2**.


- c** Attach from behind Trough using the #10-32 × ½" Pan Head Machine Screws (D) and the #10-32 Hex Nuts (E). Repeat for other side.

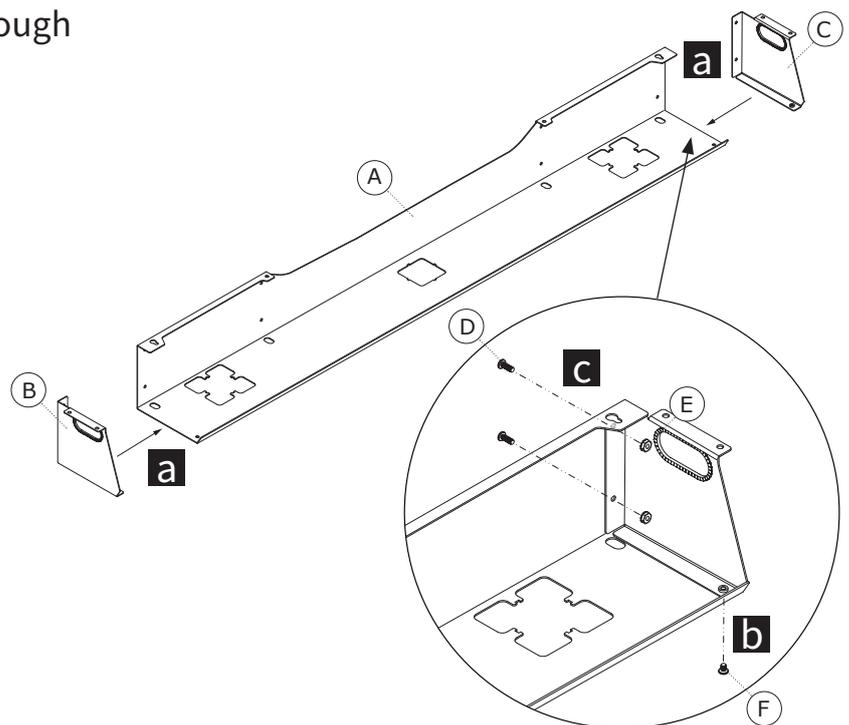

Trough only installation

## 2 Attach Cable Trough to Underside of Worksurface

- a Align holes in Cable Trough with holes in bottom of your Workrite pre-drilled worksurface.
- b Attach Trough assembly using the #12 × 3/4" Phillips Pan Head Screws (G). Access holes provide easy attachment with long screwdriver.

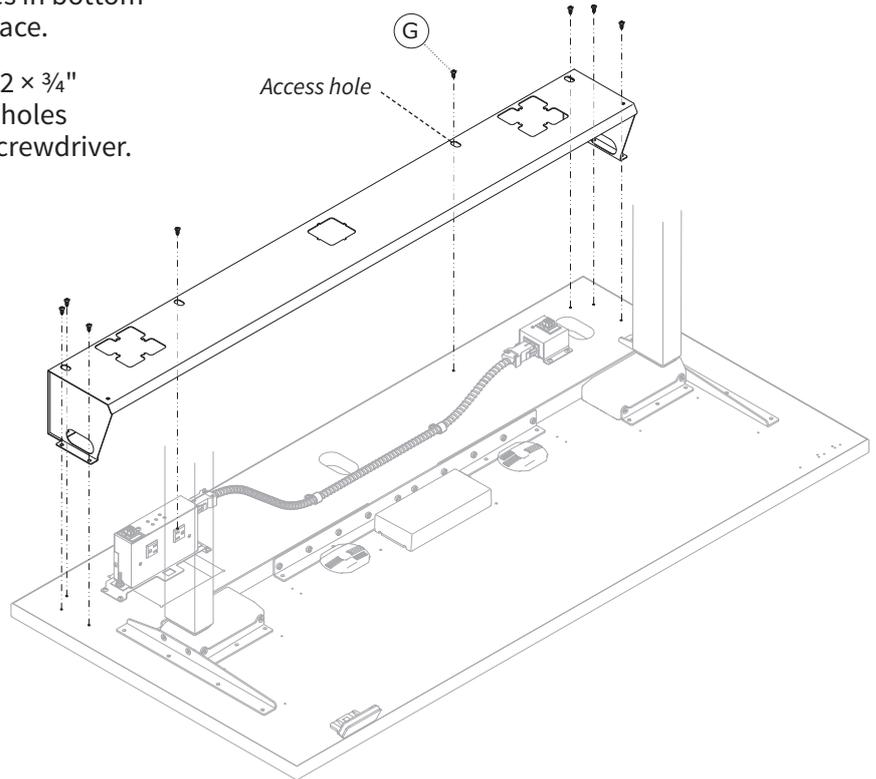

*Under Benching Worksurface with optional Rigid Modesty Panel & Daisy Chain Power System*

## 3 Attach Tough Ends to Cable Trough With Optional Rigid Modesty Panel

Skip this step unless you've purchased the Rigid Modesty Panel ACC-MODPNL-XX-B3

Attach Trough (A) to the threaded inserts on the Rigid Modesty Panel from inside Trough using the eight #10-32 × 1/2" Pan Head Machine Screws (D).

