

Keyboard Tray Installation




To install the keyboard tray, you will need the following items:


Keyboard Tray





Wrist rest

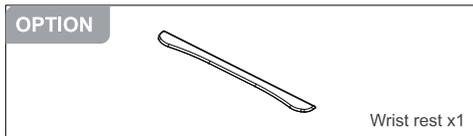

Keyboard Mechanism

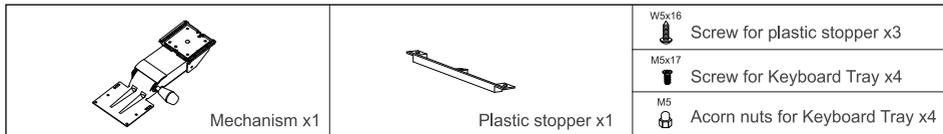


Screwdriver (not included)

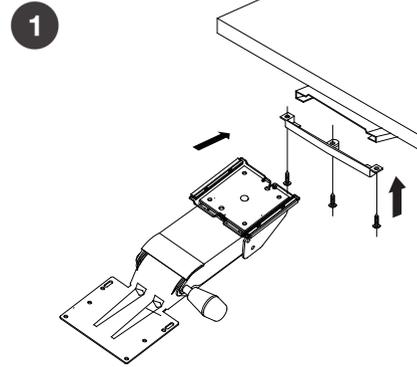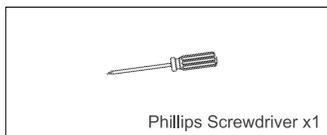


First, slide the keyboard tray **mechanism** onto the tracks on the underside of the EasyLift Desk.


After the keyboard mechanism is on the tracks evenly, place the **plastic stopper** in front of the keyboard tracks and line it up with the indicated screw holes. Use screws **W5x16** and insert into the 1st and 3rd holes first and screw in completely, followed by the 2nd screw hole.

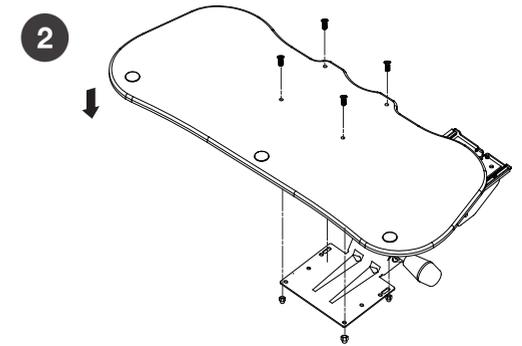

Second, line up the screw holes on the keyboard tray **platform** with the holes on the keyboard mechanism. Line up and insert the 4 **M5x17** screws into the indicated holes on top of the keyboard tray platform and line up and place the 4 **M5 acorn nuts** to the underside of the mechanism. Once in this position, screw in and tighten the M5x17 screws into the M5 acorn nuts.

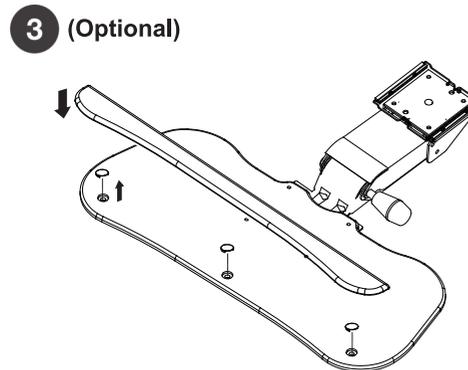

Remove the 3 caps on the end of the keyboard tray and place in a safe location. Attach the wrist rest until you feel all 3 placements have been magnetically secured.

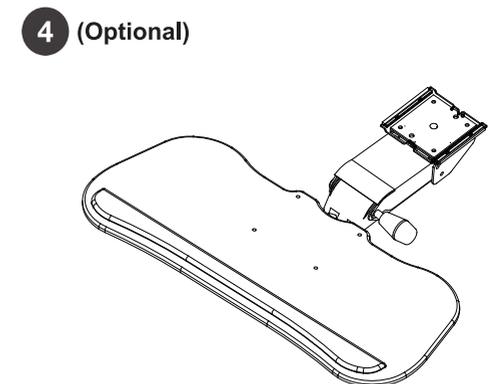

The keyboard tray and wrist rest are securely in place and ready for use.

***Note:** Some ergonomists advise against the use of wrist rests as it encourages wrist planting.