


## Parts Included

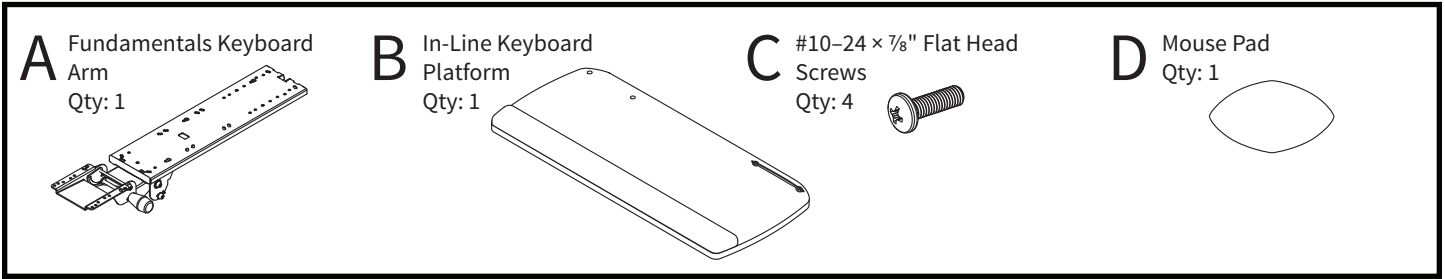

## Tools Required

#2 tip Phillips screwdriver or drill/driver

### 1 Mount the Keyboard Arm to the Worksurface

Use the instructions that came with the Keyboard Arm to mount arm under worksurface.

### 2 Attach Keyboard Platform to Keyboard Arm

Attach Keyboard Platform (B) to Arm (A) using the four Flat Head Screws (C) and Keps-Nuts (D) provided.

### 3 Adhere Mousing Surface to Keyboard Platform

Choose either left or right handed. If choosing left handed, move the Mouse Trap to the left as well.

