

Assembly & Installation Instructions: Tranquility Single Panel Desk Mount Kit, TRQ-MNT-DESK1PNL-B

Parts Included

- A** Single Panel Desk Mount, "L" Bracket
Qty: 2



Hardware Kit

- B** #10-32 × 5/16" Pan Head Screws
Qty: 4



- C** #12 × 3/4" Pan Head Phillips Screws
Qty: 4



Required, Sold Separately

Tranquility Poly Panel(s) with threaded inserts
Worksurface at least 1" thick


Tools Required

#2 & #3 tip Phillips screwdriver or drill/driver
Drill with 1/8" drill bit
Pencil

Note: If you've purchased the Trough Mount kit, see other side.


1 Attach "L" Brackets to Tranquility Poly Panel

Attach the two "L" Brackets (A) to the threaded inserts on the Tranquility Poly Panel with the four #10-32 × 5/16" Pan Head Screws (B). Tighten Securely.

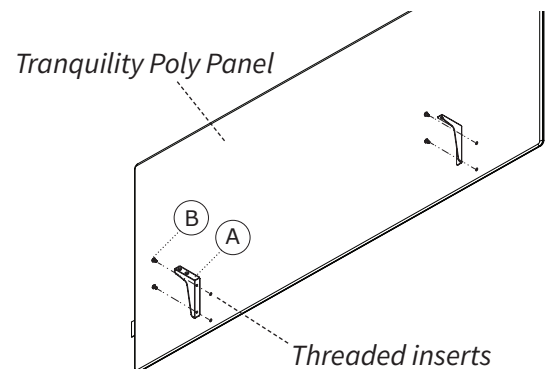

2 Locate Panel and Mount to Worksurface


- Center the Panel left to right on the side of the worksurface. Position flush with edge of worksurface.
- Optional:** If cables need to be routed down the side of the worksurface where the Panel will be attached, move the panel back 1/2" to create a small gap to route cables.
- Using a pencil, mark the location of the four holes on the bottom of the worksurface using the holes in the two "L" Brackets as guides.
- Use 1/8" drill bit to drill pilot holes at the four locations.
- ⚠ You may wish to mark your drill bit so you do not drill any more than 3/4" deep and damage your worksurface top. Do not drill all the way through your worksurface!**
- Attach Panel assembly using the four #12 × 3/4" Pan Head Phillips Screws (C).

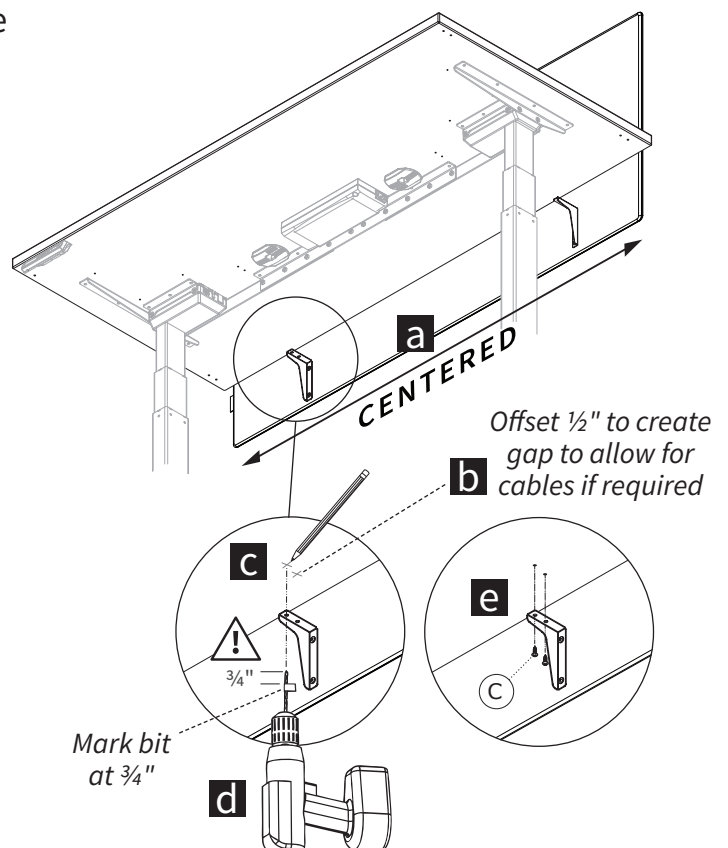


Assembly & Installation Instructions: Tranquility Single Panel Trough Mount Kit, TRQ-MNT-TROUGH1PNL-BA

Workrite
ergonomics®

Parts Included

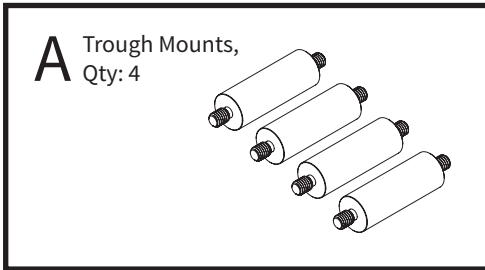

Hardware

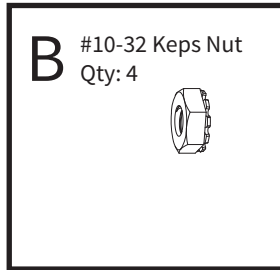

Required, Sold Separately

Workrite Trough installed onto workcenter
Tranquility Poly Panel(s) with threaded inserts


Tools Required

$\frac{3}{8}$ " wrench

Note: If you've purchased the Single Panel Desk Mount Kit, see other side.

1 Attach Mounts to Panel

Attach the four Trough Mounts (A) to your Tranquility Poly Panel.

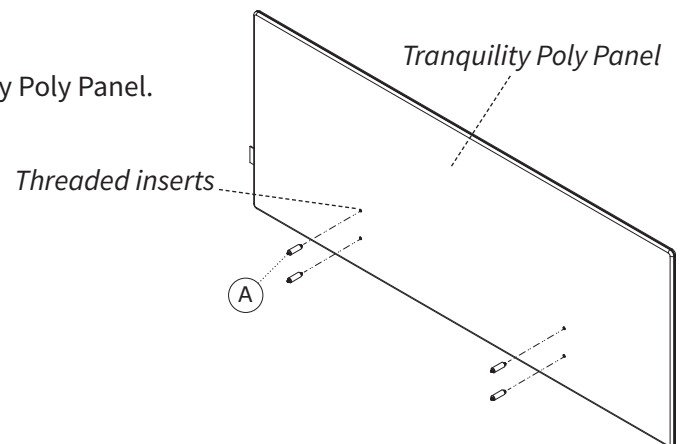

2 Attach Panel Assembly to Trough

Attach the four Trough Mounts (A) on your Panel assembly through the holes in the backside of your Workrite Trough using the #10-32 Keps Nuts (B). Tighten securely with $\frac{3}{8}$ " wrench.

