
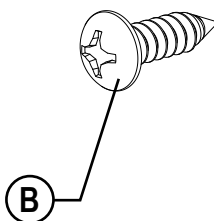


# Assembly & Installation Instructions: Hanging Pedestal ACC-HPED-X

**Workrite**  
ergonomics®

## Included:

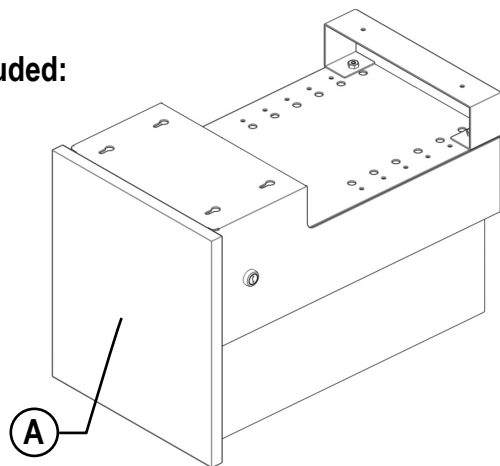


ID	Part Name	Qty
A	Hanging Pedestal	1
B	#12 × ¾" Phillips Pan Head Screws	6

**Required, Sold Separately:**  
Desk or Table

## Tools Required:




4 mm Hex Key

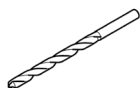


1/8" Drill Bit



Cordless Drill

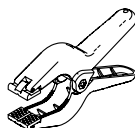

Clamp (2x)

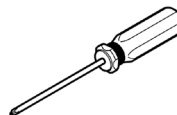


#3 Phillips Screwdriver  
or Drill/Driver

**WARNING:** Installation on table with payload below 200 lb not recommended  
Weight capacity of Hanging Pedestal is 30 lb

NOTE: Different worksurface materials may require alternative mounting screws



## 1 REMOVE DRAWER

Completely remove drawer  
from main body of pedestal.

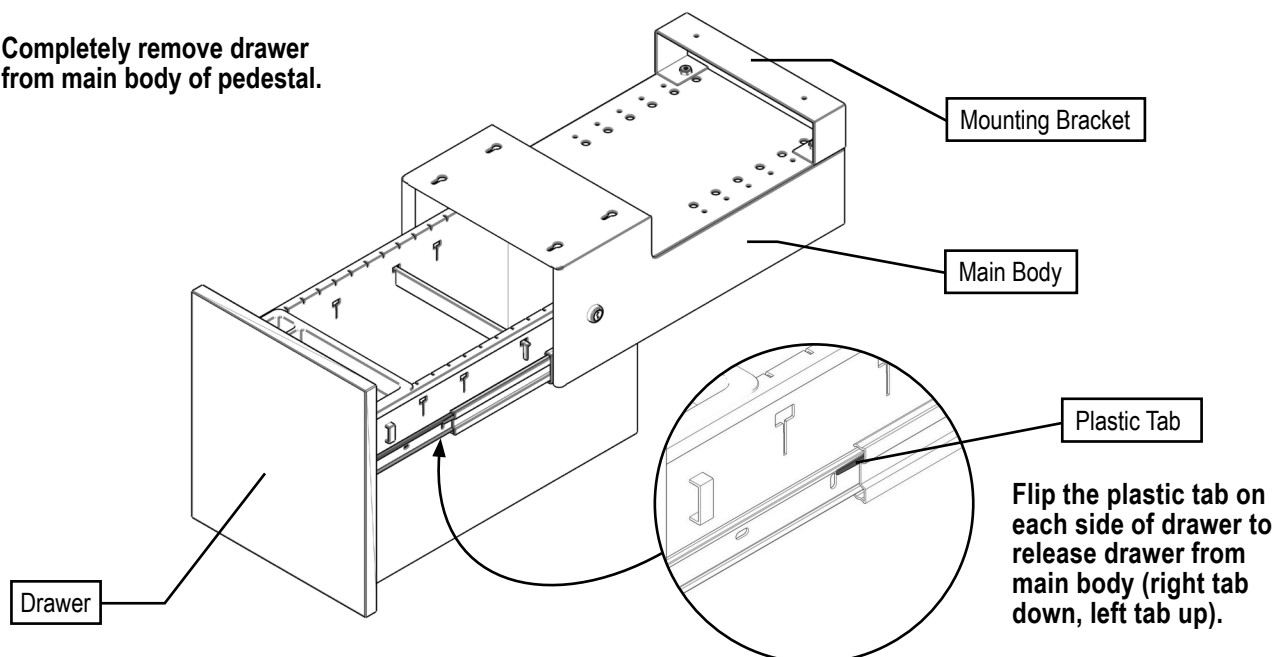

## 2 DETERMINE REAR BRACKET LOCATION

- 2.1 Determine where to install the mounting bracket on the main body.
- 2.2 When main body is positioned  $\frac{7}{8}$ " from front edge of worksurface, mounting bracket should be positioned as far back as possible under the worksurface.

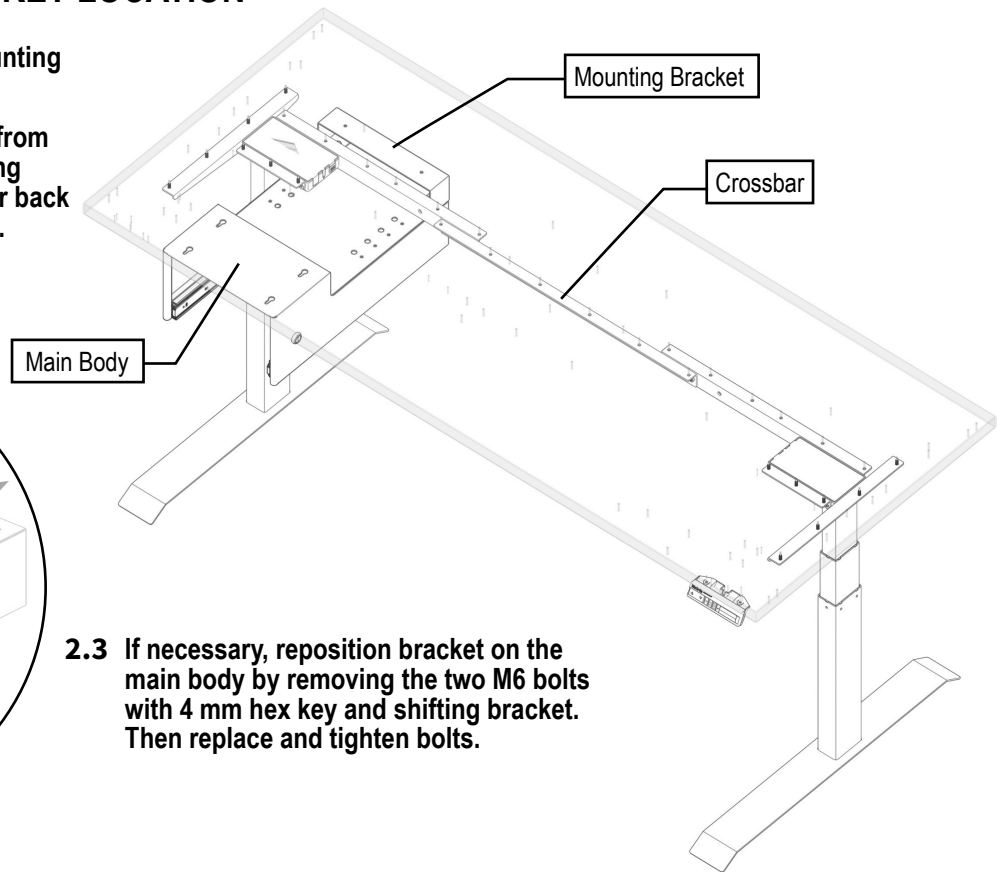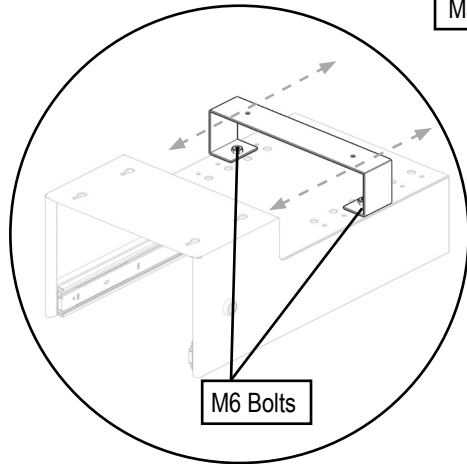


- 2.3 If necessary, reposition bracket on the main body by removing the two M6 bolts with 4 mm hex key and shifting bracket. Then replace and tighten bolts.

## 3 ATTACH MAIN BODY TO WORKSURFACE

**WARNING:** 1" space required between main body and other objects (switch, legs, control boxes)


- 3.1 Position main body  $\frac{7}{8}$ " offset from the front edge and clamp it to underside of worksurface  
Use pencil to mark holes (x6)

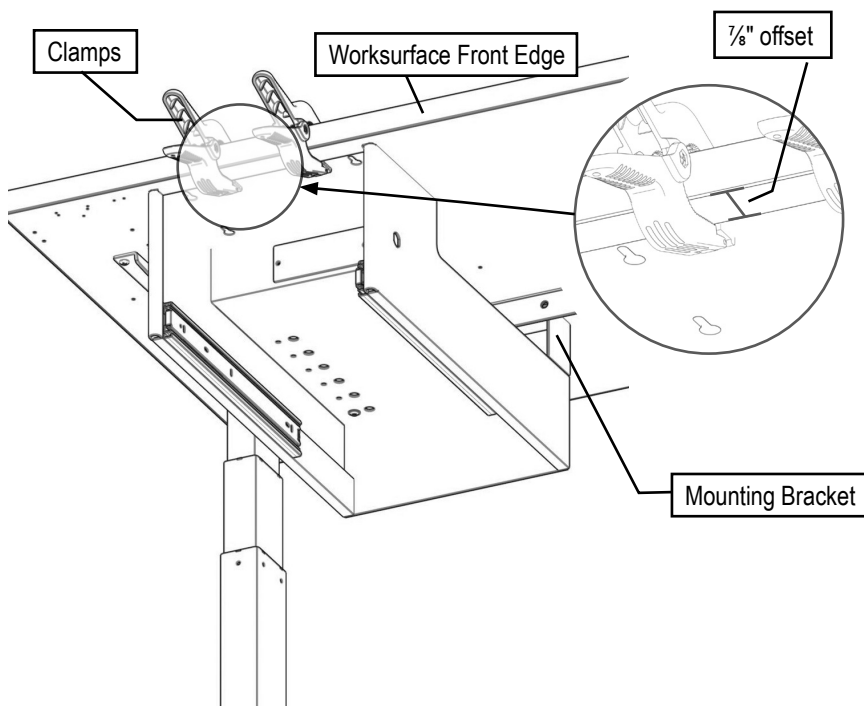

- 3.2 Remove clamps and main body from worksurface


- 3.3 Pre-drill pilot screw holes (x6) on underside of worksurface. If using provided hardware, use  $\frac{1}{8}$ " drill bit.


**DO NOT DRILL DEEPER THAN  $\frac{3}{4}$ " INTO WORKSURFACE**

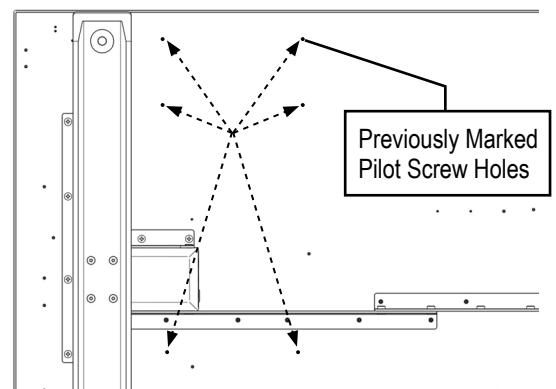


## 4 ATTACH REAR BRACKET AND MAIN BODY TO WORKSURFACE

- 4.1 Reclamp main body to underside of worksurface making sure to line up the holes on the main body to the pre-drilled holes
- 4.2 Attach main body to worksurface using (x6) #12 x 3/4" Phillips pan head screws (B).

 If the worksurface which the hanging pedestal is being mounted to is not flat, spacers may be required to mount.

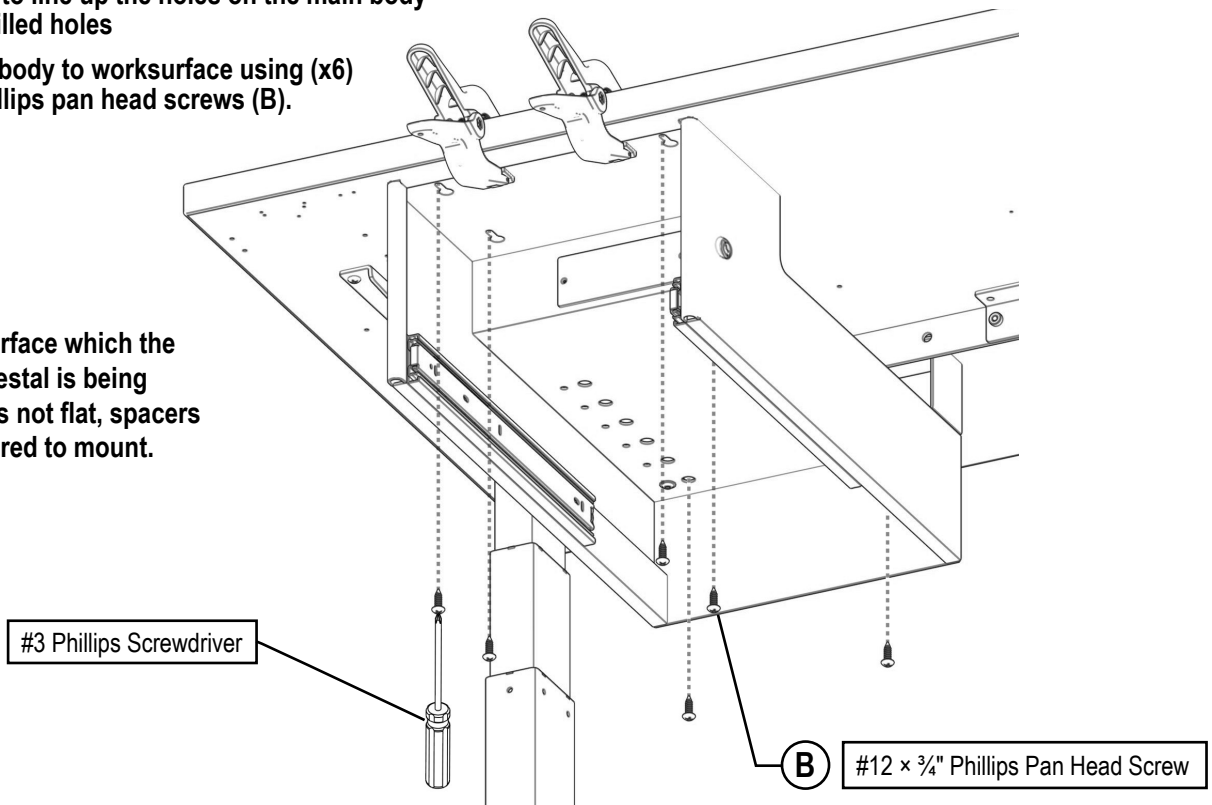

## 5 REMOVE CLAMPS AND INSERT DRAWER

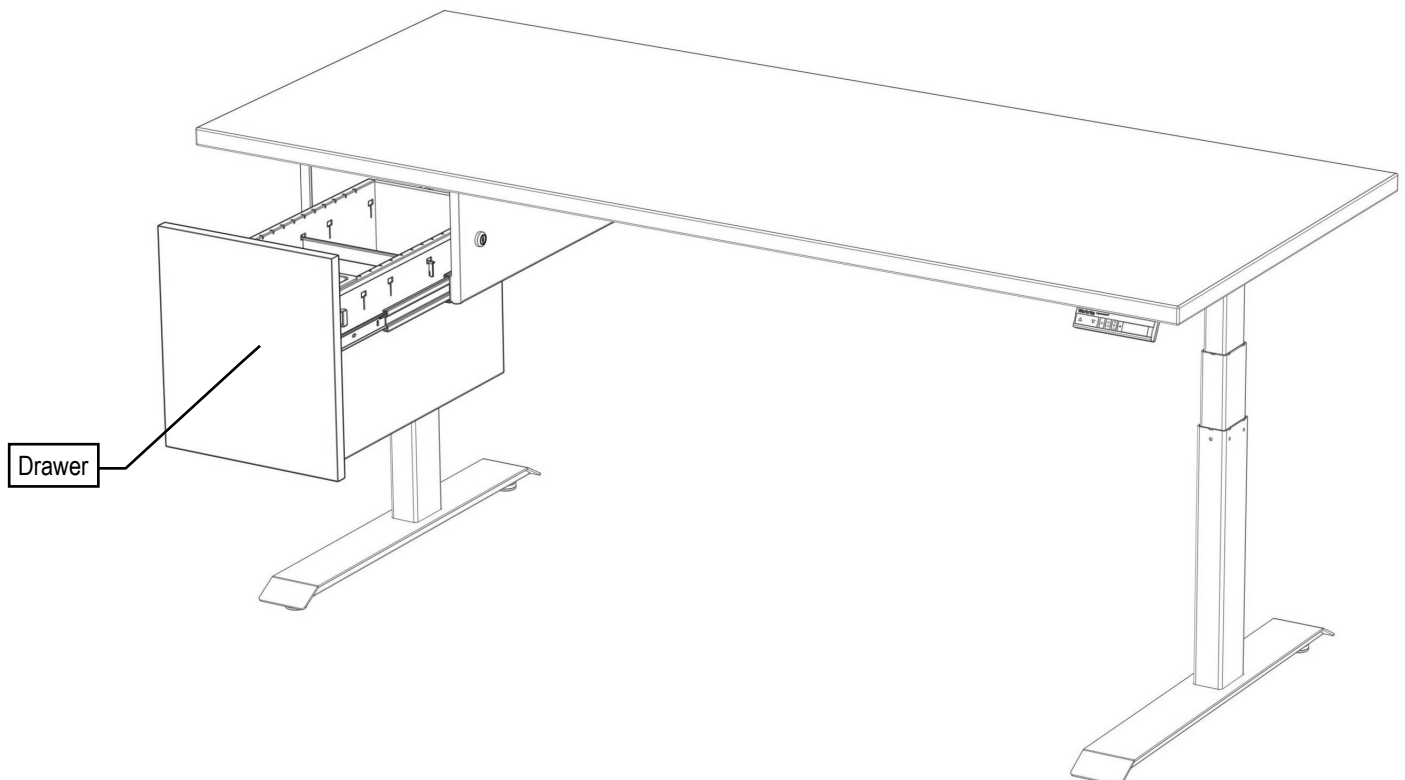

1500407 Rev B