


# Installation Instructions: Workrite Laptop Holder MON-LTH2-ADJ-S


## Parts Included

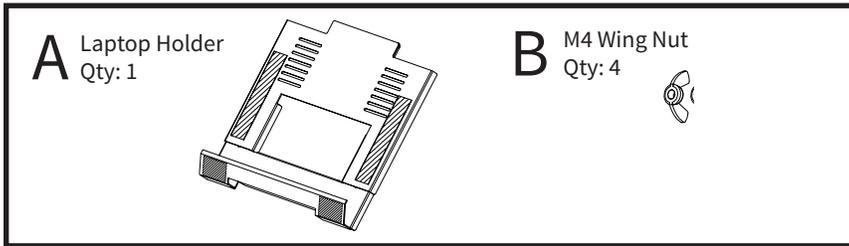

No tools are required to install the Laptop Holder to your monitor arm. You may need a screwdriver to remove installed monitors.

### **1** Attach the Laptop Holder to any monitor arm with a MIS-D VESA mount (75 mm. × 75 mm.)


Using Wing Nuts (B), attach the Laptop Holder (A) to the VESA plate on your monitor arm. Tighten securely.

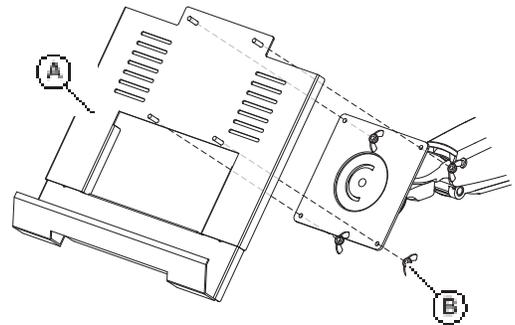

### **2** Adjust the Lower Tray to fit your laptop computer

Loosen the pre-installed wing nuts on the bottom of the Laptop Holder to raise or lower the Lower Tray so that your laptop computer rests securely and is well balanced for use.

**NOTE:** Adjust the Lower Tray so that no more than 25% of the laptop is above the Laptop Holder.

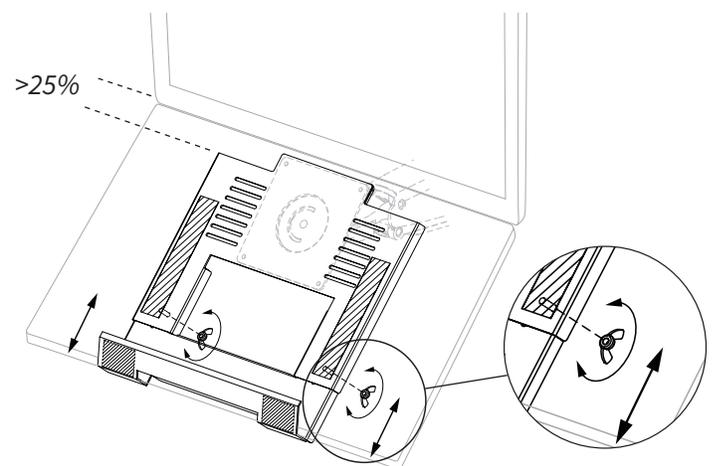

### **3** Adjust the tension on your monitor arm

Adjust the pivot tension at the top and mid-arm of the monitor arm for the Laptop Holder.  
**NOTE:** Workrite Monitor arms include plus and minus symbols to guide in adding friction (+) or lessening friction (-).

