


AnchorPad®

a Business Machine Security Company


Anchorpad a BMS Company 520 West Central Avenue Brea, CA. 92821

Toll-Free: 800.626.2467 | Fax: 714.990.5409 www.anchorpad.com


Model 31177 | Laptop Security Stand | Installation Instructions

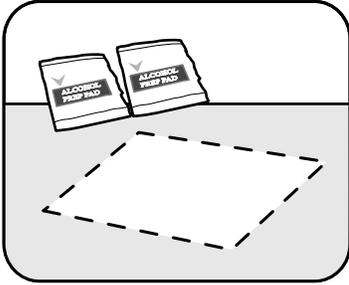


STEP 1:
With Alcohol pads, provided clean the surface where Base Plate will be positioned.

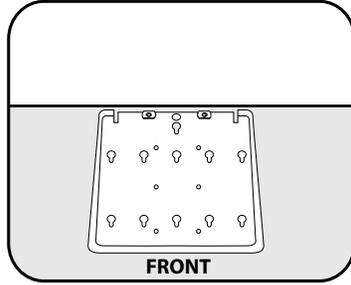


STEP 2:
Place Base Plate in final placement position, making sure the side with the three holes is facing away from you.

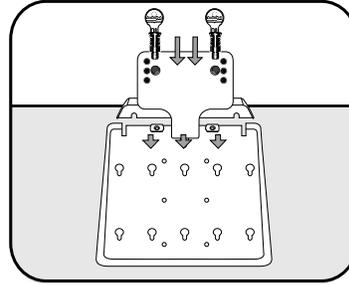


STEP 3:
Assemble the Lock Block to the Base Plate. Slide Weld-nut bar under base plate and insert keys into lock block.

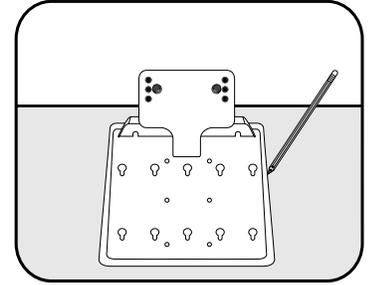


STEP 4:
Place Base Plate in final placement position. Mark position with a pencil to use as installation guides.

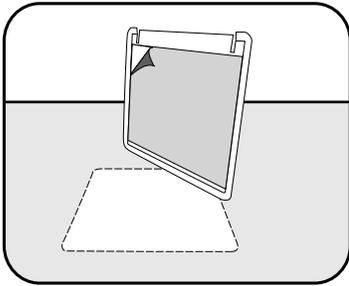


STEP 5:
Once marked, lift plate and remove protective liner from adhesive tape on bottom.

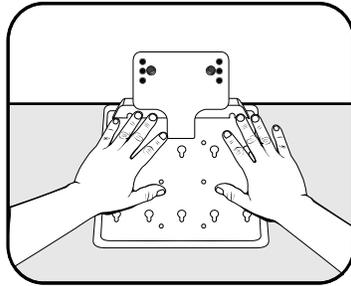


STEP 6:
Press firmly down against the plate and rotate hands in a circular motion to remove air pockets from bottom of plate.

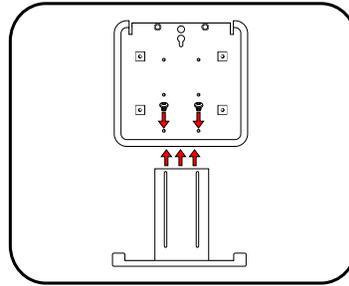


STEP 7:
Align Slide Bracket slots to the base plate. Screw Bracket loosely allowing bracket to slide easily.

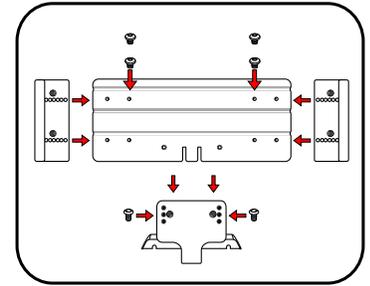


STEP 8:
Assemble Back Plate and wings according to size of your laptop. Slide Ribbed Plate onto Paddle Bracket and secure with screws.

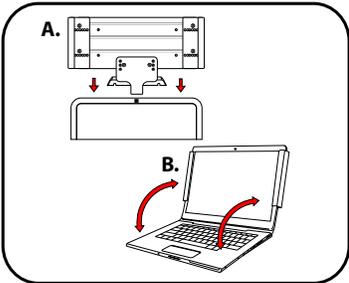


STEP 9:
(A) Slide assembled Back Plate onto laptop. (B) Once attached fold keyboard towards monitor.

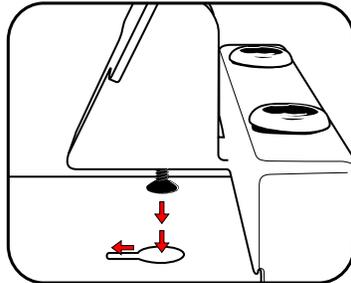


STEP 10:
Connect Back Plate to Base Plate by inserting the flat-head screw into the keyhole and pulling forward to lock.

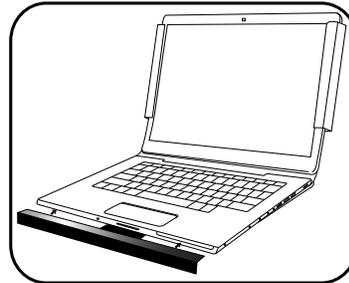

STEP 11:
Adjust Slide Bracket to fit snugly on keyboard. Mark position with pencil on bottom of slide. Remove back plate and tighten slide bracket on base plate at marked position.

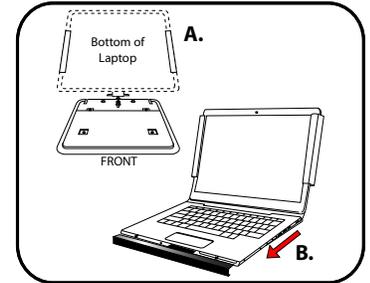

STEP 12:
(A) Re-insert flat head screw with computer in place. (B) Slide Back Plate and laptop forward to locked position and tighten flat-head screw from the bottom until snug.

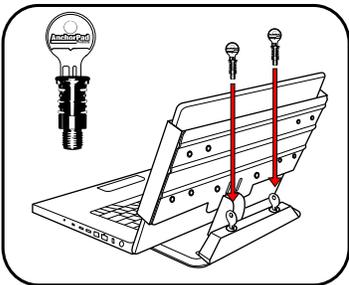

STEP 13:
Insert both locks into the Lock Block. Use keys to turn locks clockwise until fully threaded into pennuts on the Base Plate. (**Do Not Overtighten**) Remove keys. Record key code for future reference and store keys in a safe place.

Notes Before Beginning Installation:

1. To familiarize yourself with the entire installation process, please take a moment to read through all of the installation steps.
2. Disconnect all cables from the back of the Mac Pro computer and clear the work surface around the desk.
3. Please allow 24 hours for complete curing of adhesive.

Tools and Components included in your package:

