


Armrest Mounting Instructions

Most OM Seating chair models ship with seats that have 2 different hole patterns pre-drilled to allow field installation/retrofit; regardless of whether the chair originally came with a 4- or 3-hole-pattern armrest.


Note: Seat woods & holes are often covered by a paper or non-woven material for aesthetic reasons. To locate these arm holes behind the covering, tap lightly and/or feel with your fingers to find the hollow spaces indicating arm hole locations.

See illustration below for explanation:

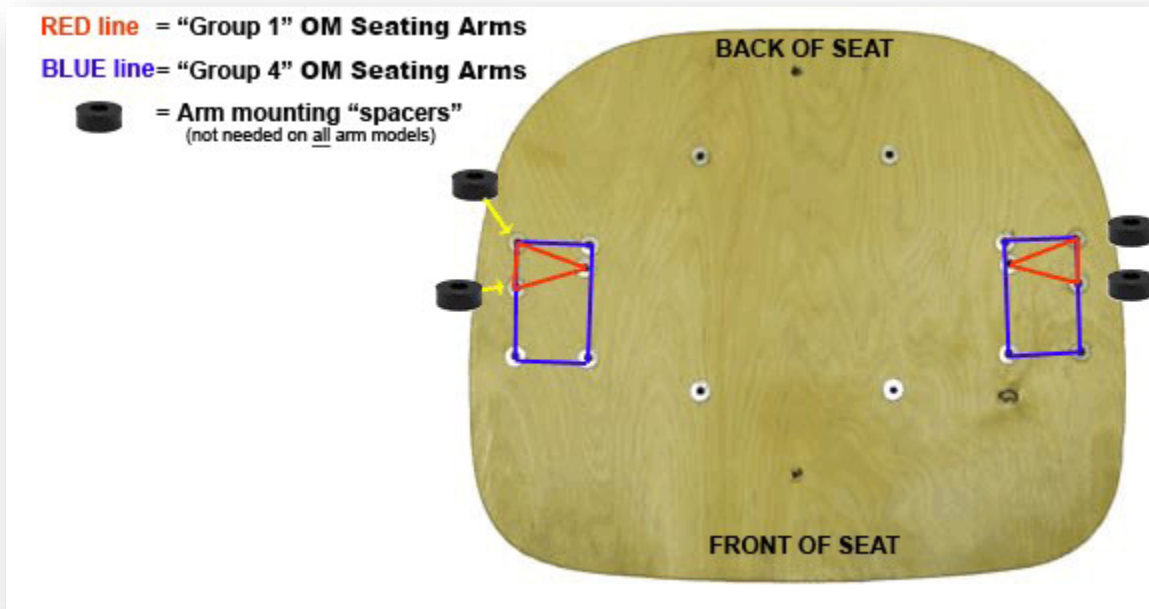


To Install armrests:

1. Remove pre-installed arms completely (if any).
2. Insert spacers (provided) to line up between the appropriate holes at the bottom of the seat and the corresponding holes in the armrest bracket (also provided). These spacers are only needed – 1 each – on the 2 outermost holes (i.e., closest to the outside edge of the seat when armrest is mounted):

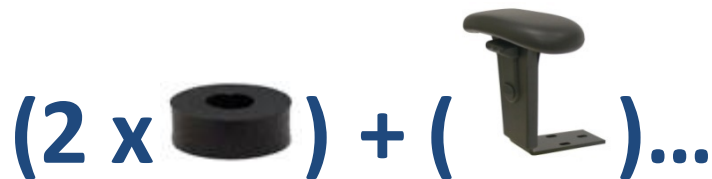

Armrest Mounting Instructions

3. Screw each of the 3 bolts into the appropriate holes on the frame of each armrest. Threaded holes in the seat wood are already pre-installed in the seat and you will only need to firmly fasten the bolts using either a Phillips or hex-head power screwdriver.

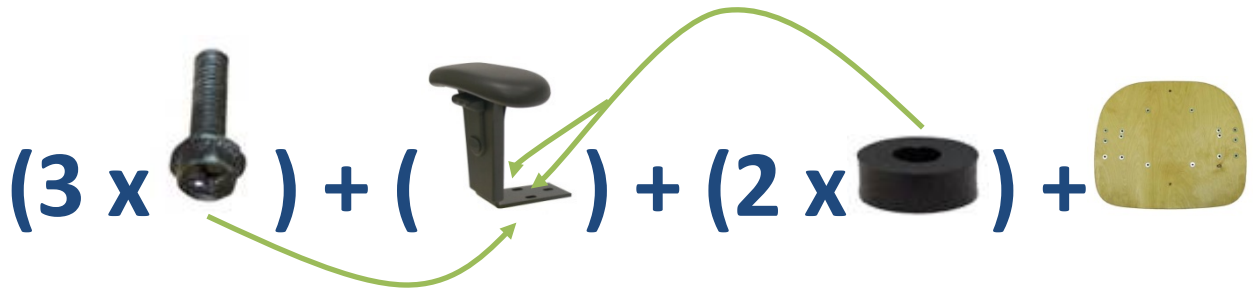

4. Done!

