






NEVER USE WD40 ON MECHANISMS. IT WILL STAY WET & COLLECT GUNK, AND IF YOU ELIMINATED NOISE, THE NOISE WILL RETURN. INSTEAD USE: BLASTER DRY IUB WITH TEFLON. ONCE DRY IT LEAVES A LONG LASTING FILM TO LUBRICATE, AND WILL NOT COLLECT GUNK.

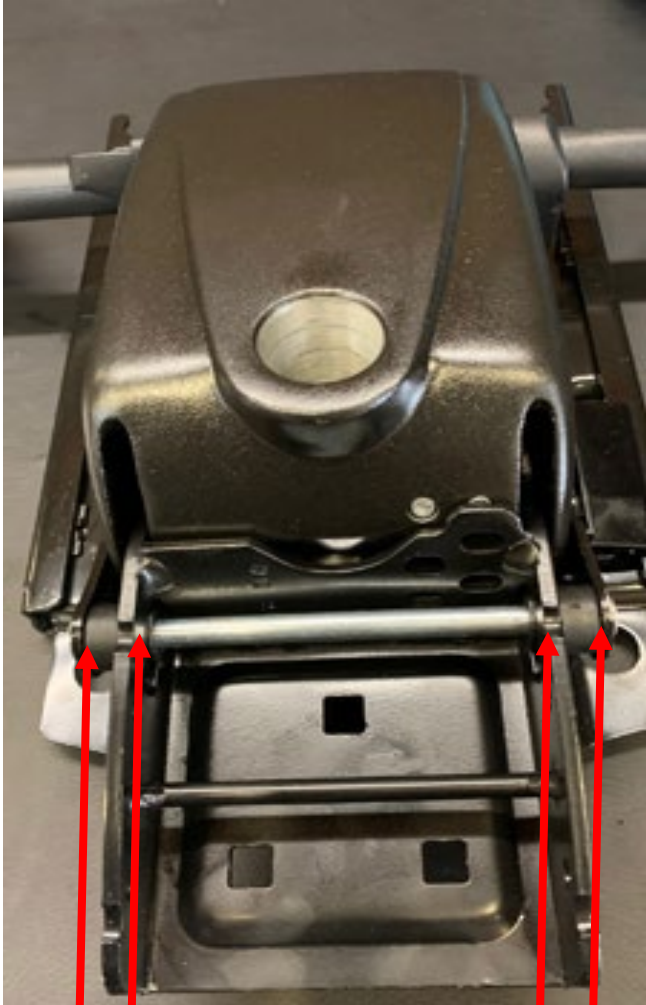

USE THE STRAW TO GET INTO SMALL AREAS. SHOOT THE BLASTER SPRAY ONTO THE NYLON BUSHINGS ON EITHER SIDE

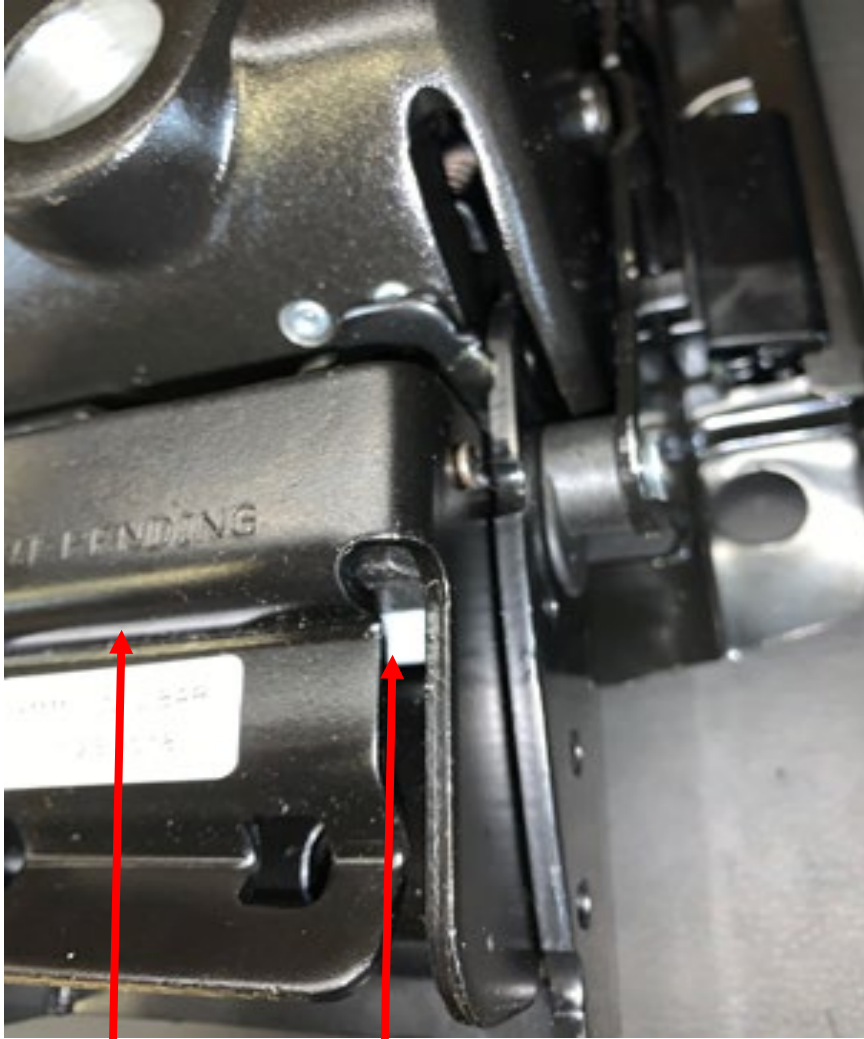

SHOOT BLASTER INTO THE WHITE NYLON HOLDER FOR THE BACK UPRIGHT IN THE BACK ANGLE ADJUST MECHANISM.

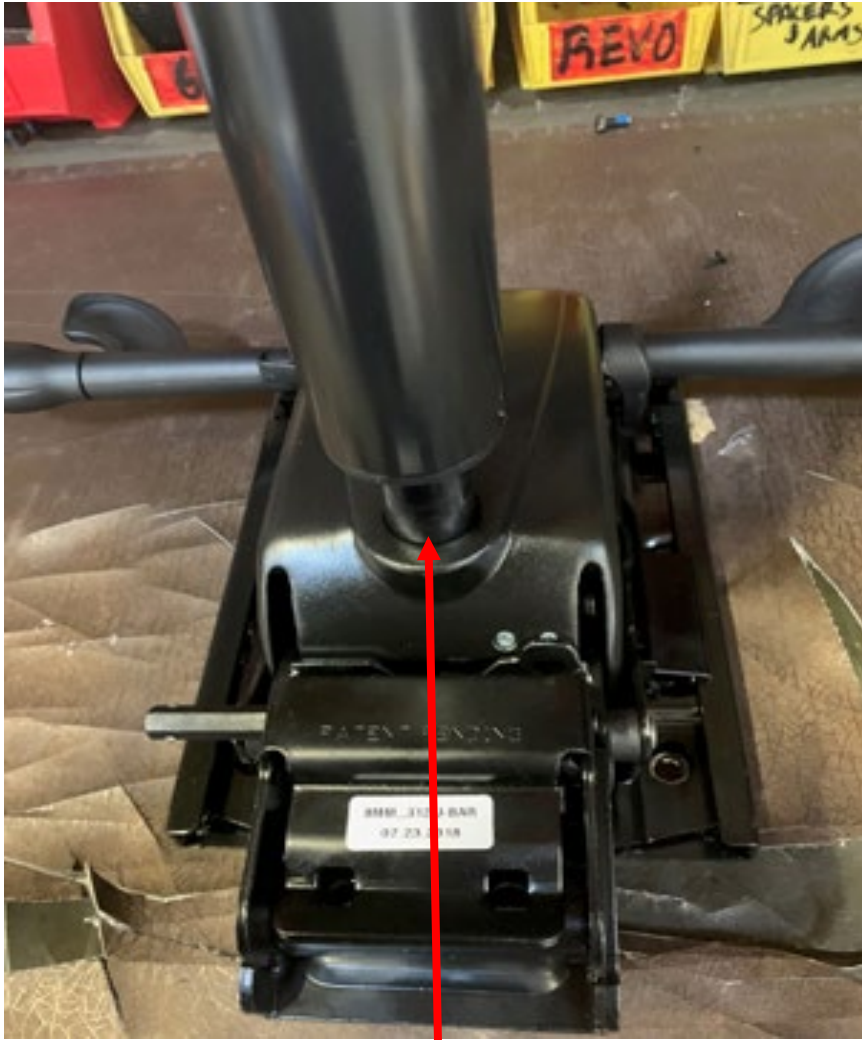

SHOOT A LITTLE BLASTER INTO THIS CONNECTION,  
BUT WIPE UP THE EXCESS SO IT DOES NOT DRIP  
ONTO SOMEONES FLOOR MATE OR CARPET.