


**Tools** 3/16" Allen wrench (included)  
**People** 1 Person  
**Time** 5 - 10 minutes

#### HEADREST ASSEMBLY


Place screws in the spaces under the bottom lip and combine w/upper section.

Tighten screws using Phillips screwdriver until headrest is secured on the back of the chair.

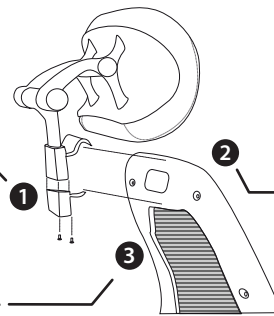

Slide headrest onto back of chair.

Place back post into mechanism stub and tighten all bolts with Allen wrench.

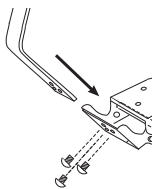

Insert cylinder into base.

2



Lift seat/mechanism assembly and fit onto cylinder. Ensure mechanism is secure on cylinder by sitting on the seat. *Lift by the seat not the armrests.*

1

Press casters firmly into base until they are securely snapped into place.

