




om | smart seating

- 1 Gently remove Headrest Cover Plate
(unless Headrest was delivered with the chair)


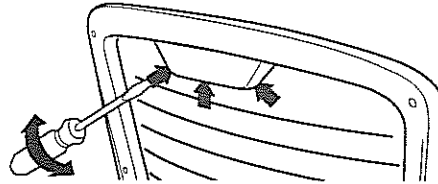


- ! If plastic post stays in...

Pull out

Or



Push in

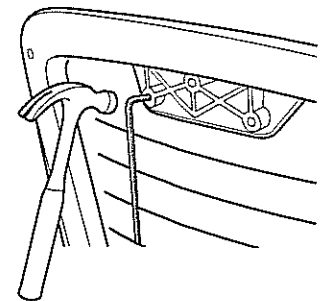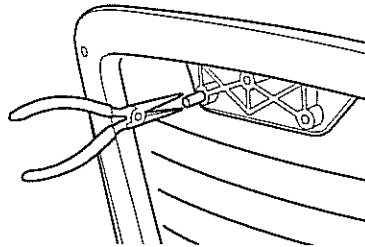

- 2 Attach Metal Adapter Plate

Flat Head Screw x2

Pan Head Screw x1

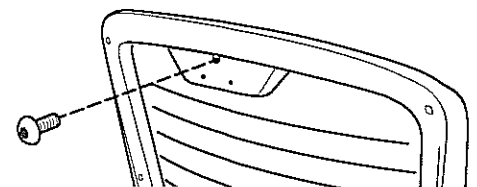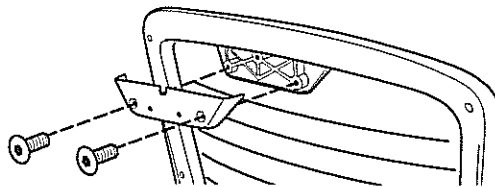

- 3 Attach Headrest

Flat Head Screw x2

Press in Screw Cover

