

Installation and Assembly - Cord Management Adapter to be used with Armor Lock Box

Model: ACC 800

IMPORTANT! Read entire instruction sheet before you start installation and assembly.

Parts List

Before you start make sure all parts listed are included with your product.

	QTY.	DESCRIPTION	PART NO.
A	1	cord management adapter	580-1020
B	1	#10-32 x 3/8 socket pin screw	520-1084
C	1	1.5 x 6.6" vinyl (not shown)	600-1004
D	1	#10-32 x 3/16" slotted set screw	520-1187


Some parts may appear slightly different than illustrated.



- 1** Thread cord management adapter (**A**) between extension column and Armor Lock Box. Secure the cord management adapter (**A**) at top by aligning one of the four holes in the cord management adapter (**A**) with the notch in the extension column using screw (**B**).

Note: Slotted set screw (**D**) is used to jam against the threads of extension column to prevent any excess movement. Do not overtighten screw; overtightening screw will damage threads making it difficult to separate the products.

Secure the cord management adapter (**A**) at the bottom by aligning one of the four holes in the Armor Lock Box with the notch in the cord management adapter (**A**). **Note: The screws used for this attachment were provided with the Armor Lock Box.** Vinyl wrap has been supplied to cover any exposed threads on extension column.

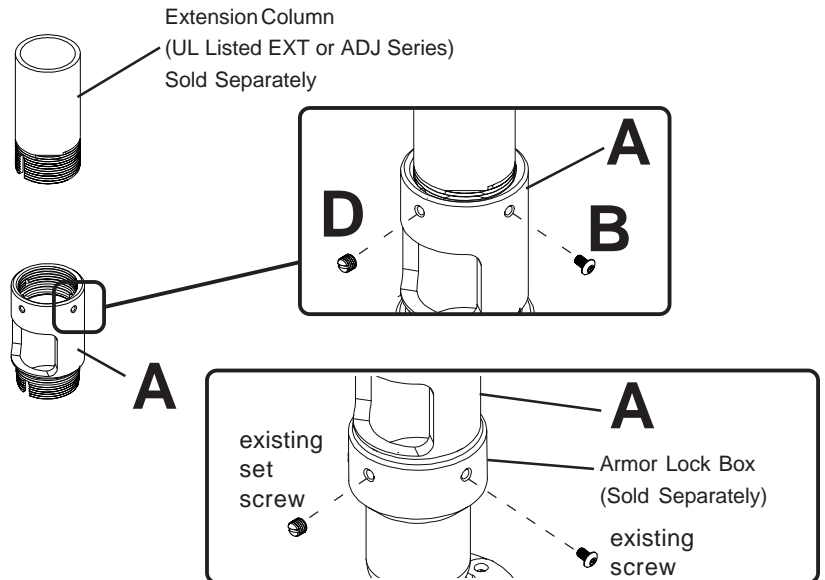

- 2** Thread cords through top of extension column and pull cords through hole in cord management adapter (**A**) as shown below. **Note: Make sure cords are long enough to reach back of projector and not binding.**

