


WLO1VM

Wave Light w/ Vertical Mount


Patent Pending

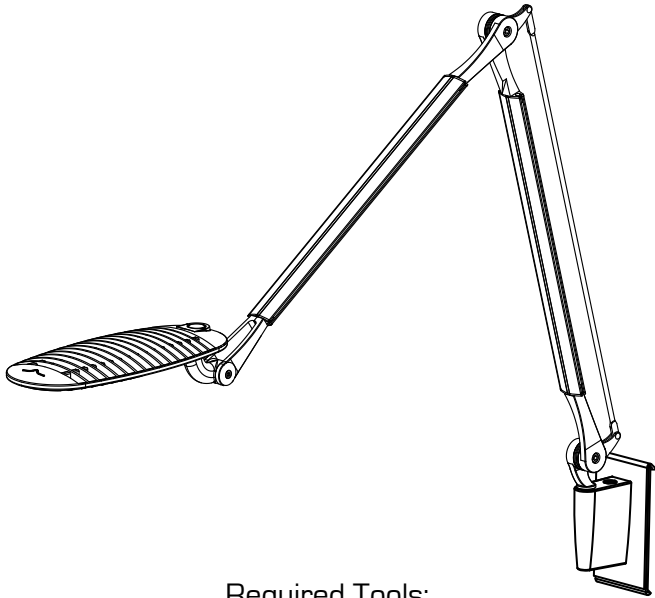

Required Tools:
3mm Allen Key




Wave Light

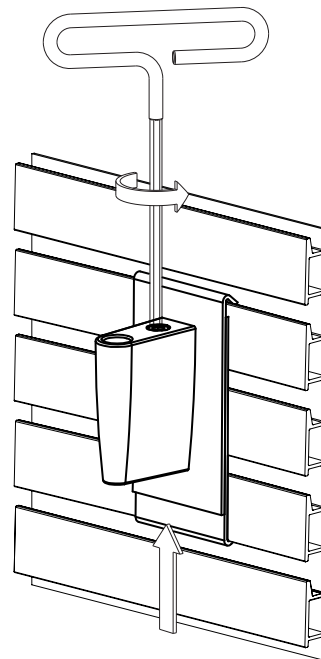

Turn screw counter-clockwise to open bracket. Turn screw clockwise to tighten bracket onto slatwall.

DISCLAIMER OF DAMAGES FOR IMPROPER USE. SpaceCo shall not be responsible for damage to its products, or injuries or damages caused by its products, resulting from improper installation, maintenance, unintended use or attempts to operate such products beyond their mechanical capacity, intentionally or otherwise, or by reason of unauthorized repair.

SpaceCo Business Solutions, Inc.
800.840.8499
www.spaceco.com