

Installation and Assembly - Fixed Length Extension Columns

Models:
 ADD101, ADD102,
 ADD103, ADD104,
 ADD105, ADD106,
 ADD107, ADD108,
 ADD109, ADD110

IMPORTANT! Read entire instruction sheet before beginning installation and assembly.



⚠ WARNING

- For a safe installation be sure to lock extension column as instructed.

Note: Other ceiling decouplers may be used if mounted to a structure other than an I-Beam (Call Customer Service for more information).

Part List

Description	Qty.	Part #
A Pipe (ADD101)	1	154-1079
Pipe (ADD102)	1	154-1080
Pipe (ADD103)	1	154-1081
Pipe (ADD104)	1	154-1082
Pipe (ADD105)	1	154-1083
Pipe (ADD106)	1	154-1084
Pipe (ADD107)	1	154-1085
Pipe (ADD108)	1	154-1086
Pipe (ADD109)	1	154-1087
Pipe (ADD110)	1	154-1088
B M10 x 60mm carriage bolt	2	580-1022
C M10 center lock nut	2	530-9402

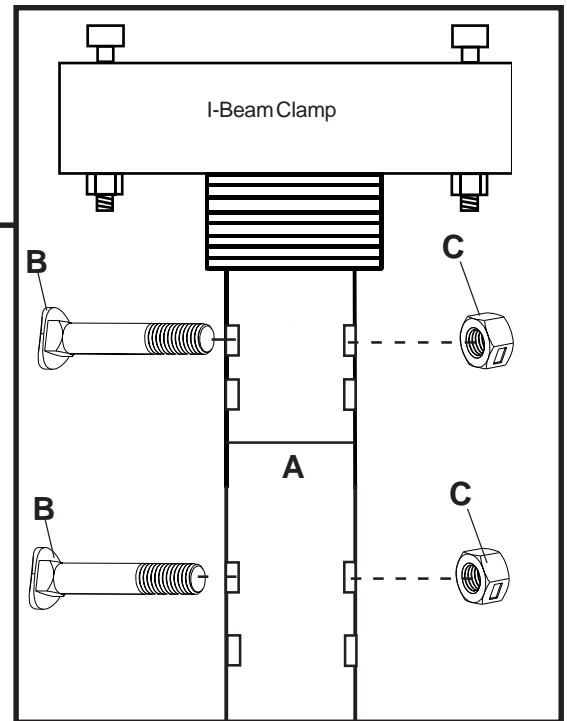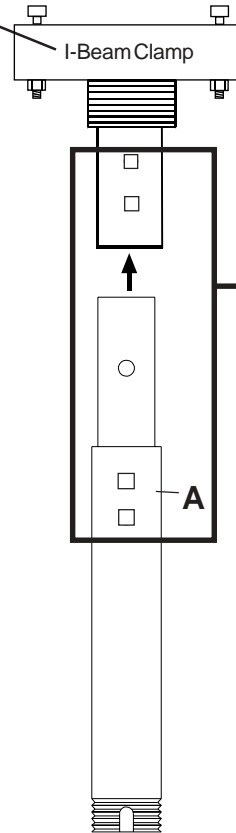

- Follow directions supplied with mounting bracket for attaching to threaded end of column. Align slot with one hole inside of threaded fitting. Lock extension column with one M5 x .8" x 10mm phillips screw supplied with mount column attaches to.

⚠ WARNING

- For safety, extension column must be locked to threaded fitting with screw!

- Remove plug used for shipping from pipe (A). Align holes to desired length, then fasten with a M10 carriage bolt (B) and M10 lock nut (C).
 Insert extension column to I-Beam Clamp. Align holes to desired length, then fasten with a M10 carriage bolt (B) and M10 lock nut (C).