Installation Instructions for the Office Depot Laptop Security Display Bracket



Security Bracket (Available in Assorted Sizes)

Security Bar (Available in Assorted Sizes)



Laptop Security Brackets

SK-1813 Assembly



Installation Instructions:

Before beginning the installation Read All the Instructions Carefully, and Dry Fit the Parts Together.

- **1.** Arrange the Laptop Display as you want it to appear, with a left and right Laptop Security Bracket nestled to each unit. Make sure there is enough room between each laptop so the Security Bars can be slid in after the Brackets have been mounted to the display surface. (See Fig. 1).
- **2.** Remove the laptops from the display without moving the brackets. (Since most laptops are of different sizes, mark the laptop locations with a reminder note to indicate the position of each Laptop. (See Fig. 2).
- 3. Use the brackets to mark the hole positions. Use the right size drill bit and hardware for the display surface. (See Fig. 3).

Fig. 1 Dry Fit the Laptop Display



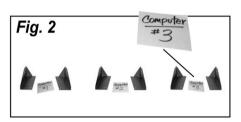


Fig. 3 Use the Laptop Mark & Brackets **Drill Hole** as a **Positions** Template

4. Secure the Brackets to the display with the appropriate (Low Profile) hardware for the surface. Then replace the laptops to their original bracket position. (See Fig. 4).

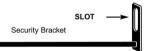

With each laptop computer in place, slide the Security Bracket through a hole on the **RIGHT** and **BEHIND** the laptop screen. Continue pushing until the bracket comes through the other side. (See Fig. 5).

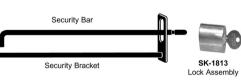

- **6.** Slide the Security Bar through a hole in the **LEFT** side of the display and in **FRONT** of the laptop screen. Use a hole that is closest to the screen and just above the keyboard. (See Fig. 6)
- 7. Continue pushing the bar through until it comes out the right side making sure it goes through the slot in the Security Bracket. (Shown in Fig. 7 at right).
- 8. As shown in Fig. 8, place the lock assembly on the end of the Security Bar to lock the laptop onto the display.









