
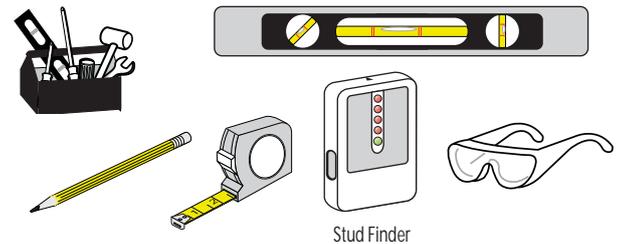


Use this Guide to install the OSHPD Mounting Kit components to Wall Track which has been mounted between two studs located 16" on center.

The OSHPD Mounting Kit for Wall Track can be attached in one of two ways, depending on the wall construction:

- 2x4" (51-102mm) Wood Studs: 16" on center
- Steel Studs: 20 gauge thick or thicker, 16" on center


 www.ergotron.com
 USA 1-800-888-8458
 Europe +31 (0)33-45 45 600
 China 86-769-86018920

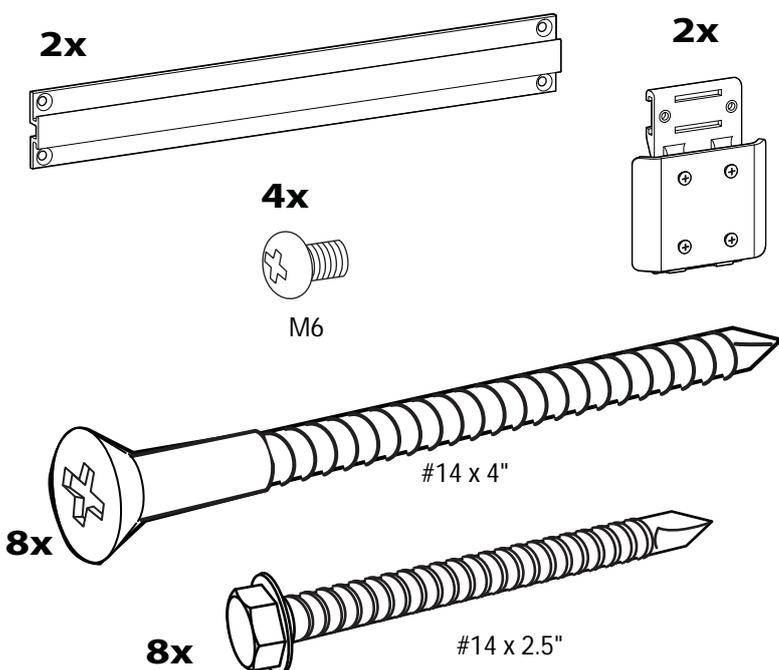

Wood Stud Walls




Steel Stud Walls

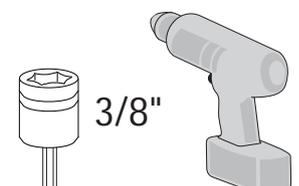

1 Before proceeding with the OSHPD kit installation, mount the wall track between two wood or steel studs located 16" on center from each other.

 **WARNING:**

Because surfaces vary widely and the ultimate mounting method is out of Ergotron's control, it is imperative that you consult with appropriate engineering, architectural or construction professional to ensure that your Ergotron mounting solution is mounted properly to handle applied loads.

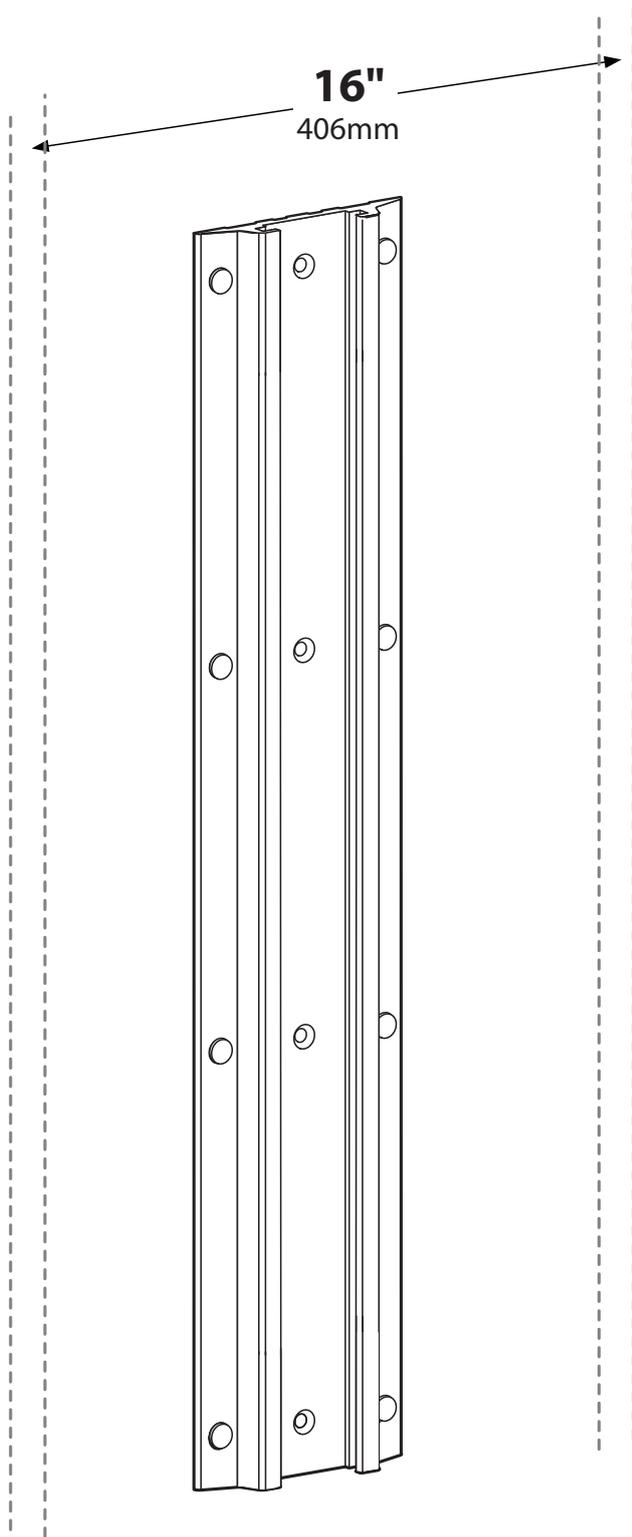


WOOD STUD

2x4" (51x102mm)


STEEL STUD

Steel Stud 20 Gauge Thick or Thicker
Sheetrock Thickness $\geq \frac{5}{8}$ " (16mm)

a Verify stud location with a stud finder.

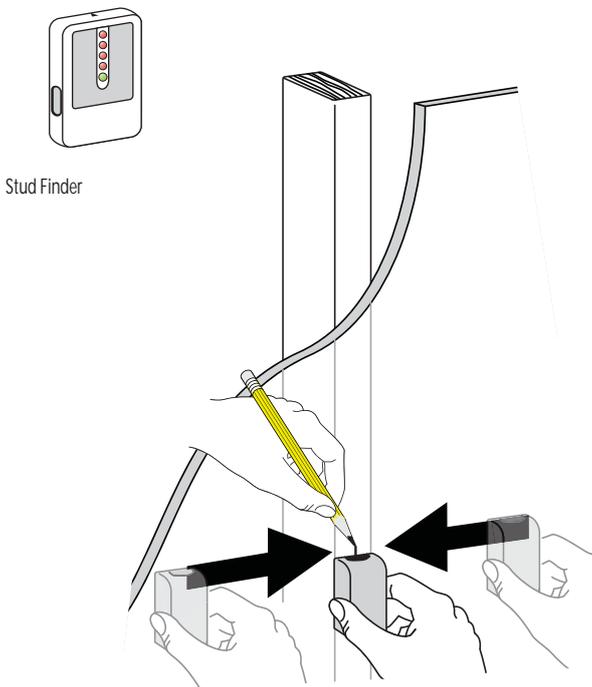


b Mark studs with a level line.

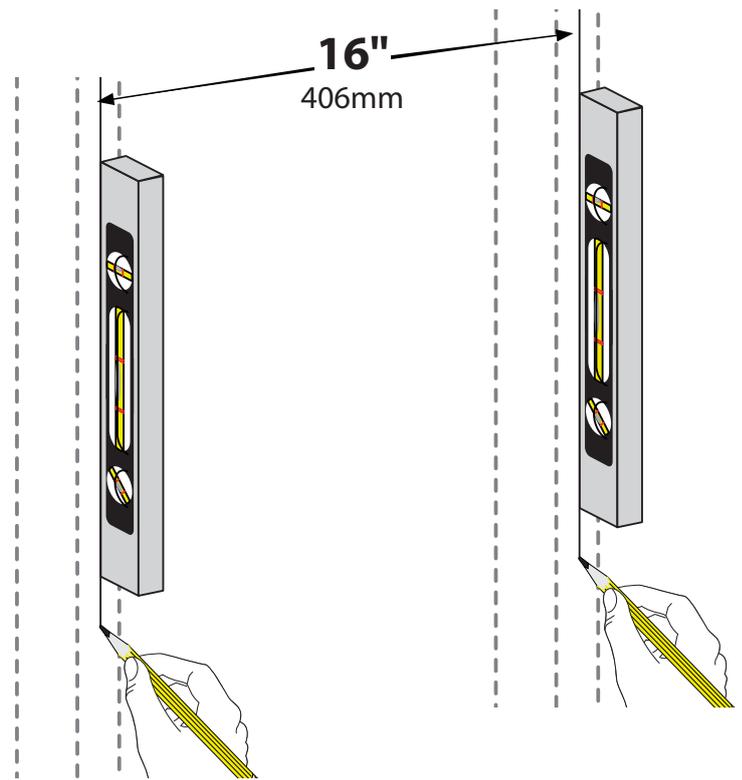

Once the wall track has been mounted, proceed with OSHPD kit installation.

2 Use a Phillips screwdriver to loosen the screws on the two clamp/hanger assemblies so they will fit over the wall track.

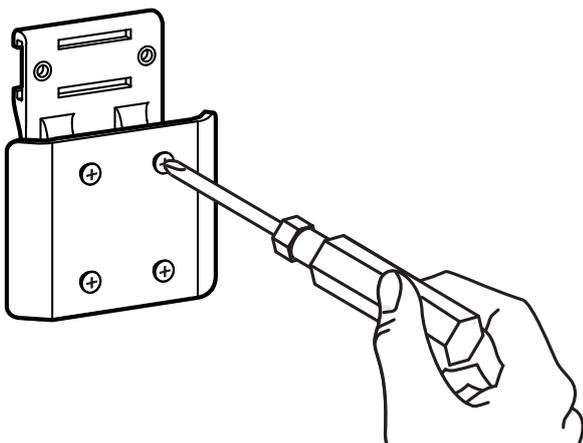


3 Insert two of the provided button head screws into each of the clamp/hanger assemblies.


4x




M6

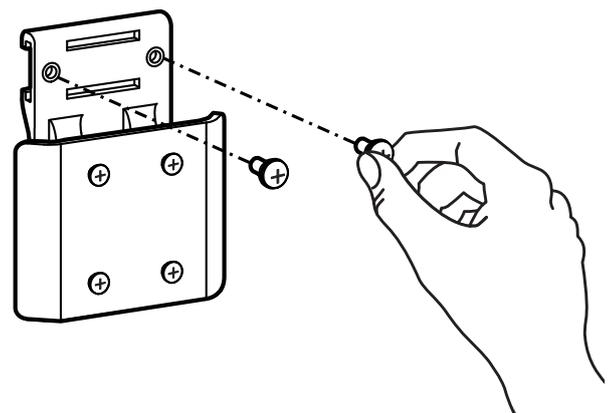

4 Slide each of the OSHPD rails onto each of the clamp/hanger assemblies.


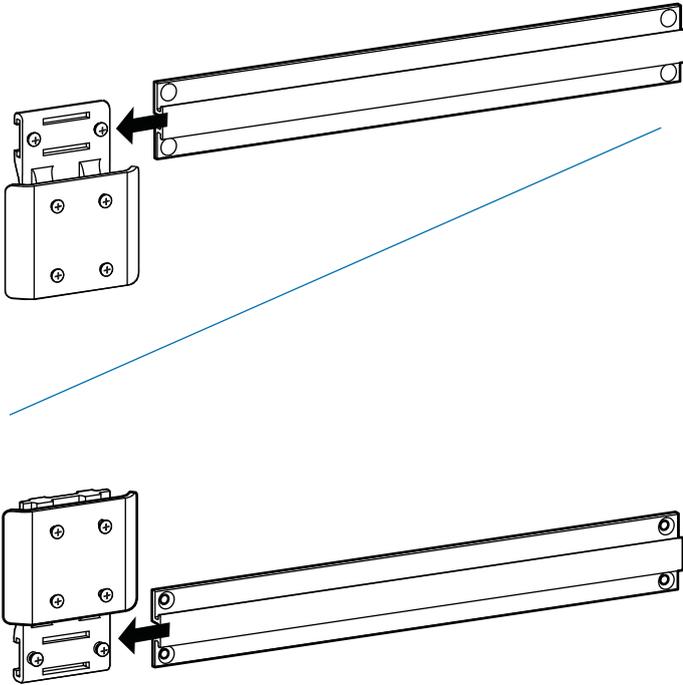


5 Slide the clamp/hanger/rail assemblies onto the wall track.

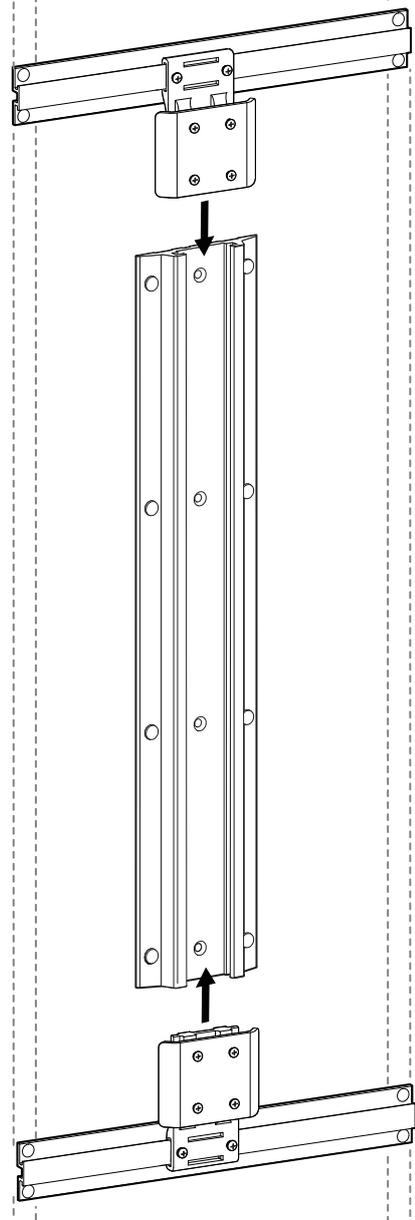



6 Tighten the the top and bottom hanger screws slightly to allow adjustment, then proceed to step 7:

- **Wood Stud installation - page 5**
- **Steel Stud installation - page 6**

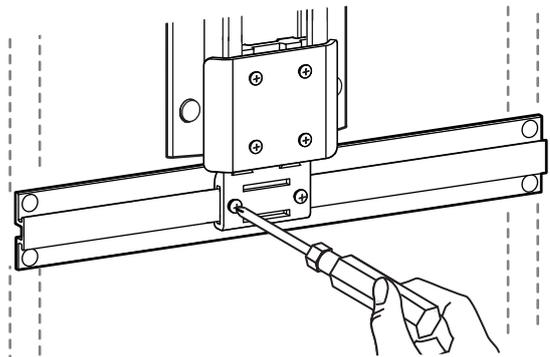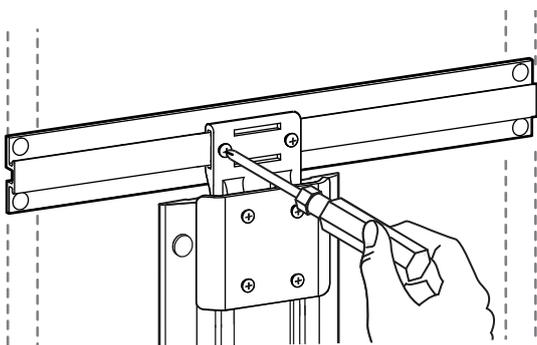


7 WOOD STUD

a Position the rails so that they are level and the mounting holes are located over the wall studs.

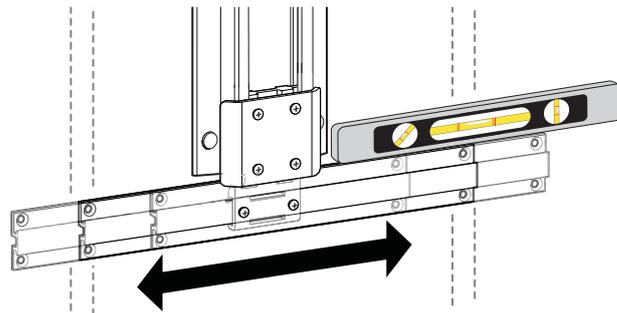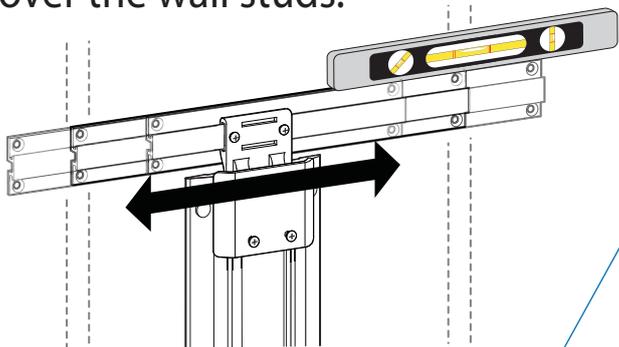


b Drill 4 pilot holes for each rail (2 at each stud).


Ø 3/16" (5 mm)

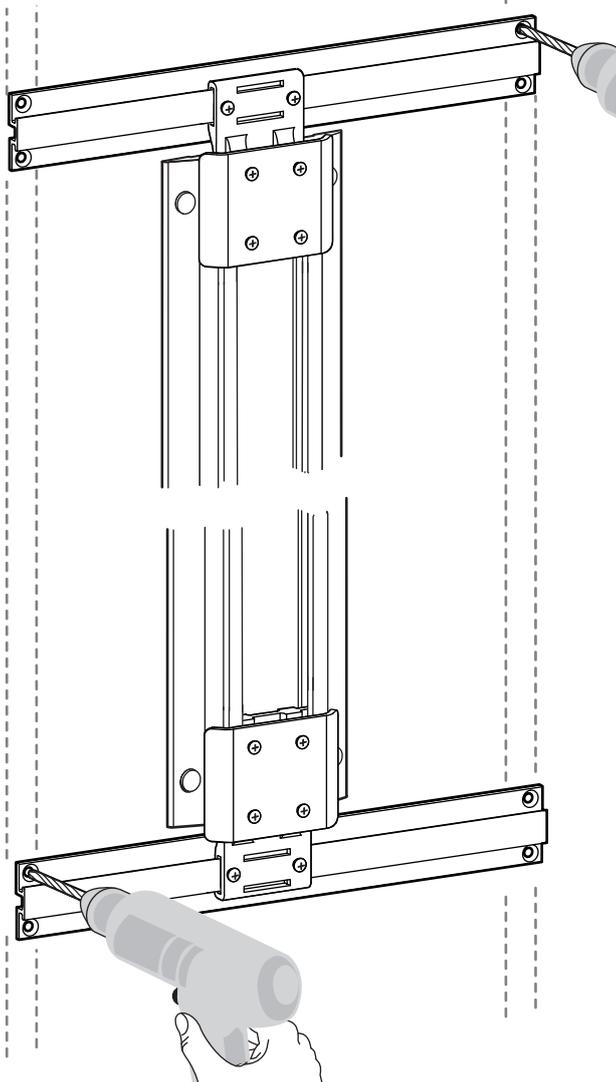


c Drive four #14 x 4" wood screws through each rail and into studs, then proceed to step 8 on page 7.



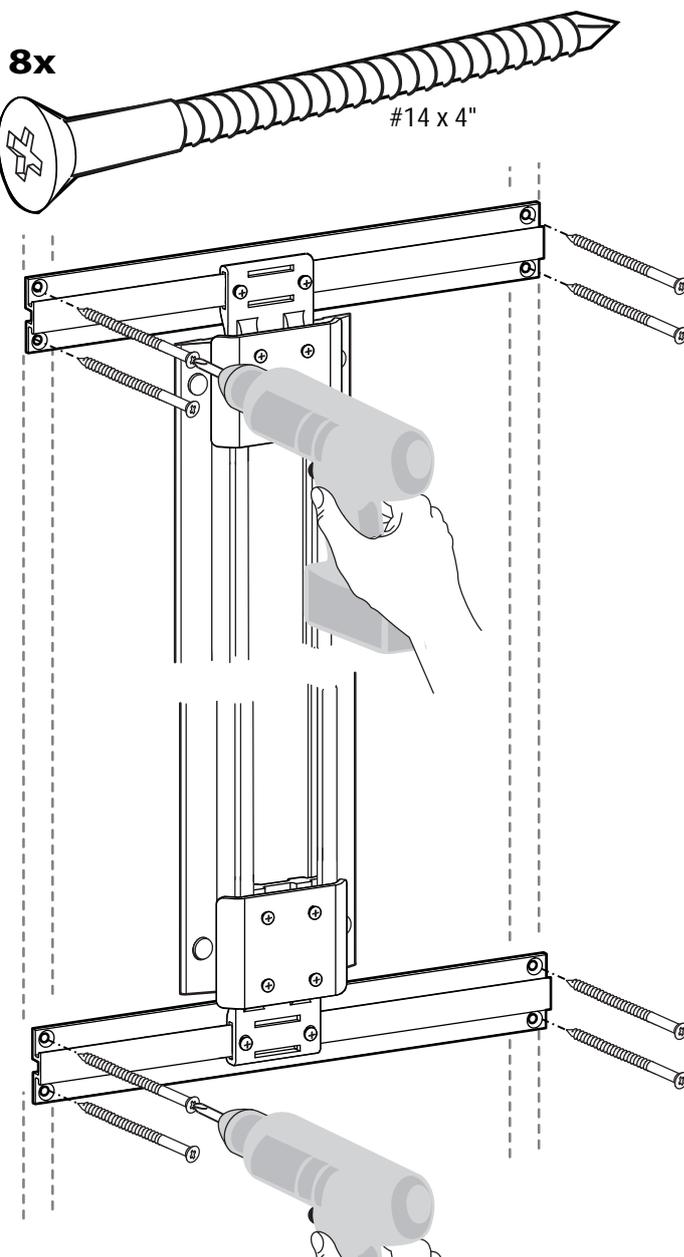


7 STEEL STUD


a Position the rails so that the mounting holes are located over the wall studs. Make sure the assembly is level.

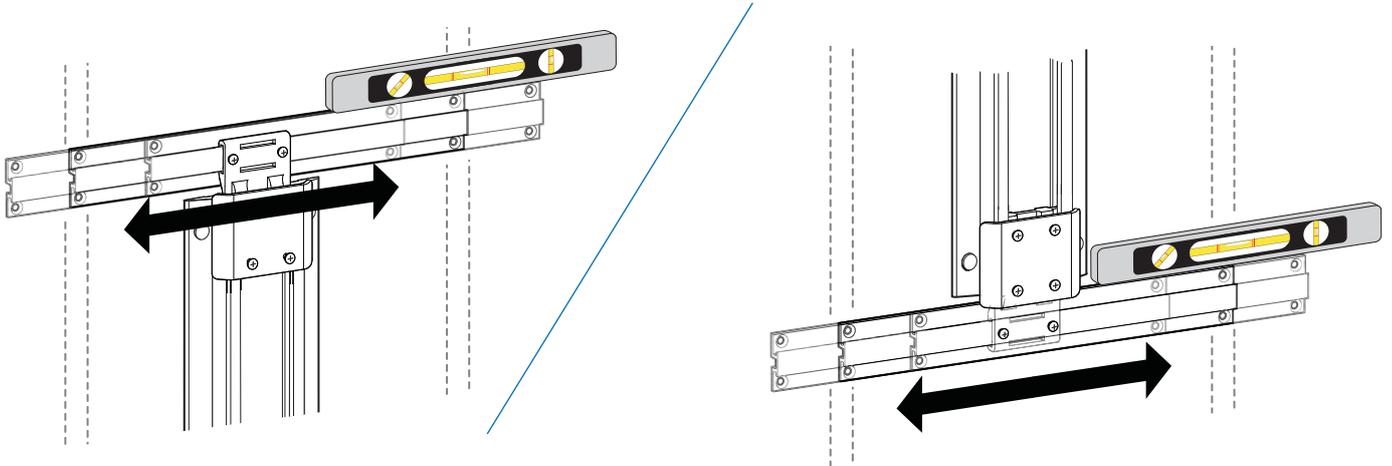

b Drive four #14 x 2.5" Tek screws through each rail and into studs, then proceed to step 7 on page 7.

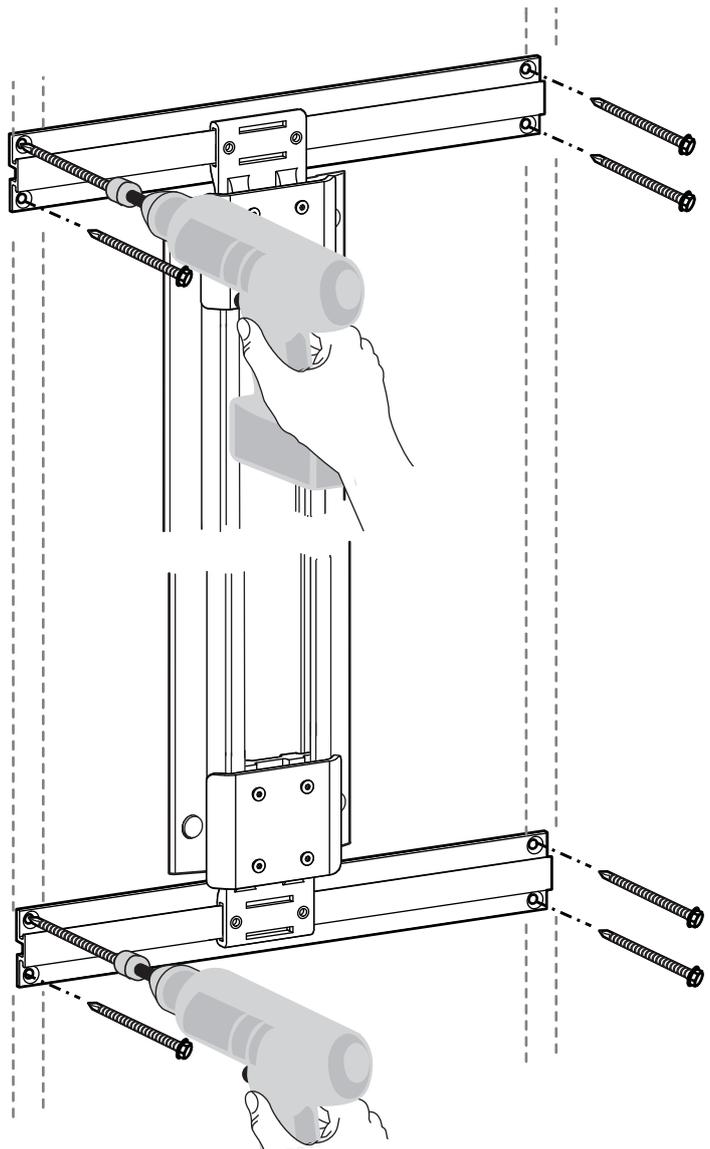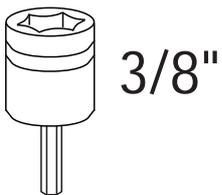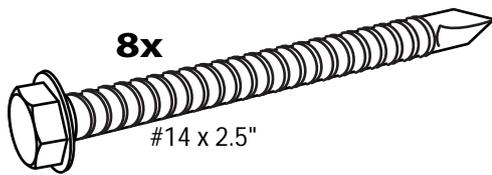

8 After OSHPD rails have been securely attached to wall studs, tighten the clamp/hanger brackets with a Phillip screwdriver.

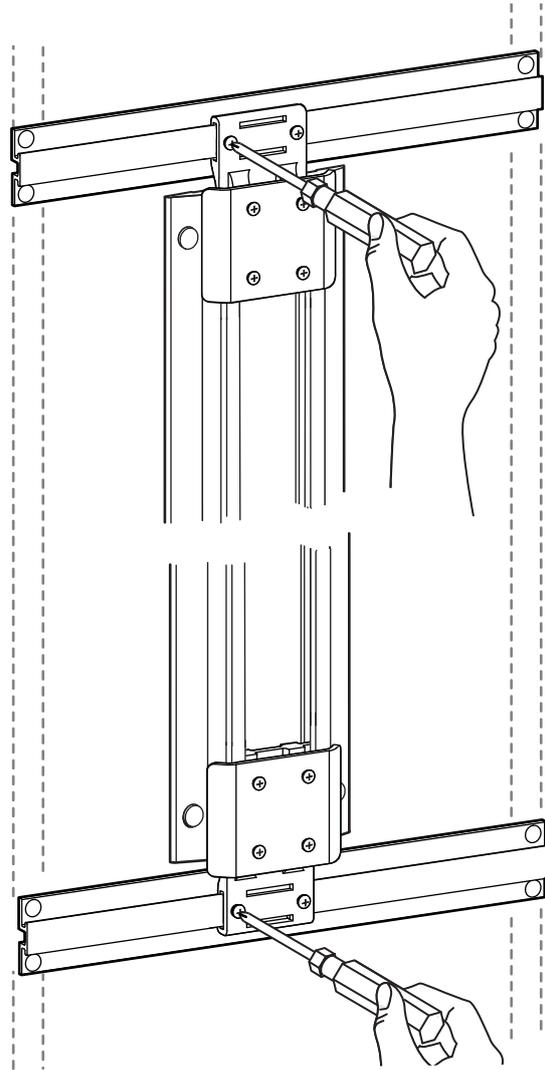

Ergotron Limited Warranty

Ergotron warrants that its products will remain free of defects in material and workmanship for five (5) years. All subject to the exceptions, exclusions and limitations as set forth below.

Exceptions to this warranty include:

- Three (3)-year warranty on all Neo-Flex™ by Ergotron products

- StyleView Carts:

- Two (2)-year warranty on all power supply components by Ergotron
- Battery carries an up to a one (1)-year performance warranty (see Limitations below) and six (6)-month warranty against manufacturer's defects. Note: In EU, the warranty against manufacturer's defects is two (2)-years.
- One (1)-year warranty on all electronic non-power supply components (excludes AA batteries)

- OEM products resold by Ergotron are warranted by the respective manufacturer
- Product that is refurbished by Ergotron and sold by Ergotron carries a 90-day warranty
- Thirty (30)-day warranty on all service programs
- Ergotron warranties are nontransferable

Exclusive Remedy: If any Ergotron equipment is or becomes defective in material or workmanship during the warranty period, Ergotron will determine with the customer if the product defect is covered under warranty. Ergotron, at its sole discretion, may replace or repair the unit determined to be under warranty at a designated Ergotron location or at the customer location. The purchaser must get pre-approved authorization to return product to Ergotron. The Purchaser must contact Ergotron to obtain an RMA (Return Material Authorization) number. Ergotron will promptly repair or replace the item and ship it to Purchaser at no charge to the Purchaser. Performance of repair or replacement does not renew or extend the warranty period.

THIS REMEDY IS THE EXCLUSIVE REMEDY FOR BREACH OF WARRANTY AS TO THE EQUIPMENT, except in respect to personal injury. Purchaser shall give Ergotron immediate written notice of any personal injury resulting from use of Ergotron equipment.

Exclusions and Limitations: Ergotron disclaims liability for injuries or losses caused by or associated with installation or use of its equipment in any manner other than in strict conformance with the instructions set forth in its installation manuals, supplemental assembly and installation instruction sheets, technical bulletins or product literature, or by equipment that has been altered, damaged or misused.

Warranty on fully charged batteries left in an unused state for more than three (3) consecutive months is automatically void. Warranty on fully discharged batteries left in an unused state for more than three (3) consecutive days is automatically void.

Two (2)-year warranty on all power supply components by Ergotron; battery carries a 90 day performance warranty and six (6) month warranty against manufacturer's defects. Performance warranty is extended to 1 year on the battery providing:

- StyleLink software is installed and it shows compliance with exclusions and limitations
- Battery is not discharged below 25% capacity more than 25 times
- Battery is fully recharged at least once every 36 hours

Purchaser has not relied upon and Ergotron disclaims any and all warranties other than the expressed warranty stated above, subject to the exclusions and limitations provided herein. Ergotron disclaims all other warranties, expressed or implied, including but not limited to the warranties of merchantability and fitness for a particular purpose. Ergotron further disclaims liability to purchaser and all others for all consequential, incidental and special damages caused by or in connection with the products, their use or misuse, and their performance or nonperformance.



© 2009 Ergotron, Inc.
All rights reserved.

While Ergotron, Inc. makes every effort to provide accurate and complete information on the installation and use of its products, it will not be held liable for any editorial errors or omissions (including those made in the process of translation from English to another language), or for incidental, special or consequential damages of any nature resulting from furnishing this instruction and performance of equipment in connection with this instruction. Ergotron, Inc. reserves the right to make changes in the product design and/or product documentation without notification to its users. For the most current product information, or to know if this document is available in languages other than those herein, please contact Ergotron. No part of this publication may be reproduced, stored in a retrieval system, or transmitted in any form or by any means, electronic, mechanical, photocopying, recording or otherwise without the prior written consent of Ergotron, Inc., 1181 Trapp Road, Eagan, Minnesota, 55121, USA Patents Pending and Patented U.S. & Foreign. Ergotron is a registered trademark of Ergotron, Inc.

Americas Sales and Corporate Headquarters

St. Paul, MN USA
(800) 888-8458
+1-651-681-7600
www.ergotron.com
sales@ergotron.com

EMEA Sales

Amersfoort, The Netherlands
+31 33 45 45 600
www.ergotron.com
info.eu@ergotron.com

APAC Sales

Tokyo, Japan
www.ergotron.com
apaccustomerservice@ergotron.com

Worldwide OEM Sales

www.ergotron.com
info.oem@ergotron.com