


ergotron®

Zido® Pole Cart




Product	Part#
Zido Pole Cart	ZD2166zz4

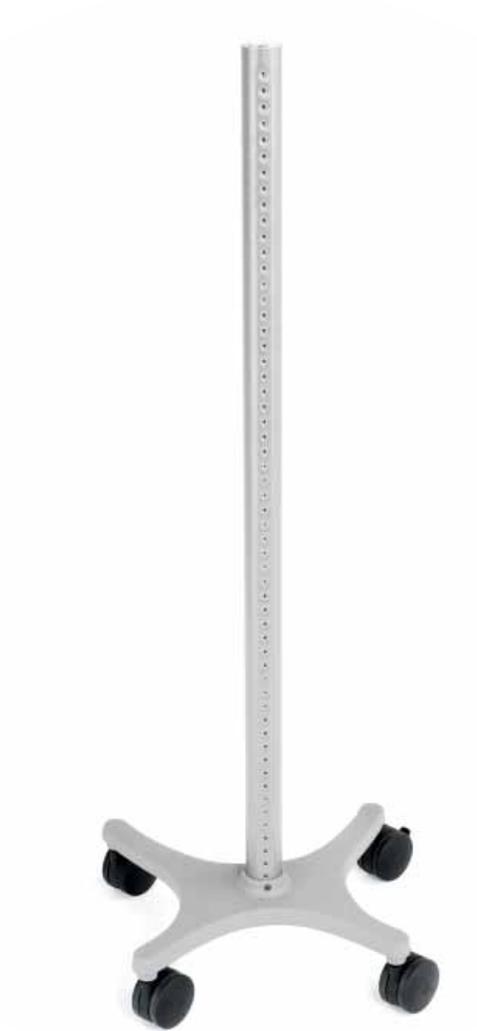

For the latest User Installation Guide please visit: www.ergotron.com

www.ergotron.com | USA: 1-800-888-8458 | Europe: +31 (0)33-45 45 600 | China: 400-120-3051 | Japan: japansupport@ergotron.com

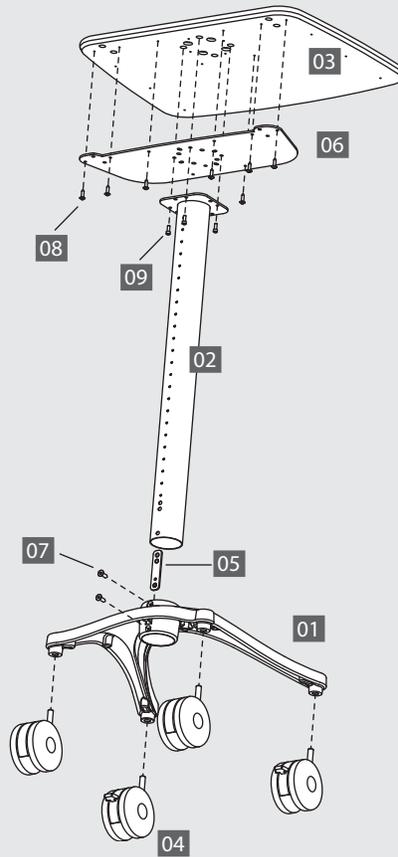

PARTS LIST

Before beginning assembly of your Zido cart please review the parts list to verify that your shipment is complete.

All Screw quantities listed here are the minimum needed for your Zido assembly. There may be a few extra Screws included which are not counted in the Parts List.

To make the assembly of your Zido even easier, we have included the required tools. The handy Hex Driver Bit can be used in your electric drill in place of the Hex Driver.

Product	Quantity
Hex Driver 5/32" (not shown)	1
Hex Driver Bit 5/32" (not shown)	1

Zido Cart	Quantity
01 Base Small, 22" wide Large, 25" wide	1 1
02 Tube 24" long (for 31" high cart) 28" long (for 35" high cart) 33" long (for 40" high cart)	1 1 1
03 Cap Shelf 22" wide, no lip 25" wide, no lip 25" wide w/lip	1 1 1
04 Casters 4" Locking 4" Non-locking	2 2
05 Tapped Strip	1
06 Cap Shelf Bracket	1
07 3/4" Flat Head Screw	2
08 Wood Screws	8
09 1/2" Socket Head Cap Screw	4
Zido Pole Cart	Quantity
01 Base	1
02 Tube	1
04 Casters 4" Locking 4" Non-locking	2 2
05 Tapped Strip	1
3/4" Socket Head Cap Screw (not shown)	2
End Cap (not shown)	1

ASSEMBLY SEQUENCE


Plan out the assembly to make your installation easier. We suggest this sequence to reduce interference between accessories.

1. Pre-drill the top for accessories (Mouse Holder, Side Bin, Gel Cup/Probe Holder, Extension Tube).
2. Assemble the cart.
3. Base Storage Shelf.
4. Drawer, Keyboard Drawer, Handle.
5. Additional Shelves, Equipment Shelves, Metal Bin, IV bracket.
6. Cable Bin, Glove Box Holder, Tank Holder.
7. Mouse Holder, Side Bin, Gel Cup & Probe Holder, Extension Tube.
8. Pole Cart Handle, Flat Panel Mounts.

STEP 1

Insert the Casters into the Base



- Place the base upside down. Use a rubber mallet to tap the locking casters into the front receivers of the base. Tap the non-locking casters into the receivers of the base.

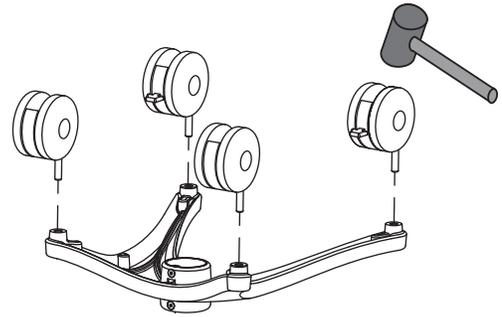

STEP 2

Connect the Base with the Tube

- Slide the nut bar into the bottom of the base assembly, smooth side against the inside of the tube, with the two threaded holes on the top and the single threaded hole at the bottom. Loosely attach the nut bar to the tube with one 3/4" Flat Head Screw.
- Slide the tube into the base so that the notch at the bottom of the tube goes over the screw. Align the upper hole on the base with a threaded hole on the nut bar. (For the 25w cart and the Pole Cart, you'll use the top hole; for the 22w cart, you'll use the second hole.) Loosely attach the nut bar, tube, and base with the second 3/4" Flat Head Screw.
- If you have a Fixed-height Cart, skip ahead to Step 3.
- If you have a Zido Pole Cart, make sure that the holes on the column line up with the holes on the base and tighten the screws. Next, insert the End Cap in the top of the Pole. Congratulations! Your assembly is complete!

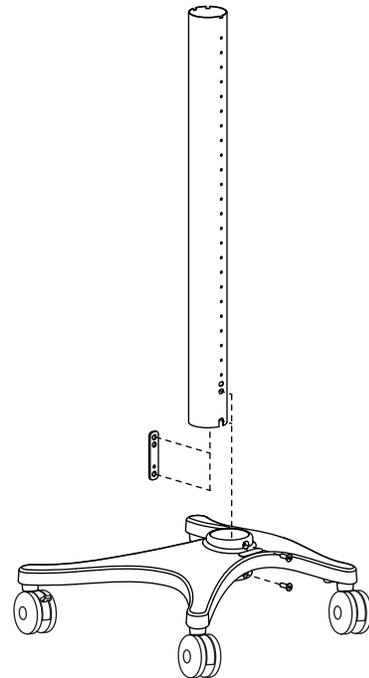


3/4" Flat Hd Screw

STEP 3

Assemble the Top


- Place the cap shelf upside down on a non-marring surface. Locate the bracket. The bottom of the bracket is flat and has no sticker. The top of the bracket has a sticker that says "TOP" and has bumps with threads inside. The bumps on the top of the bracket nest inside the holes on the cap shelf. Place the bracket upside down on the shelf so that the holes on the bracket line up with the holes on the bottom of the shelf. Using the eight non-threaded holes around the outside of the bracket, attach the shelf to the bracket with eight wood screws. Use the 5/32" hex driver.
- If you have purchased a Zido Handle for this configuration, install it now. If any of your accessories require that you drill the shelf, do that now.

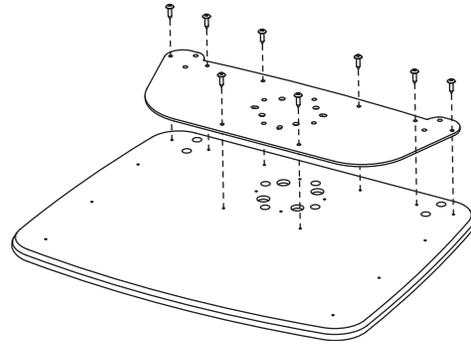

STEP 4

Install the Top Assembly

- Set the top assembly onto the top of the base assembly so that the cap shelf extends over the front of the base.
- Secure with four 1/2" socket head screws. Be sure to drive the screws by hand using the ball driver provided.
- Double-check the alignment of the cap shelf with the column and the base. Rotate the column if needed, then tighten the 3/4" screws that connect the column to the base.

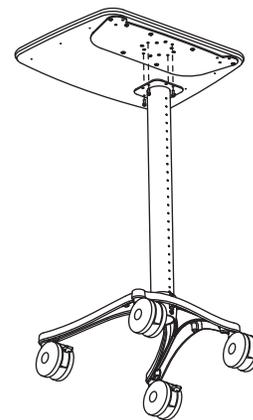

ergotron[®]

For Warranty visit: www.ergotron.com/warranty

For Service visit: www.ergotron.com

For local customer care phone numbers visit: <http://contact.ergotron.com>

www.ergotron.com | USA: 1-800-888-8458 | Europe: +31 (0)33-45 45 600 | China: 400-120-3051 | Japan: japansupport@ergotron.com

© 2019 Ergotron, Inc. All rights reserved.

While Ergotron, Inc. makes every effort to provide accurate and complete information on the installation and use of its products, it will not be held liable for any editorial errors or omissions (including those made in the process of translation from English to another language), or for incidental, special or consequential damages of any nature resulting from furnishing this instruction and performance of equipment in connection with this instruction. Ergotron, Inc. reserves the right to make changes in the product design and/or product documentation without notification to its users. For the most current product information, or to know if this document is available in languages other than those herein, please contact Ergotron. No part of this publication may be reproduced, stored in a retrieval system, or transmitted in any form or by any means, electronic, mechanical, photocopying, recording or otherwise without the prior written consent of Ergotron, Inc., 1181 Trapp Road, Eagan, Minnesota, 55121, USA. Patents Pending and Patented U.S. & Foreign. Ergotron is a registered trademark of Ergotron, Inc.