



# ergotron®

## SlatWall Clamp System

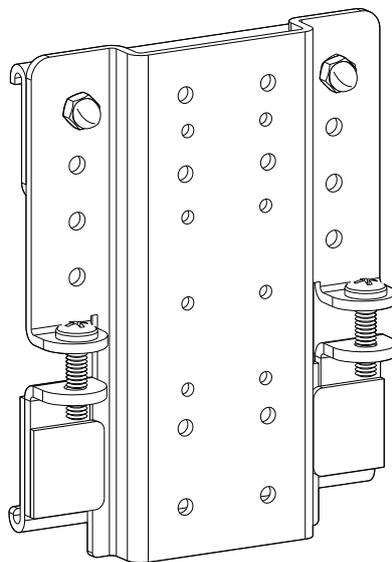

### COMPONENTS


- A Upper Clamp
- B Lower Clamp
- C Slat Wall Bracket

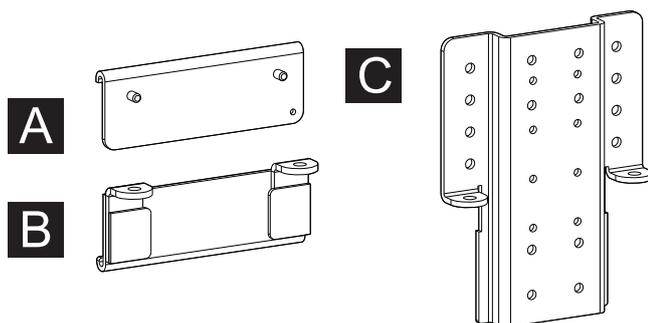

**NOTE: Illustrations depict typical product. Yours may vary slightly.**

### FASTENERS


- a #10-24 Acorn Nut
- b 1/4-20 x 1" Phillips Pan Head Screw

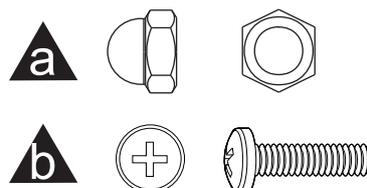

### TOOLS REQUIRED



3/8" Open end wrench (customer supplied)

Hang Upper Clamp to edge of Slat Wall.

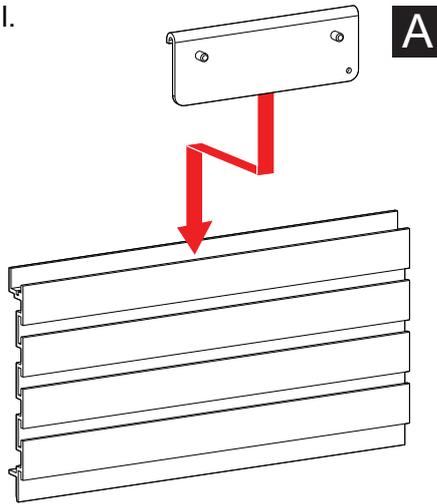

STEP  
**1**

Slide Slat Wall Bracket onto Lower Clamp.

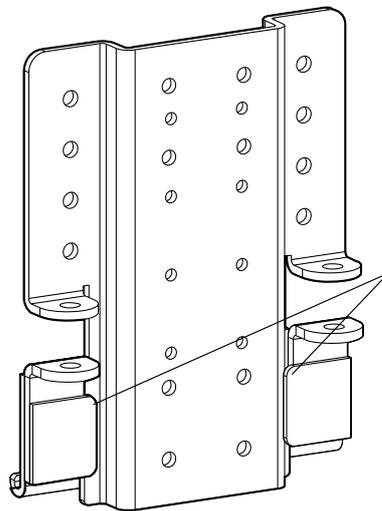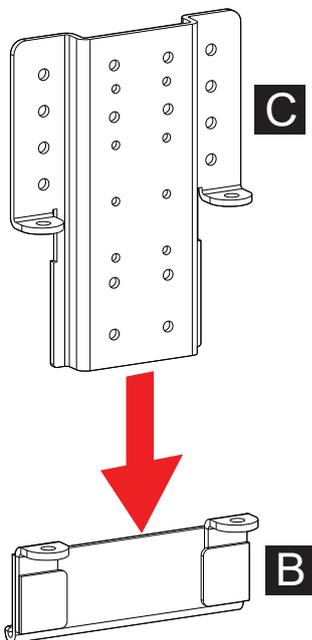

NOTE:  
Wall Bracket slides  
beneath tabs of  
Lower Clamp.


STEP  
**2**

Mount Slat Wall Bracket/Lower Clamp  
assembly to Upper Clamp.



STEP  
**3**

Thread Acorn Nuts onto Upper Clamp pins.

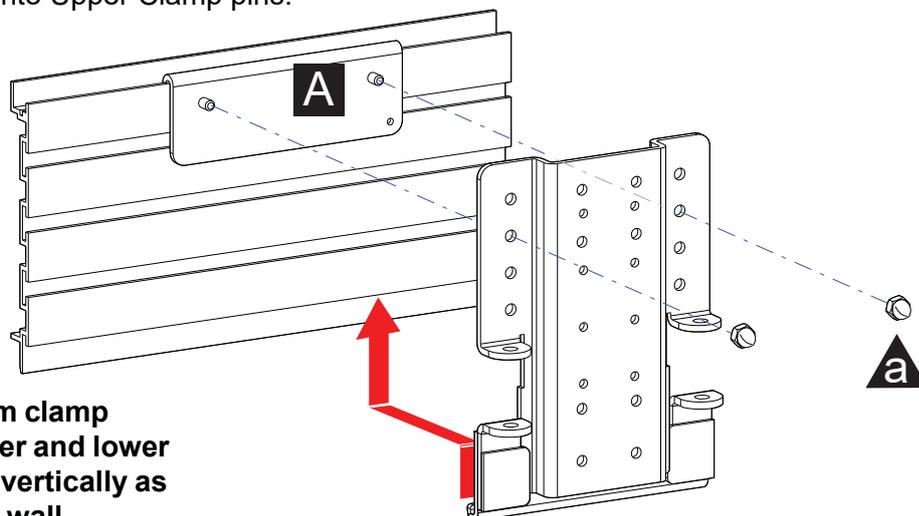


NOTE: For maximum clamp  
strength, place upper and lower  
clamps as far apart vertically as  
possible on the slat wall .

Using a 3/8" wrench, tighten Acorn Nuts.

STEP

4

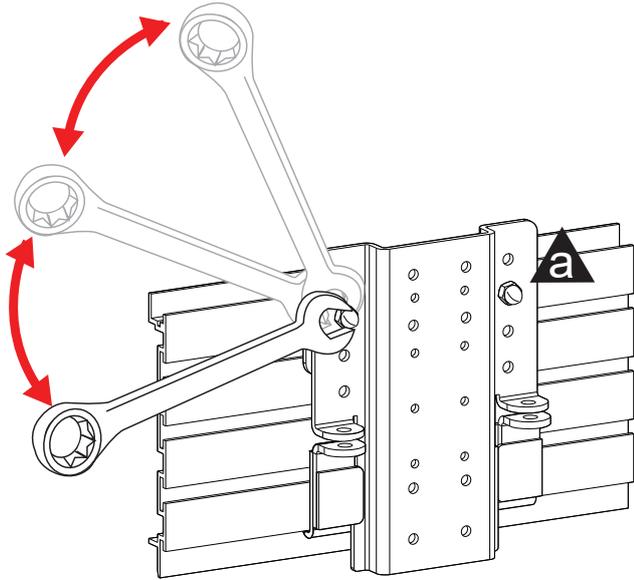


Using a Phillips screwdriver with provided screws, secure Slat Wall Bracket to Lower Clamp.




STEP

5

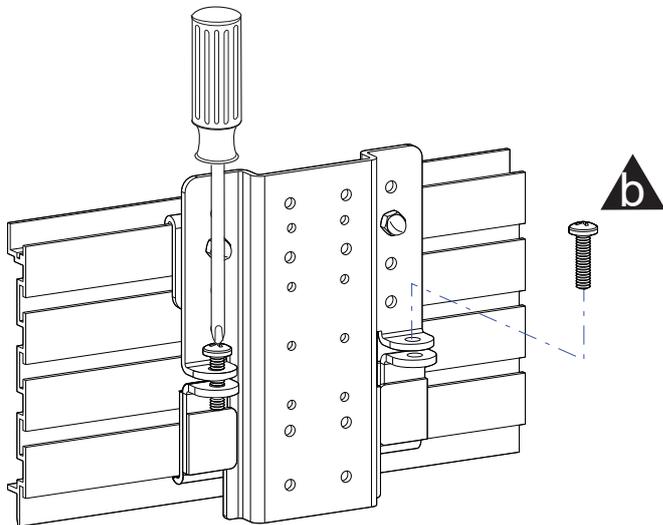

# Mounting Patterns

- A** 100 Series Direct Mount Pivot
- B** 200 Series Vertical Mount Bracket
- C** 400 Series Flat Panel Monitor Arm with Fixed Mount
- D** 400 Series Flat Panel Monitor Arm with Rotate Mount

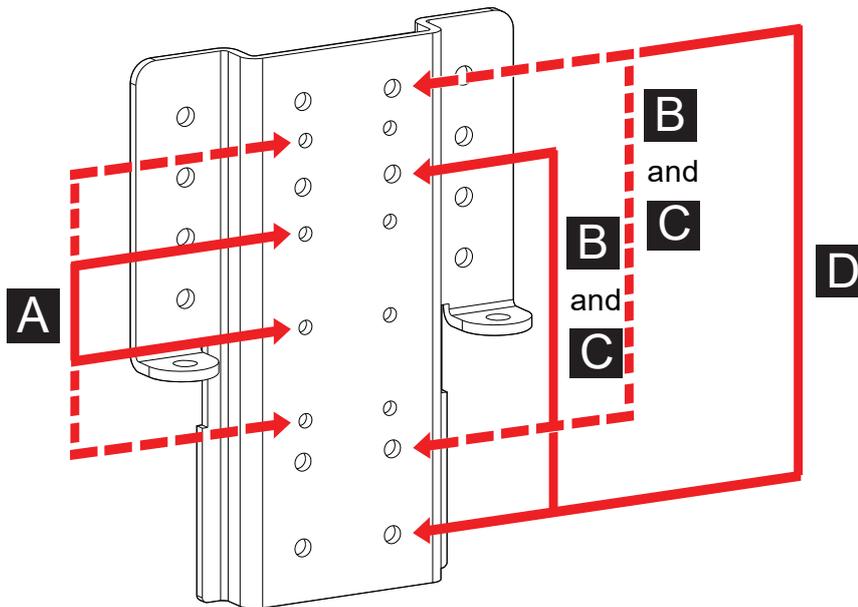

## Replacement Parts

Part Number	Description
-------------	-------------

696-569	Mounting Hardware Kit*
---------	------------------------

\* Kit Includes: two #10-24 Acorn Nuts and two 1/4-20 x 1" Phillips Pan Head Screws

# ergotron®

For the latest User Installation Guide please visit: [www.ergotron.com](http://www.ergotron.com)

For Warranty visit: [www.ergotron.com/warranty](http://www.ergotron.com/warranty)

For Service visit: [www.ergotron.com](http://www.ergotron.com)

For local customer care phone numbers visit: <http://contact.ergotron.com>

[www.ergotron.com](http://www.ergotron.com) | USA: 1-800-888-8458 | Europe: +31 (0)33-45 45 600 | China: 400-120-3051 | Japan: [japansupport@ergotron.com](mailto:japansupport@ergotron.com)

© 2000 Ergotron, Inc. All rights reserved.

While Ergotron, Inc. makes every effort to provide accurate and complete information on the installation and use of its products, it will not be held liable for any editorial errors or omissions (including those made in the process of translation from English to another language), or for incidental, special or consequential damages of any nature resulting from furnishing this instruction and performance of equipment in connection with this instruction. Ergotron, Inc. reserves the right to make changes in the product design and/or product documentation without notification to its users. For the most current product information, or to know if this document is available in languages other than those herein, please contact Ergotron. No part of this publication may be reproduced, stored in a retrieval system, or transmitted in any form or by any means, electronic, mechanical, photocopying, recording or otherwise without the prior written consent of Ergotron, Inc., 1181 Trapp Road, Eagan, Minnesota, 55121, USA Patents Pending and Patented U.S. & Foreign. Ergotron is a registered trademark of Ergotron, Inc.