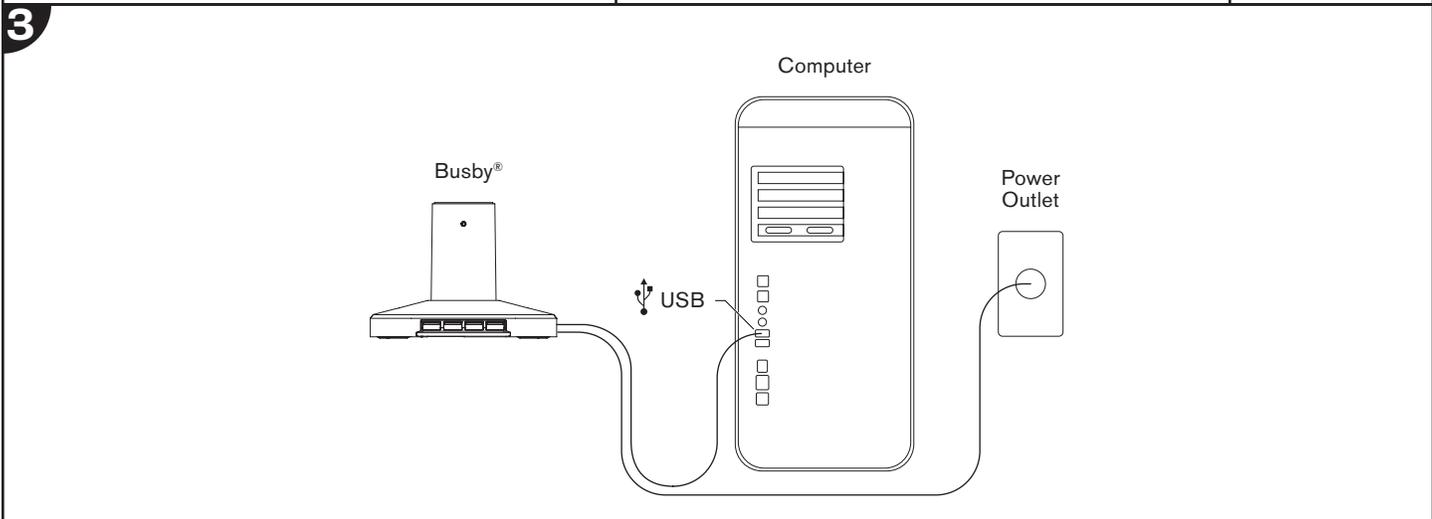
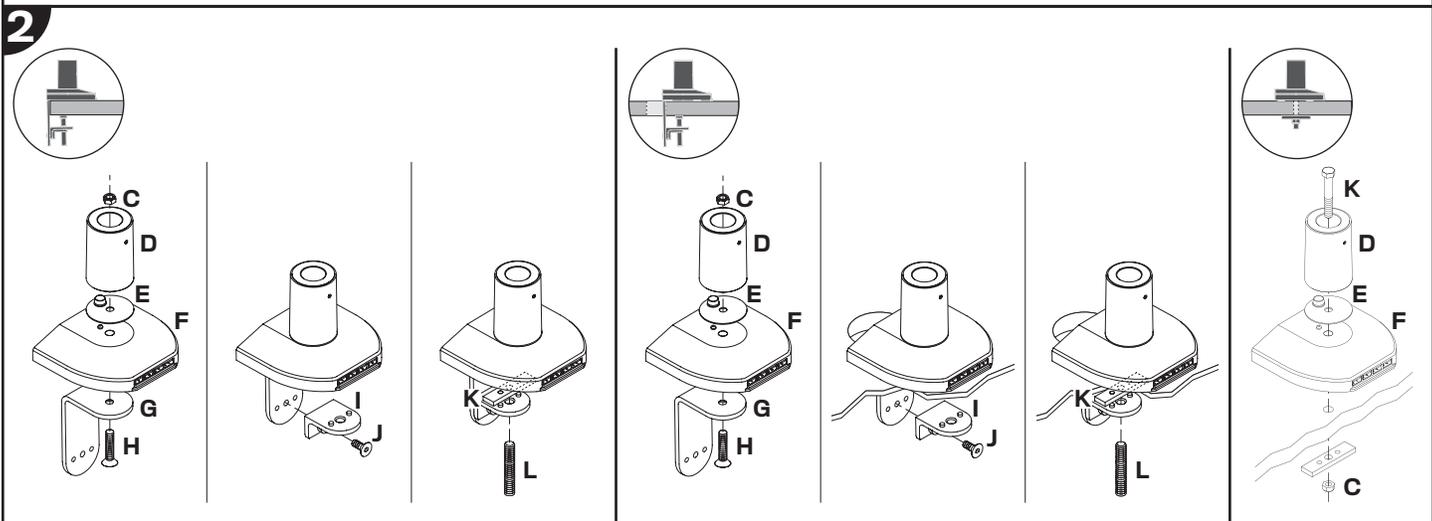
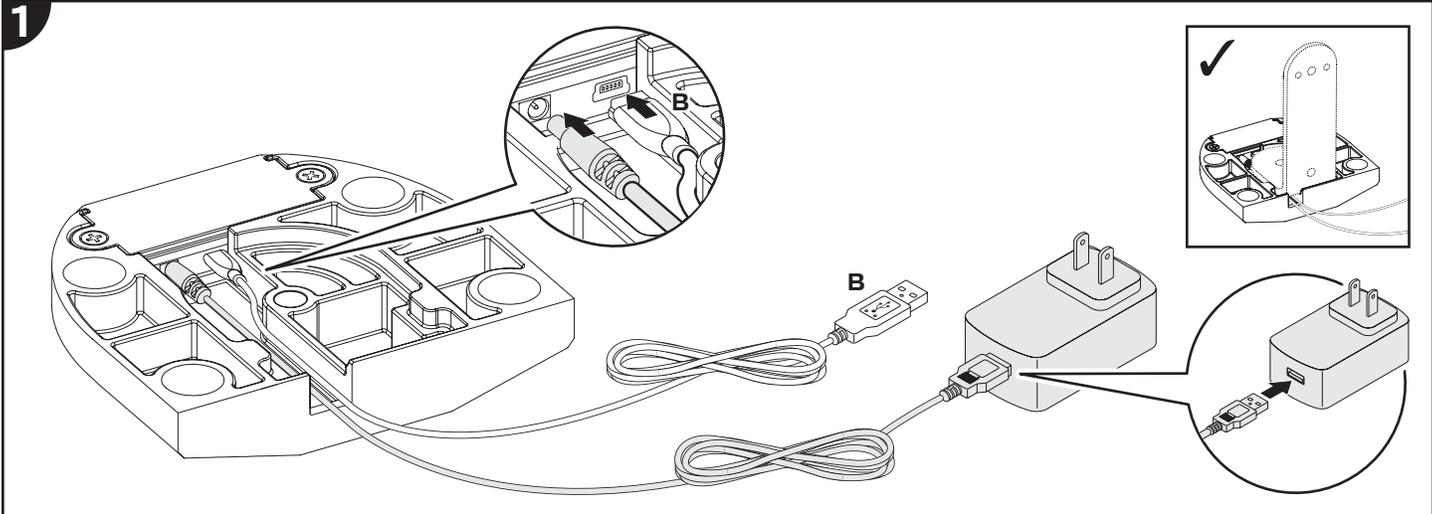
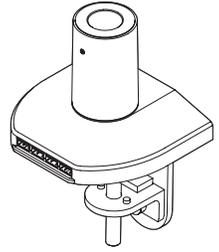


Innovative Ergonomic Solutions companies

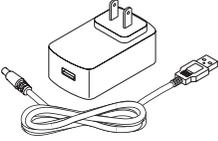
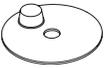
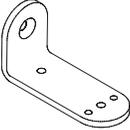
BUSBY® 8451-75

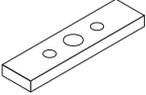
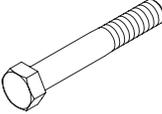
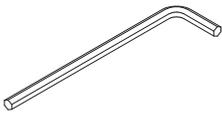
Installation Instructions



BUSBY® 8451-75

Parts List

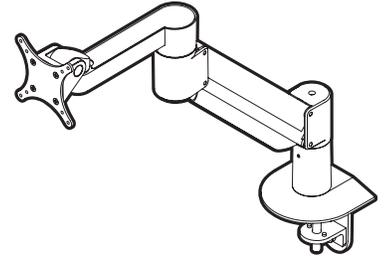
ITEM QUANTITY	DESCRIPTION / PART NO.
A 1	 Power Cord & Adapter 710884
B 1	 USB Data Cable 710600
C 1	 3/8-16 Nylon Stop Nut 701418
D 1	 Mount Column 407602
E 1	 Adapter Bushing 110643
F 1	 Busby® Base Plate 410732
G 1	 Large "L" Bracket 702828
H 1	 3/8-16 x 1-3/4" Flat Socket Cap Screw 710644

ITEM QUANTITY	DESCRIPTION / PART NO.
I 1	 Small "L" Bracket 701116
J 1	 3/8-16 x 7/8" Flat Socket Cap Screw 701799
K 1	 Rectangular Spacer 701544
L 1	 1/2-13 x 3" Socket Set Screw 701126
M 1	 3/8-16 x 2-1/2" Hex Head Bolt 701964
N 1	 7/32" Allen Wrench 701127
O 1	 3/32" Allen Wrench 700146

Innovative Ergonomic Solutions companies

MODEL 7500

Installation Instructions



1

2

3

* Some monitors may require a spacer hardware kit. See page 2 for details.

4

5

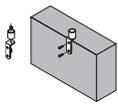
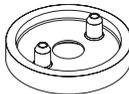
6

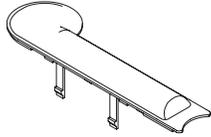
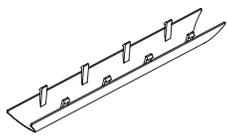
7

8

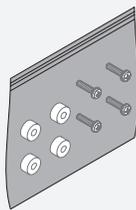
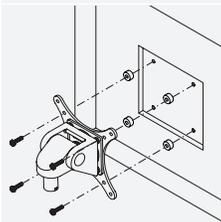
MODEL 7500

Parts List

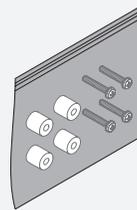
ITEM	DESCRIPTION / PART NO.	QUANTITY
A	 Spring-Assisted Monitor Tilter 407747	1
B	 75/100mm VESA® Adapter Plate 105587	1
C	 10-32 x 3/8" Phillips Flat Head Screw 702281	1 (4-pack)
D	 M4 x 12mm Phillips Pan Head Screw 702096	1 (4-pack)
E	 Dog Washer 105189	1
F	 10-32 x 3/8" FPhMS w/Lock Patch 705198	1

ITEM	DESCRIPTION / PART NO.	QUANTITY
G	 7/32" Allen Wrench 701127	1
H	 3/32" Allen Wrench 700146	1
I	 Forearm Cap 111900	1
J	 Endcap Bumper 702829	1
K	 Cable Cap 109344	1

OPTIONAL SPACER KITS In some cases, the mounting surface on your monitor may be recessed further than permitted by VESA® standards. As a result, a spacer kit may be required.



.25" Spacer Hardware Kit
 (4) .25" Spacers
 (4) M4 x 18mm Phillips Pan Head Screws
 Order # P404923-B



.5" Spacer Hardware Kit
 (4) .5" Spacers
 (4) M4 x 25mm Phillips Pan Head Screws
 Order # P404923-C

How do I counterbalance my arm?

1

IMPORTANT!

- Monitor must be on arm
- Arm must be in mount

Press the arm down to **approximately parallel** with the desk prior to turning the strength adjustment screw.

If the arm **drifts upward**, turn the adjustment screw **clockwise**.

If the arm **drifts downward**, turn the adjustment screw **counter-clockwise**.

Depending on the weight of your monitor, **you may have to make 15-20 turns**.

2

In some instances, further counterbalance adjustments are needed to allow the arm's instant height adjustment function to work properly.

If your arm is not staying in position after performing step 1, follow these steps:

With arm in raised position, tighten set screw **(A)**.

With arm in horizontal position, tighten set screw **(B)**.

Do not over tighten screws.