




---

# LiFeKinnex™ Smart Battery Dock

## Firmware Update

for Devices Already Setup on eKinnex

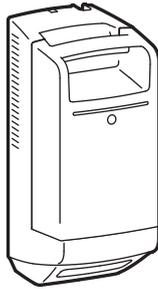

Read all steps before proceeding.

The PC/Network being used for updating the LiFeKinnex Smart Battery Dock firmware will need access to the following endpoint: <https://ergotron.appspot.com>

Ensure the PC being used for this update meets the following:

- a. Has an internet connection.
- b. Stays powered ON during the setup process that may include a firmware update to the LiFeKinnex dock.

NOTE: Make sure the PC being used for this firmware update is NOT powered by the LiFeKinnex dock.


Ensure the Smart Battery Dock being updated meets the following:

- a. Plugged into an AC outlet
- b. Have a battery attached
- c. Powered ON using the power button on the LiFeKinnex display bezel.

**1** Install and open the LiFeKinnex software setup tool.

---

**2** Connect a USB cable to the dock and the other end to the PC running the software setup tool.

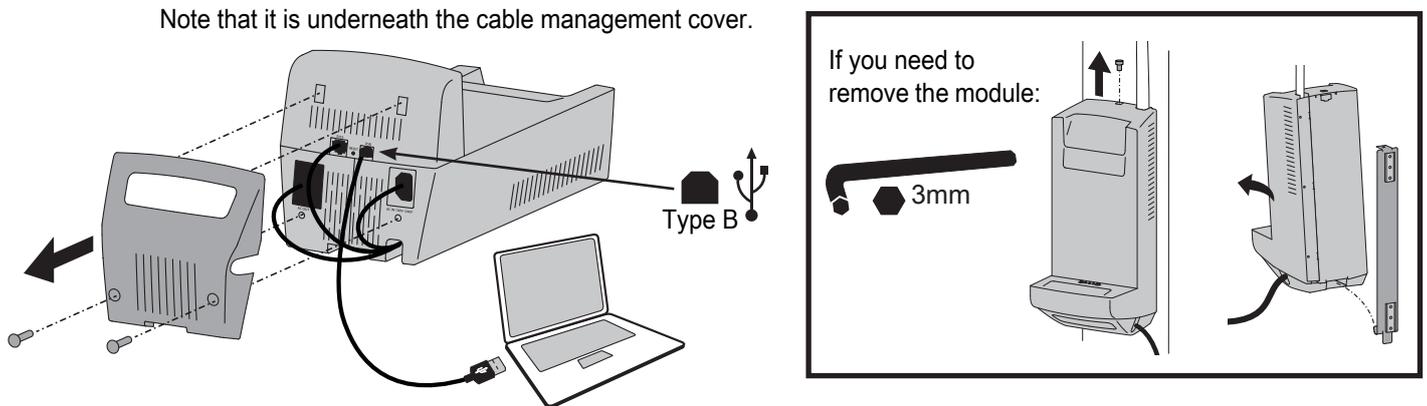

**3** The software setup tool will display a “Processing” dialogue box and use your PC’s internet connection to check for a firmware update.

If prompted that a firmware update is available, click “Yes” to start the firmware update.

When you click “Yes” the LiFeKinnex dock will power off to execute the firmware.

Make sure the PC being used for this firmware update is NOT powered by the LiFeKinnex dock.

---

**4** Once the firmware update is complete, power ON the dock using the power button on the LiFeKinnex display bezel.

It will check again for a firmware update, but this time it will see the charger firmware is up-to-date.

---

**5** Make sure the dock is within range of the network.

a. It may take up to 90 seconds to join the network.

b. Use either the WIFI symbol on the LiFeKinnex display or the “Dashboard” of the software setup tool will show “WiFi ON” to confirm the dock has joined the network.

---

**6** Login to your eKinnex web portal to confirm this dock is reporting current date and time.

---

# ergotron®

For the latest User Installation Guide please visit: [www.ergotron.com](http://www.ergotron.com)

For Warranty visit: [www.ergotron.com/warranty](http://www.ergotron.com/warranty)

For Service visit: [www.ergotron.com](http://www.ergotron.com)

For local customer care phone numbers visit: <http://contact.ergotron.com>

[www.ergotron.com](http://www.ergotron.com) | USA: 1-800-888-8458 | Europe: +31 (0)33-45 45 600 | China: 400-120-3051 | Japan: [japansupport@ergotron.com](mailto:japansupport@ergotron.com)

© 2023 Ergotron, Inc. All rights reserved. LiFeKinnex™ is a registered trademark of Ergotron, Inc.

While Ergotron, Inc. makes every effort to provide accurate and complete information on the installation and use of its products, it will not be held liable for any editorial errors or omissions (including those made in the process of translation from English to another language), or for incidental, special or consequential damages of any nature resulting from furnishing this instruction and performance of equipment in connection with this instruction. Ergotron, Inc. reserves the right to make changes in the product design and/or product documentation without notification to its users. For the most current product information, or to know if this document is available in languages other than those herein, please contact Ergotron. No part of this publication may be reproduced, stored in a retrieval system, or transmitted in any form or by any means, electronic, mechanical, photocopying, recording or otherwise without the prior written consent of Ergotron, Inc., 1181 Trapp Road, Eagan, Minnesota, 55121, USA Patents Pending and Patented U.S. & Foreign. Ergotron is a registered trademark of Ergotron, Inc.