

Savant Elite 2™

PROGRAMMABLE FOOT PEDALS



Looking to reduce hand and arm strain from mouse clicks and awkward or repetitive key combinations?
The Savant Elite2 foot pedal is the ideal solution. Programmed to perform mouse clicks (including double click), the pedals can be quickly and easily customized to perform your desired keyboard actions or macros.

- **PROPRIETARY DRIVERLESS OPERATION**
- **CUSTOMIZABLE ON ANY PLATFORM**



Savant Elite 2™

The Applications Are Endless!

FOR THE OFFICE...

Get more work done and feel better than before. A Savant Elite2 programmable foot pedal can do this for you, providing unequalled productivity and comfort for all professional computer users.

- Programming
- Graphics/Design
- Technical Writing
- Call Center
- Data Entry
- Transcription
- Word Processing
- Accounting

PRODUCTIVITY & COMFORT IN JUST A FEW STEPS!

ACTIVATE MOUSE CLICKS:

All Savant Elite2 foot pedals are pre-programmed to activate right, left, and double left (triple version) mouse clicks. For many users the pain associated with mousing is from the action of clicking, not from moving the mouse. The Savant Elite2 resolves this problem by relocating the clicking action to the user's feet.

PROGRAM ANY KEY ACTION:

Reprogram the foot switch to activate any keyboard action(s). Perfect for offloading work from an overused finger or hand. Some of the more commonly used key actions are Shift, Tab, Enter, Backspace, and Delete.

CREATE MACROS:

Macros are a great productivity tool for generating commonly used phrases, or combinations of key actions and modifiers. Users have complete control of defining playback speed of each macro.

MEDICAL, DENTAL & INDUSTRIAL...

All models are UL recognized for near-patient, non-surgical use in the US and Canada*. Select one, two, or three pedals, or a jack-equipped model supporting an optional hand trigger or extra foot pedal. Programmable waterproof versions also available for dual and triple models.

DENTAL IMAGE CAPTURE:

If space is tight, select a single pedal version with separate control module.

RADIOLOGY, ULTRASOUND & DIAGNOSTICS:

Use the Savant Elite2 in the exam room with any equipment that accepts a USB device. Consider a model with both foot pedal and optional hand trigger for alternate use.

INDUSTRIAL CONTROL:

The programmable Savant Elite2 can streamline many industrial assembly or test procedures. Multiple modules can be connected to a computer, with either foot pedal or hand trigger inputs, and because they are low-speed USB devices, extension cables can be used without sacrificing data integrity.

CUSTOM & OEM CONFIGURATIONS:

If your system supports USB devices, we can provide a solution without requiring large purchase commitments. Contact Kinesis Corporation (sales@kinesis.com) to discuss your needs.

* ETL control number 4007055. Conforms to UL 60601-1
Certified to CSA STD C22.2 NO.601.1

No Driver Needed. Works On Virtually Any Operating System.

Windows, Mac OS X, Android, Linux, or Chrome, the Savant Elite2 can be programmed on your device. Our NEW, proprietary and patent-pending, electronic design requires no special drivers to program.

TWO EASY WAYS TO CUSTOMIZE YOUR FOOT PEDAL


UTILIZING THE SE2 SMARTSET™ APP:

The simplest and easiest way to customize your Savant Elite2 on a Windows or Mac OS is using the SE2 SmartSet App. Providing an interactive foot pedal diagram, click the pedal or jack you wish to program and easily assign any key action, macro, or special action (e.g., double left mouse click).



UTILIZING ANY TEXT EDITING PROGRAM:

Virtually any text editing program may be used to customize your Savant Elite2. Its unique, driverless programmability is based on a virtual removable disk drive and a simple-text file, pedals.txt. Simply edit and re-save pedals.txt to assign any key action, macro, or special action (e.g., double left mouse click).

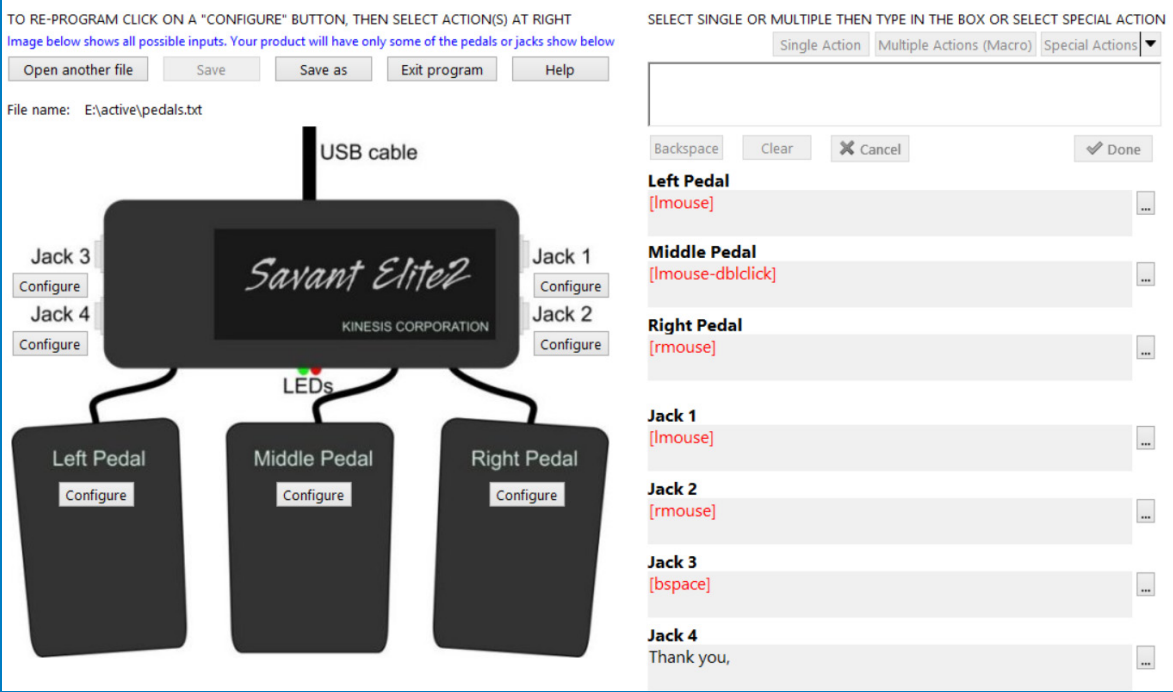

The screenshot displays the SE2 SmartSet application interface. On the left, a diagram of the Savant Elite2 device is shown with a USB cable at the top. Below the device are three pedals labeled 'Left Pedal', 'Middle Pedal', and 'Right Pedal', each with a 'Configure' button. To the left of the device are four jacks labeled 'Jack 3', 'Jack 4', 'Jack 1', and 'Jack 2', each with a 'Configure' button. The device itself has 'LEDs' indicated at the bottom. The application window has a title bar and a menu bar with options: 'Open another file', 'Save', 'Save as', 'Exit program', and 'Help'. Below the menu bar, the file name is 'E:\active\pedals.txt'. On the right side of the interface, there is a configuration panel with the instruction 'SELECT SINGLE OR MULTIPLE THEN TYPE IN THE BOX OR SELECT SPECIAL ACTION'. It features a dropdown menu with 'Single Action', 'Multiple Actions (Macro)', and 'Special Actions'. Below this is a text input field with 'Backspace', 'Clear', 'Cancel', and 'Done' buttons. The configuration panel lists the following items with their assigned actions:

- Left Pedal**: [lmouse]
- Middle Pedal**: [lmouse-dblclick]
- Right Pedal**: [rmouse]
- Jack 1**: [lmouse]
- Jack 2**: [rmouse]
- Jack 3**: [bspace]
- Jack 4**: Thank you,

TECHNICAL DETAILS & ORDER INFORMATION

SAVANT ELITE2 FEATURES

- Factory configured to perform mouse button actions
- Front-hinged, rounded pedals with adjustable activation force for proper ease of use
- Low profile design, combined with heavy steel base to prevent accidental sliding (*on Dual & Triple only)
- Reprogrammable to perform keyboard actions, macros, or mouse button actions, including waterproof models
- External status LEDs and recessed programming switch on underside of unit
- Constructed from black, glass-reinforced nylon

SAVANT ELITE2 SINGLE PEDAL

\$119.⁰⁰ [FP10J]

- Includes 1 Savant Elite2 control module with two mini-phono jacks [FPMJ2]
- Includes 1 single action foot pedal (10' cable) [FS007MP]
- Compatible with hand trigger (8' cable) [FS002HT8]
- Dimensions: 1" H, 2.6" W, 3.5" D



SAVANT ELITE2 CONTROL MODULE

\$99.⁰⁰ [FPMJ2] / \$109.⁰⁰ [FPMJ4]

- Includes 2 mini-phono (3.5mm) jacks [FPMJ2]
- Includes 4 mini-phono (3.5mm) jacks [FPMJ4]
- Compatible with single action foot pedal and hand trigger
- Dimensions: 0.9" H, 5.5" W, 2" D



SAVANT ELITE2 DUAL PEDAL

\$139.⁰⁰ [FP20A] / \$149.⁰⁰ [FP20AJ]

- Includes 2 angled, adjustable pedals [FP20A]
- Optional jack input for single foot switch or hand trigger [FP20AJ]
- Dimensions: 1.2" H, 6.25" W, 6" D



ACCESSORIES

EXTRA FOOT PEDAL

\$25.⁰⁰ [FS007MP]

- For jack-equipped models (10' cable)



HAND TRIGGER

\$34.⁹⁵ [FS002HT8]

- For jack-equipped models (8' cable)



SAVANT ELITE2 TRIPLE PEDAL

\$159.⁰⁰ [FP30A] / \$169.⁰⁰ [FP30AJ]

- Includes 3 angled, adjustable pedals [FP30A]
- Optional jack input for hand trigger [FP30AJ]
- Dimensions: 1.2" H, 10.6" W, 7" D



FOR MORE INFORMATION, CONTACT:

KINESIS CORPORATION

Phone: 800.454.6374 | 425.402.8100

Email: SALES@KINESIS.COM

WWW.KINESIS.COM

22030 20th Ave SE, Ste 102 | Bothell, WA 98021-7404 USA

COMPATIBILITY

- Savant Elite2 can be operated and programmed without any special drivers in most systems supporting USB devices, including: Windows, Mac OS X, Linux, Android, and Chrome.
- Reprogramming requires generic OS support for virtual (removable) disk drive and a text-editing program or app that can save a file as 'plain text' or 'simple text'. Most word processing and text editing programs have this capability.

WARRANTY

- Kinesis products have a 60-day money-back guarantee, less shipping and handling, when purchased directly from Kinesis (excluding waterproof versions which are non-refundable).
- All Kinesis products have a 2-year limited warranty on parts and labor. Please contact Kinesis for more details.