

Zido®-style Drawer



Product	Part#
Zido Drawer	ZDRCG

NOTE: The Zido cart, handle, and extension pole are not included.


For the latest User Installation Guide please visit: www.ergotron.com



www.ergotron.com



USA 1-800-325-3841

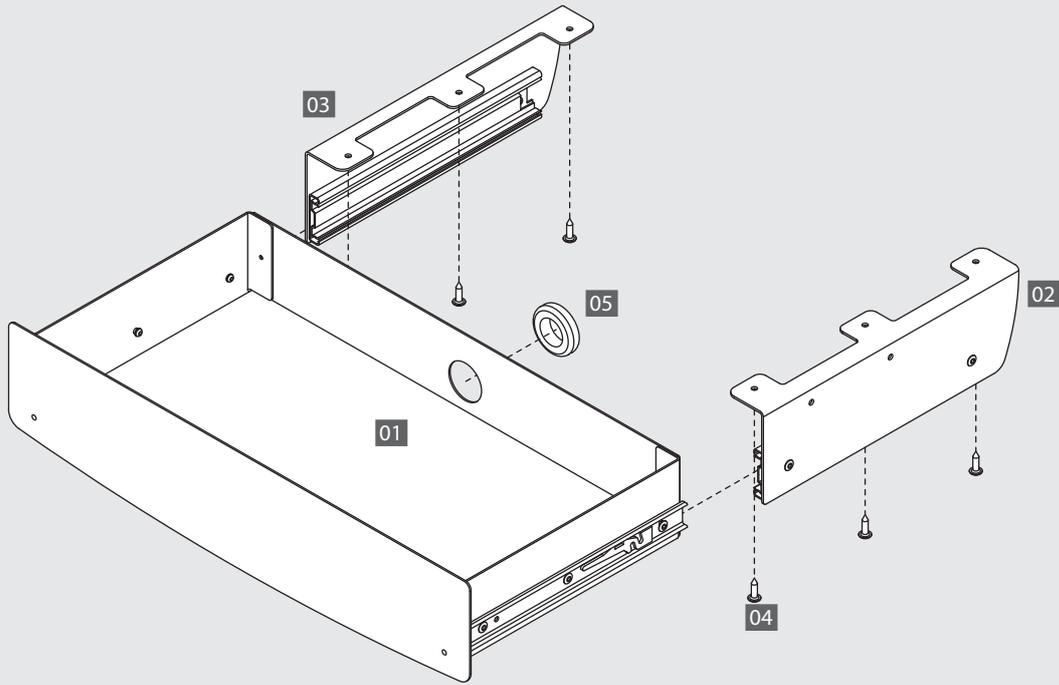

WELCOME

Thank you for purchasing your Anthro Drawer!

If you have any questions or if we can help you in any way, please contact us at 800.325.3841.

NOTE

A 5/32" hex driver (provided with your cart) is required for this assembly.

PARTS LIST


Before beginning this assembly, please review the parts list to verify that your shipment is complete.

Drawer	Quantity	Part Number
01 Drawer Body	1	835-5141-00
02 Outer Bracket X (Right)	1	835-5233-00
03 Outer Bracket Y (Left)	1	835-5153-00
04 3/4" Wood Screws	6	325-5575-00
05 Grommet	1	175-5237-00

STEP 1

Install Drawer Glides


- Carefully turn your cart upside down and set it down on a non-marring surface.
- Align the Drawer Bracket (Right) with the pre-drilled holes on the bottom of the shelf. Make sure that the curved end is facing back and the flat end is facing front. Attach the Bracket to the shelf using 3/4" wood screws.
- Repeat for the Drawer Bracket (Left).

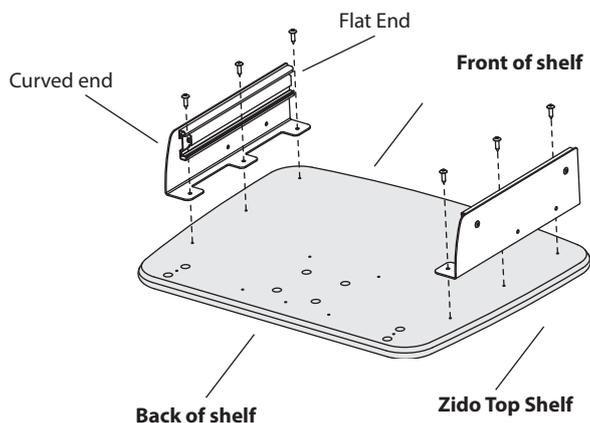

STEP 2

Add the Drawer Assembly

- Slip the cord grommet into the hole at the back of the Drawer Assembly.
- Grasp the Drawer Assembly so that the cord grommet is away from you. Slide the Drawer Assembly onto the Glides.
- Move the Drawer Assembly in and out on the Glides a few times to set the ball bearings.
- To remove the Drawer Assembly, lift the drawer tabs to release the glides and slide out the Drawer Assembly.

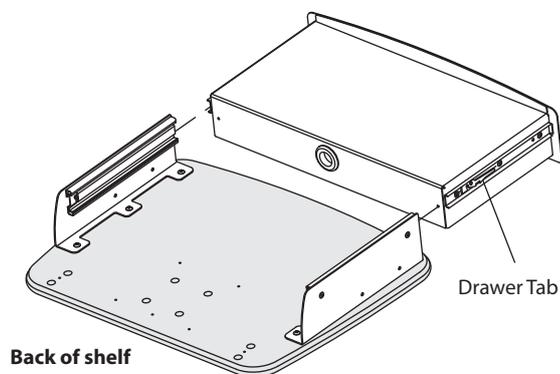

CONGRATULATIONS! YOUR DRAWER ASSEMBLY IS COMPLETE!

For Warranty visit: www.ergotron.com/warranty

For Service visit: www.ergotron.com

For local customer care phone numbers visit: <http://contact.ergotron.com>

Americas Sales and Corporate Headquarters

1181 Trapp Rd.
St. Paul, MN USA
1-800-325-3841
www.ergotron.com
sales@ergotron.com



While Ergotron, Inc. makes every effort to provide accurate and complete information on the installation and use of its products, it will not be held liable for any editorial errors or omissions (including those made in the process of translation from English to another language), or for incidental, special or consequential damages of any nature resulting from furnishing this instruction and performance of equipment in connection with this instruction. Ergotron, Inc. reserves the right to make changes in the product design and/or product documentation without notification to its users. For the most current product information, or to know if this document is available in languages other than those herein, please contact Ergotron. No part of this publication may be reproduced, stored in a retrieval system, or transmitted in any form or by any means, electronic, mechanical, photocopying, recording or otherwise without the prior written consent of Ergotron, Inc., 1181 Trapp Road, Eagan, Minnesota, 55121, USA. Patents Pending and Patented U.S. & Foreign. Ergotron is a registered trademark of Ergotron, Inc.

© 2016 Ergotron, Inc. All rights reserved.

All trademarks are the property of their respective companies. Anthro is a registered trademark and brand of Ergotron Inc. Anthro-DNA is a trademark of Ergotron Inc.

300-5408-00 rev. F • 06/16

3 of 3