## INSTALLATION INSTRUCTIONS

# MSB-6015 FLAT PANEL DISPLAY MOUNTING BRACKET®

Prior to assembly, unpack carton completely and verify contents. If you are missing any of the following components, please contact Customer Service at 1-800/582-6480

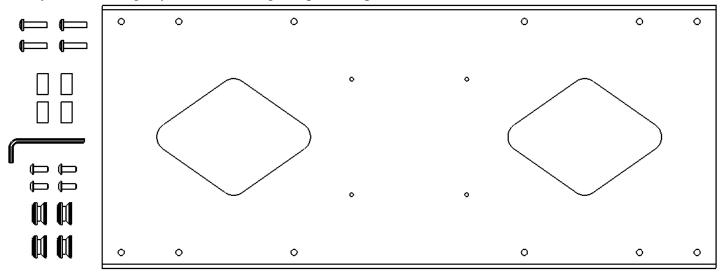


Figure 1

- (1) Interface Bracket
- (4) 10-24 x .5 Button Head Cap Screw
- (4) 18 OD x 8.3 ID x 10 L Metric Nylon Spacer
- (4) Mounting Button Tapped
- (4) M5 x 20 Phillips Head Screws
- (1) 1/8 Allen Key

BEFORE PROCEEDING, READ INSTALLATION INSTRUCTIONS COMPLETELY

### **CAUTION!**

#### DISPLAYS ARE EXTREMELY FRAGILE.


## **WARNING!**

ALL COMPONENTS MUST BE SECURELY FASTENED TO A STRUCTURAL MEMBER CAPABLE OF SUPPORTING 4 TIMES THE COMBINED WEIGHT OF ALL COMPONENTS PLUS THE EQUIPMENT BEING MOUNTED. IF IT CANNOT SUPPORT THIS WEIGHT, THE STRUCTURE MUST BE REINFORCED.

THE MAXIMUM WEIGHT TO BE INSTALLED ON THE MOUNT IS 125 POUNDS (56.74 KG).

# NOTE: If installing screen on a Chief J-series wall mount, proceed to Step 2 (J-Series VESA Interface Installation).

1. Using a 10-24 button head cap screw inserted from back side of bracket, secure mounting button, with chamfered hole of mounting button (larger surface) facing bracket, to top and bottom brackets (four places) (see Figure 2 & Figure 3).

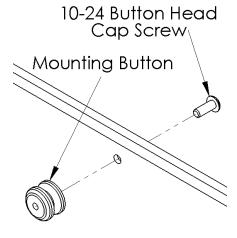

Using These Holes

Attach Mounting Buttons

Figure 2

Figure 3

- 2. Place Nylon spacers over mounting holes on back of screen. Attach mounting brackets to display using the M5 screws (see Figure 4 & Figure 5). Use the inner set of holes for 32" and 37" screens and the outer set of holes for 42" and 47" screens.
- 3. With the aid of another person, lift your display up to the Chief Mount, aligning buttons of mounting brackets with slots in the Chief Mount. Lower safety latch on the Chief Mount to secure your display, making sure latch is completely engaged. **If using a Chief J-series wall mount**, use the M4 screws provided with the wall mount to attach the wall mount to the interface plate.

