


SCAMP-1

Mobile Tilting Keyboard Stand

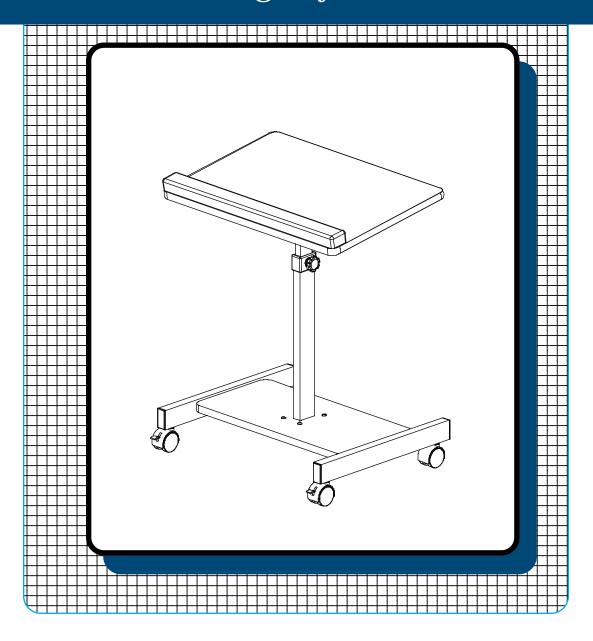

Assembly Instructions


Scamp-1

Mobile Tilting Keyboard Stand

Part	Drawing l	Description	Qty	Pa	rt	Drawin	g Description	Qty
P-1		Lower Receiver	1 EA	A		9	Hardware List Flat Head Screw	6 EA
				A1	(9	1¼" Long Flat Head Screw	2 EA
P-2		Foot Assembly	1 EA	A2	<u>•</u> (9	1½" Long Flat Head Screw	8 EA
				В			Lock Nut	1 EA
P-3		Bottom Shelf	1 EA	С		9	Interior Threaded Post	4 EA
				D	(O	2" Locking Caster (for Front)	2 EA
P-4		Upper Insert	1 EA	E	(2" Caster (for Back)	2 EA
				F			Allen Wrench	1 EA
P-5		Top Platform	1 EA	G	(Caster Wrench	1 EA
				K1			Large Knob	1 EA
P-6		Wrist Rest Pad	1 EA	K2	2		Small Knob	1 EA
				М			Plastic Cap	1 EA
P-7		Tilting Bracket	1 EA	N			Plastic Sleeve	1 EA


To Assemble:

- 1. Identify and Separate all the Parts and Hardware.
- 2. Place the Top Platform (P-5) with the insert nuts facing up. Attach Upper Insert (P-4) using 4 Flat Head screws (A) as shown in illustration # 1.
- 3. Attach Tilting Bracket (P-7) to the Upper Insert (P-4) using 1 Flat Head screw (A) and 1 Lock Nut (B). Insert Large Knob (K1) through the Tilting bracket to the Threaded hole on the tube.
- 4. Attach Wrist Rest Pad (P-6) to the Top Platform (P-5) using 2- 11/4" Long Flat Head screws (A1).

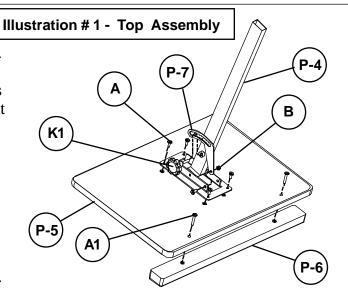


SCAMP-1 Assembly Diagram



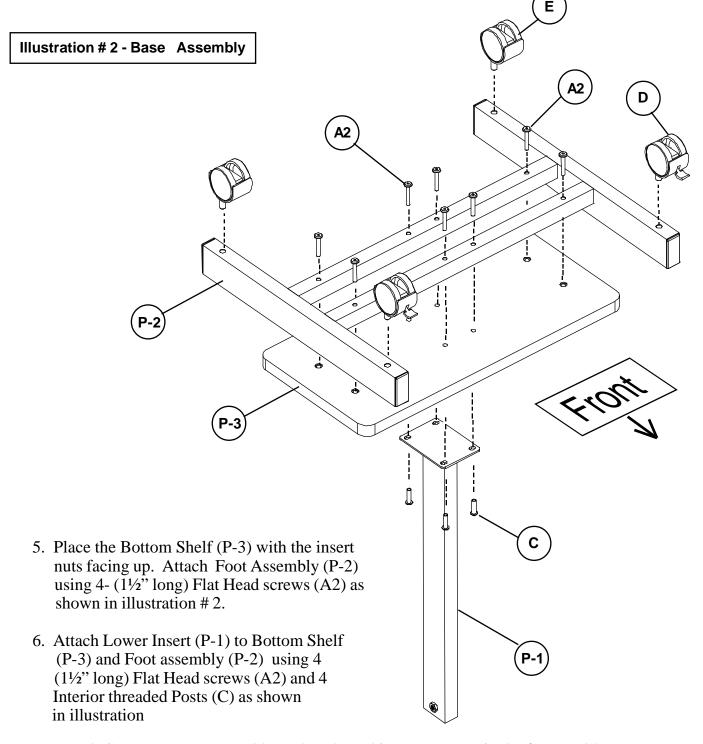

7. Attach Casters to Foot assembly (P-2) [2 Locking casters (D) in the front and 2 Casters (E) in the back.] Note the location of the small hole on the Lower Receiver (P-1) which determines front and back of the unit as shown in illustration #2. Tighten the Casters using Caster Wrench (G).

- 8. Please refer to the details on next page for assembling Plastic Cap (M), and Plastic Sleeve (N).
- 9. Slide the Top Assembly into the Base Assembly and Secure at desired height using Small Knob (K2).

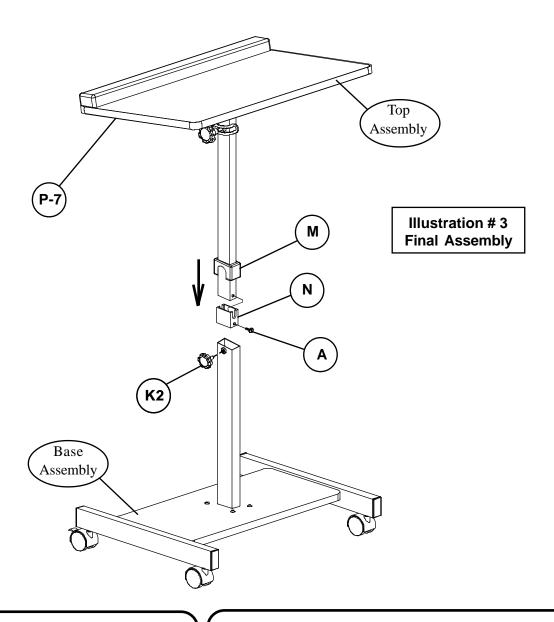

Do not use unless all screws are tight.

At least every six months, check all screws to be sure they are tight.

If parts are missing, broken, damaged, or worn, stop use of the product until repairs are made by your dealer using factory authorized parts.


Should you require assistance during assembly, please call our Customer Service Department Monday - Friday 8 a.m. - 5 p.m.
Central Standard Time


Toll-Free Customer Service


1-800-749-2258


DETAILS OF ASSEMBLING PLASTIC CAP 'M' & SLEEVE 'N'

- 1. Slide Plastic Cap (M) [with Cutout on the same side as the tilting bracket on the Upper insert], then attach the Plastic sleeve (N) over the end of insert. Make sure that the hole on the Part N and the hole on the Upper insert tube line up, then attach it with a Flat Head screw (A).
- 2. Insert Upper insert into the Lower Receiver tube, and slide Part M down, so that it should be resting on top of the Lower Receiver Tube. Adjust to the desired height and secure with the Small Knob (G2) as shown in Illustration below.

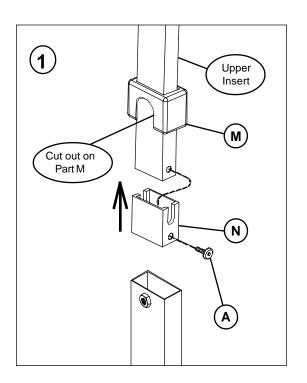

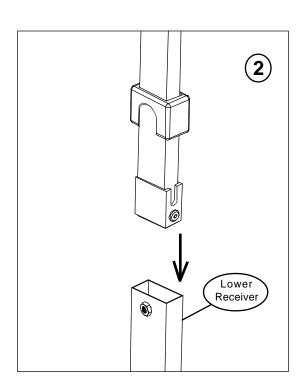


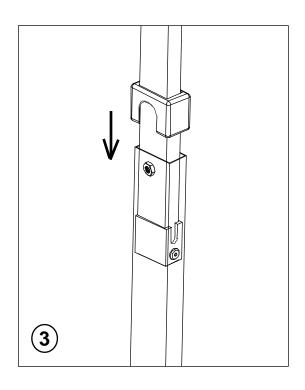

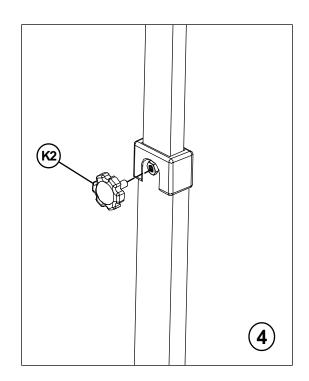


SCAMP-1

Mobile Tilting Keyboard Stand

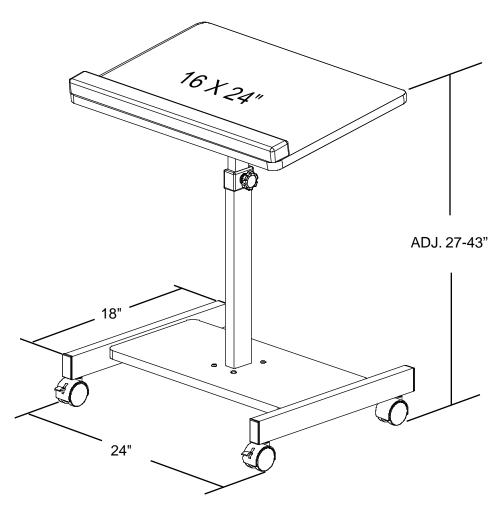



Shipping Information 1.4 Cubic Feet 25 lbs.

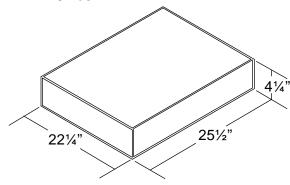

- This is an ergonomic, fully adjustable speaker stand that adjusts to the right height every time.
- Height adjustable from 27" to 43".
- Top Platform can be tilted to a positive 30 degrees and a negative 25 degrees and locked at any convienient angle. Padded wrist rest for comfort.
- Includes 2" Casters for mobility.
 Available in Black laminate with Black frame.
- Ships UPS.